
GARDNER DENVER®

13-8-610
6th Edition
March, 1997

**ELECTRA-SCREW® STATIONARY
BASE-MOUNTED
COMPRESSORS**

DOMESTIC MODELS

EDEQHH – 40 HP

EDEQJH – 50 HP

INTERNATIONAL MODELS

EDEQHJ – 40 HP (30 KW)

EDEQJJ – 50 HP (37 KW)

**OPERATING AND
SERVICE MANUAL**

**Gardner
Denver**

MAINTAIN COMPRESSOR RELIABILITY AND PERFORMANCE WITH GENUINE GARDNER DENVER® COMPRESSOR PARTS AND SUPPORT SERVICES

Gardner Denver® Compressor genuine parts, engineered to original tolerances, are designed for optimum dependability — specifically for Gardner Denver compressor systems. Design and material innovations are the result of years of experience with hundreds of different compressor applications. Reliability in materials and quality assurance are incorporated in our genuine replacement parts.

Your authorized Gardner Denver® Compressor distributor offers all the backup you'll need. A worldwide network of authorized distributors provides the finest product support in the air compressor industry. Your local authorized distributor maintains a large inventory of genuine parts and he is backed up for emergency parts by direct access to the Gardner Denver Machinery Inc. Master Distribution Center (MDC) in Memphis, Tennessee.

Your authorized distributor can support your Gardner

Denver® air compressor with these services:

1. Trained parts specialists to assist you in selecting the correct replacement parts.
2. Factory warranted new and remanufactured rotary screw air ends. Most popular model remanufactured air ends are maintained in stock at MDC for purchase on an exchange basis with liberal core credit available for the replacement unit.
3. A full line of factory tested AEON™ compressor lubricants specifically formulated for use in Gardner Denver compressors.
4. Repair and maintenance kits designed with the necessary parts to simplify servicing your compressor.

Authorized distributor service technicians are factory-trained and skilled in compressor maintenance and repair. They are ready to respond and assist you by providing fast, expert maintenance and repair services.

For the location of your local authorized Gardner Denver Air Compressor distributor refer to the yellow pages of your phone directory or contact:

Distribution Center:
Gardner Denver Machinery Inc.
Master Distribution Center
5585 East Shelby Drive
Memphis, TN 38141
Phone: (901) 542-6100
(800) 245-4946
Fax: (901) 542-6159

Factory:
Gardner Denver Machinery Inc.
1800 Gardner Expressway
Quincy, IL 62301
Phone: (217) 222-5400
Fax: (217) 224-7814

REMANUFACTURED AIR ENDS

Whenever an air end requires replacement or repair, Gardner Denver offers an industry unique, factory remanufactured air end exchange program. From its modern Remanufacturing Center in Indianapolis, IN, Gardner Denver is committed to supplying you with the highest quality, factory remanufactured air ends that are guaranteed to save you time, aggravation and money.

Immediately Available

Repair downtime costs you money, which is why there are over 200 remanufactured units in inventory at all times, ready for immediate delivery.

Skilled Craftsmen

Our Remanufacturing assembly technicians average over 20 years experience with air compression products.

Precision Remanufacturing

All potentially usable parts are thoroughly cleaned, inspected and analyzed. Only those parts that can be brought back to original factory specifications are remanufactured. Every remanufactured air end receives

a new overhaul kit: bearings, gears, seals, sleeves and gaskets.

Extensive Testing

Gardner Denver performs testing that repair houses just don't do. Magnaflux and ultrasonic inspection spot cracked or stressed castings, monochromatic light analysis exposes oil leaks, and coordinate measurement machine inspects to +/- .0001", insuring that all remanufactured air ends meet factory performance specifications.

Warranty

Gardner Denver backs up every remanufactured air end with a new warranty . . . 18 months from purchase, 12 months from service.

Gardner Denver remanufactured air ends deliver *quality without question . . . year in and year out.*

Call Gardner Denver for information on the air end exchange program and the name of your authorized distributor.

Phone Number: 800-245-4946 or
FAX: 901-542-6159

FOREWORD

Gardner Denver® Electra-Screw® compressors are the result of advanced engineering and skilled manufacturing. To be assured of receiving maximum service from this machine the owner must exercise care in its operation and maintenance. This book is written to give the operator and maintenance department essential information for day-to-day operation, maintenance and adjustment. Careful adherence to these instructions will result in economical operation and minimum downtime.

DANGER

Danger is used to indicate the presence of a hazard which will cause severe personal injury, death, or substantial property damage if the warning is ignored.

WARNING

Warning is used to indicate the presence of a hazard which can cause severe personal injury, death, or substantial property damage if the warning is ignored.

CAUTION

Caution is used to indicate the presence of a hazard which will or can cause minor personal injury or property damage if the warning is ignored.

NOTICE

Notice is used to notify people of installation, operation or maintenance information which is important but not hazard-related.

This book covers the following models:

HP (KW)	PSIG (Bar)	Air Cooled	Domestic	International
40 (30)	100, 125, 150, 175 (6.9), (8.6), (10.3), (12.1)	EDEQHH (EDEQHJ)	13-8-510	13-8-510X
50 (37)	100, 125, 150, 175 (6.9), (8.6), (10.3), (12.1)	EDEQJH (EDEQJJ)	13-8-510	13-8-510X

TABLE OF CONTENTS

Maintain Compressor Reliability and Performance With Genuine Gardner Denver® Compressor Parts and Support Services	i
Remanufactured Air Ends	i
Foreword	ii
Index	iv – vi
List of Illustrations	vii
Section 1, General Information	1
Section 2, Installation	9
Section 3, Starting & Operating Procedures	14
Section 4, Controls & Instrumentation	16
Section 5, Lubrication, Oil Cooler, Oil Filter & Separator	27
Section 6, Air Filter	34
Section 7, Belt Drive	36
Section 8, Maintenance Schedule	37
Section 9, Trouble Shooting	38

INSTRUCTIONS FOR ORDERING REPAIR PARTS

When ordering parts, specify Compressor MODEL, Method of Cooling, HORSEPOWER and SERIAL NUMBER (see nameplate on unit). The Serial Number is also stamped on top of the cylinder flange to the right of the inlet housing.

All orders for Parts should be placed with the nearest authorized distributor.

Where NOT specified, quantity of parts required per compressor or unit is one (1); where more than one is

required per unit, quantity is indicated in parenthesis. SPECIFY EXACTLY THE NUMBER OF PARTS REQUIRED.

DO NOT ORDER BY SETS OR GROUPS.

To determine the Right Hand and Left Hand side of a compressor, stand at the motor end and look toward the compressor. Right Hand and Left Hand are indicated in parenthesis following the part name, i.e. (RH) & (LH).

INDEX

Addition of Oil Between Changes	28	Control Piping	12
Air Control Components	18	Control System Operation	18
Blowdown Valve	18	AUTO LAG Button with LED	19
Inlet Valve	18	AUTO LEAD Button with LED	19
Minimum Pressure/Check Valve	18	Change Air Filter LED	19
Air Cooled Unit	9	Change Separator LED	19
Air Ends, Remanufactured	i	CONSTANT RUN Button with LED	19
AIR FILTER, SECTION 6	35	High Air Temperature LED	19
Air Filter, Standard Duty	36	Motor Overload LED	19
Air Filter Element	35	Pressure and Temperature Digital Readouts	20
Air Filter Element Life	35, 36	STOP/RESET Button with LED	18
Air Flow in Compressor System	1	Controller, Auto-Sentry S with Keypad	18
Air Receiver, Auxiliary	11	CONTROLS & INSTRUMENTS, SECTION 4	16
AUTO LAG Button with LED	19	Controls & Instruments, General	16
AUTO LEAD Button with LED	19	Cooler, Compressor Oil	32
Auto-Sentry S Controller with Keypad	18	Cooling, Sealing and Lubrication	1
Auxiliary Air Receiver	11		
		Daily Check	15
BELT DRIVE, SECTION 7	37	Decals	7, 8
Belt Tension, Checking	37	Definitions of Error Messages	20
Blowdown Valve	17, 18	Devices, Motor Protection	16
		Discharge Service Line	12
Change Air Filter LED	19	Discharge Temperature, High	16
Change Procedure, Lubricant	28	Drain, Oil Reservoir	10
Change Separator LED	19	Draining and Cleaning Oil System	30
Check, Daily	15		
Checking Belt Tension	37	Electrical Wiring	12
Cleaning and Draining Oil System	30	Electric Motor Grease Recommendations	13
Cold Ambient Operation	28	Electric Motor Regreasing Interval	13
Cold Weather Operation	10	Element, Air Filter	35
Cold Weather Operation, Installation for	10	Element Life, Air Filter	35, 36
Compression Principle	1	Emergency Stop Pushbutton	18
Compressor	1	Enclosure	10
Compressor Oil Cooler	32		
Compressor Oil Filter	31	Filter, Compressor Oil	31
Compressor Oil Separator	32	Foundation	10
Compressor Oil System	27		
Compressor Oil System Check	33	Gauge, Oil Level	18, 30
Compressor System, Air Flow	1	GENERAL INFORMATION, SECTION 1	1
CONSTANT RUN Button with LED	19		

INDEX

<p>Grease Recommendations, Electric Motor 13</p> <p>Grounding 12</p> <p>High Air Temperature LED 19</p> <p>High Discharge Temperature 16</p> <p>High Temperature Operation 28</p> <p>Hourmeter 18</p> <p>Inlet Line 12</p> <p>Inlet Line Lengths 11</p> <p>Inlet Tube 36</p> <p>Inlet Valve 18</p> <p>INSTALLATION, SECTION 2 9</p> <p>Installation, General 9</p> <p>Installation for Cold Weather Operation 10</p> <p>Instructions for Ordering Repair Parts iii</p> <p>Instruments 18</p> <p>Lead–Lag Operation of Two Compressors 22</p> <p>Lifting Unit 9</p> <p>Line, Discharge Service 12</p> <p>Line, Inlet 12</p> <p>Load–Unload Pressure Setpoints, Programming . 20</p> <p>Location 9</p> <p>Lubricant, Recommended 27</p> <p>Lubricant Change Procedure 28</p> <p>Lubrication, Motor 12</p> <p>Lubrication, Cooling and Sealing 1</p> <p>LUBRICATION, OIL COOLER, OIL FILTER & SEPARATOR, SECTION 5 27</p> <p>MAINTENANCE SCHEDULE, SECTION 8 38</p> <p>Minimum Pressure/Check Valve 18</p> <p>Moisture in the Oil System 30</p> <p>Moisture Separator/Trap 11</p> <p>Motor Grease Recommendations 13</p> <p>Motor Lubrication 12</p> <p>Motor Overload LED 19</p> <p>Motor Protection Devices 16</p> <p>Motor Regreasing Interval 13</p>	<p>Oil Change Interval 30</p> <p>Oil Cooler, Compressor 32</p> <p>Oil Filter, Compressor 31</p> <p>Oil Level Gauge 18, 30</p> <p>Oil Reservoir 32</p> <p>Oil Reservoir Drain 10</p> <p>Oil Separator, Compressor 32</p> <p style="padding-left: 20px;">Inspection 33</p> <p style="padding-left: 20px;">Removal for Inspection or Replacement 33</p> <p>Oil Specifications 27</p> <p>Oil System, Compressor 27</p> <p>Oil System, Draining and Cleaning 30</p> <p>Oil System Check 33</p> <p style="padding-left: 20px;">Air and Oil Discharge Temperature 33</p> <p style="padding-left: 20px;">Compressor Oil Inlet Temperature 33</p> <p style="padding-left: 20px;">Oil Cooler Oil Pressure Differential 34</p> <p style="padding-left: 20px;">Oil Cooler Temperature Differential 34</p> <p style="padding-left: 20px;">Oil Inlet Pressure 34</p> <p>Operation</p> <p style="padding-left: 20px;">Cold Ambient 28</p> <p style="padding-left: 20px;">Control System 18</p> <p style="padding-left: 20px;">High Temperature 28</p> <p style="padding-left: 20px;">Lead–Lag, of Two Compressors 22</p> <p>Piping, Control 12</p> <p>Pressure and Temperature Digital Readouts 20</p> <p>Pressure Differential Gauging 33</p> <p>Prestart–Up Instructions 14</p> <p style="padding-left: 20px;">Air Filter 14</p> <p style="padding-left: 20px;">Electrical 14</p> <p style="padding-left: 20px;">Enclosure 15</p> <p style="padding-left: 20px;">Grounding 14</p> <p style="padding-left: 20px;">Operating Mode 15</p> <p style="padding-left: 20px;">Piping 14</p> <p style="padding-left: 20px;">Rotation 14</p> <p style="padding-left: 20px;">System Pressure 15</p>
---	--

INDEX

<p>Programming Load–Unload Pressure Setpoints . . . 20</p> <p>Protective Devices</p> <p style="padding-left: 20px;">Blowdown Valve 17</p> <p style="padding-left: 20px;">High Discharge Temperature 16</p> <p style="padding-left: 20px;">Motor Protection Devices 16</p> <p style="padding-left: 20px;">Relief Valve 17</p> <p style="padding-left: 20px;">Separator Differential Pressure 16</p> <p>Recommended Lubricant 27</p> <p>Regreasing Interval, Electric Motor 13</p> <p>Relief Valve 17</p> <p>Remanufactured Air Ends i</p> <p>Repair Parts, Instructions for Ordering iii</p> <p>Reservoir, Oil 32</p> <p>Safety Precautions 5, 6</p> <p>Sealing, Lubrication and Cleaning 1</p> <p>Separator, Compressor Oil 32</p> <p>Separator Differential Pressure 16</p> <p>Separator/Trap, Moisture 11</p> <p>SERVICE CHECK LIST, AIR FILTER 38</p> <p>Service Check List 38</p> <p style="padding-left: 20px;">Every 1000 Hours Operation 38</p> <p style="padding-left: 20px;">Every 125 Hours Operation 38</p> <p style="padding-left: 20px;">Every 6000 Hours Operation 38</p> <p style="padding-left: 20px;">Every 8 Hours Operation 38</p> <p style="padding-left: 20px;">Every Year 38</p>	<p>Motor Lubrication 38</p> <p>Oil Separator 38</p> <p>Specifications, Oil 27</p> <p>Starter/Control Box 18</p> <p style="padding-left: 20px;">Auto–Sentry S Controller with Keypad 18</p> <p style="padding-left: 20px;">Emergency Stop Pushbutton 18</p> <p style="padding-left: 20px;">Hourmeter 18</p> <p>STARTING & OPERATING PROCEDURES, SECTION 3 14</p> <p>Starting the Unit 15</p> <p style="padding-left: 20px;">Unit Cold 15</p> <p style="padding-left: 20px;">Unit Hot 15</p> <p>STOP/RESET Button with LED 18</p> <p>Stopping the Unit 15</p> <p>Temperature, High Discharge 16</p> <p>Thermal Control (Thermostatic Mixing) Valve 32</p> <p>TROUBLE SHOOTING, SECTION 9 39</p> <p>Valve</p> <p style="padding-left: 20px;">Blowdown 17, 18</p> <p style="padding-left: 20px;">Control 18</p> <p style="padding-left: 20px;">Minimum Pressure/Check 18</p> <p style="padding-left: 20px;">Relief 17</p> <p style="padding-left: 20px;">Thermal Control (Thermostatic Mixing) 32</p> <p>Warranty Last Page</p> <p>Wiring, Electrical 12</p>
--	--

LIST OF ILLUSTRATIONS

Figure 1–1	Compressor Cycle	1
Figure 1–2	Minimum Pressure/Check Valve, Separators & Oil Filter – Package	2
Figure 1–3	Oil Level Gauge, Separator & Air Filter – Package	3
Figure 1–4	Controller & Starter Box – Package	4
Figure 2–1	Typical Compressor Room	9
Figure 2–2	Air Flow Chart	10
Figure 2–3	Cold Weather Installation	11
Figure 2–4	Inlet Line Lengths	11
Figure 4–1	Control Schematic	16
Figure 4–2	Inlet Valve	17
Figure 4–3	Minimum Pressure/Check Valve	18
Figure 4–4	Definition of Error Messages	20
Figure 4–5	Pressure Chart	22
Figure 4–6	Subtractive Pilot (Closed)	23
Figure 4–7	Subtractive Pilot (Opened)	23
Figure 4–8	Maximum Setpoints for Auto–Sentry S Controller, PSIG	24
Figure 4–9	Auto–Sentry S Solid State Control Touch Pad	24
Figure 4–10	Wiring Diagram – Dual Control	25
Figure 4–11	Wiring Diagram – Wye Delta	26
Figure 5–1	Flow Diagram – Air–Oil System	27
Figure 5–2	Approximate Oil System Capacities	28
Figure 5–3	Oil Change Interval	29
Figure 5–4	Oil Level Gauge	30
Figure 5–5	Thermostatic Mixing Valve	32
Figure 5–6	Oil Separator	32
Figure 6–1	Heavy Duty Air Filter	35
Figure 6–2	Standard Duty Air Filter, Domestic Only	36
Figure 7–1	Belt Tension 3VX Belts	37

SECTION 1 GENERAL INFORMATION

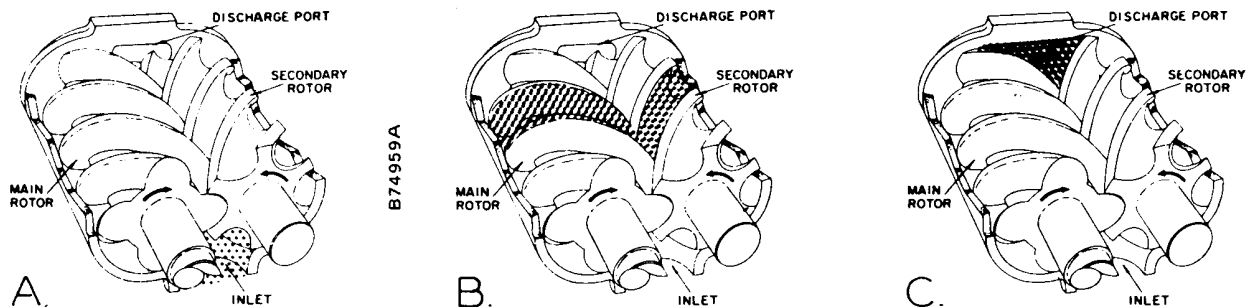


FIGURE 1-1 – COMPRESSOR CYCLE

COMPRESSOR – The Gardner Denver® compressor is a single stage, positive displacement rotary machine using meshing helical rotors to effect compression. Both rotors are supported between high capacity roller bearings located outside the compression chamber. Single width cylindrical roller bearings are used at the inlet end of the rotors to carry part of the radial loads. Tapered roller bearings at the discharge end locate each rotor axially and carry all thrust loads and the remainder of the radial loads.


COMPRESSION PRINCIPLE (FIGURE 1-1) – Compression is accomplished by the main and secondary rotors synchronously meshing in a one-piece cylinder. The main rotor has four (4) helical lobes 90° apart. The secondary rotor has six (6) matching helical grooves 60° apart to allow meshing with main rotor lobes.

The air inlet port is located on top of the compressor cylinder near the drive shaft end. The discharge port is near the bottom at the opposite end of the compressor cylinder. *FIGURE 1-1 is an inverted view to show inlet and discharge ports.* The compression cycle begins as the rotors unmesh at the inlet port and air is drawn into the cavity between the main rotor lobes and the secondary rotor grooves (A). When the rotors pass the inlet port cutoff, air is trapped in the interlobe cavity and flows axially with the meshing rotors (B). As meshing continues, more of the main rotor lobe enters the secondary rotor groove, normal volume is reduced and pressure increases.

Oil is injected into the cylinder to remove the heat of compression and seal internal clearances. Volume reduction and pressure increase continues until the air/oil mixture trapped in the interlobe cavity by the rotors passes the discharge port and is released to the oil reservoir (C). Each rotor cavity follows the same “fill-compress-discharge” cycle in rapid succession to produce a discharge air flow that is continuous, smooth and shock free.

AIR FLOW IN THE COMPRESSOR SYSTEM (FIGURE 5-1, page 27) – Air enters the air filter and passes through the inlet unloader valve and on into the compression chamber where oil is injected into the air. After compression, the air/oil mixture passes into the oil reservoir where most of the entrained oil is removed by velocity change and impingement and drops back into the reservoir. The air and remaining oil then passes through the air/oil separator. The air then passes through the minimum pressure/check valve, the after-cooler and the moisture separator and into the plant air lines.

LUBRICATION, COOLING AND SEALING – Oil is forced by air pressure from the oil reservoir through the oil cooler, thermostatic mixing valve, and oil filter and discharge into the compressor main oil gallery. A portion of the oil is directed through internal passages to the bearings and shaft oil seal. The balance of the oil is injected directly into the compression chamber to remove heat of compression, seal internal clearances and lubricate the rotors.

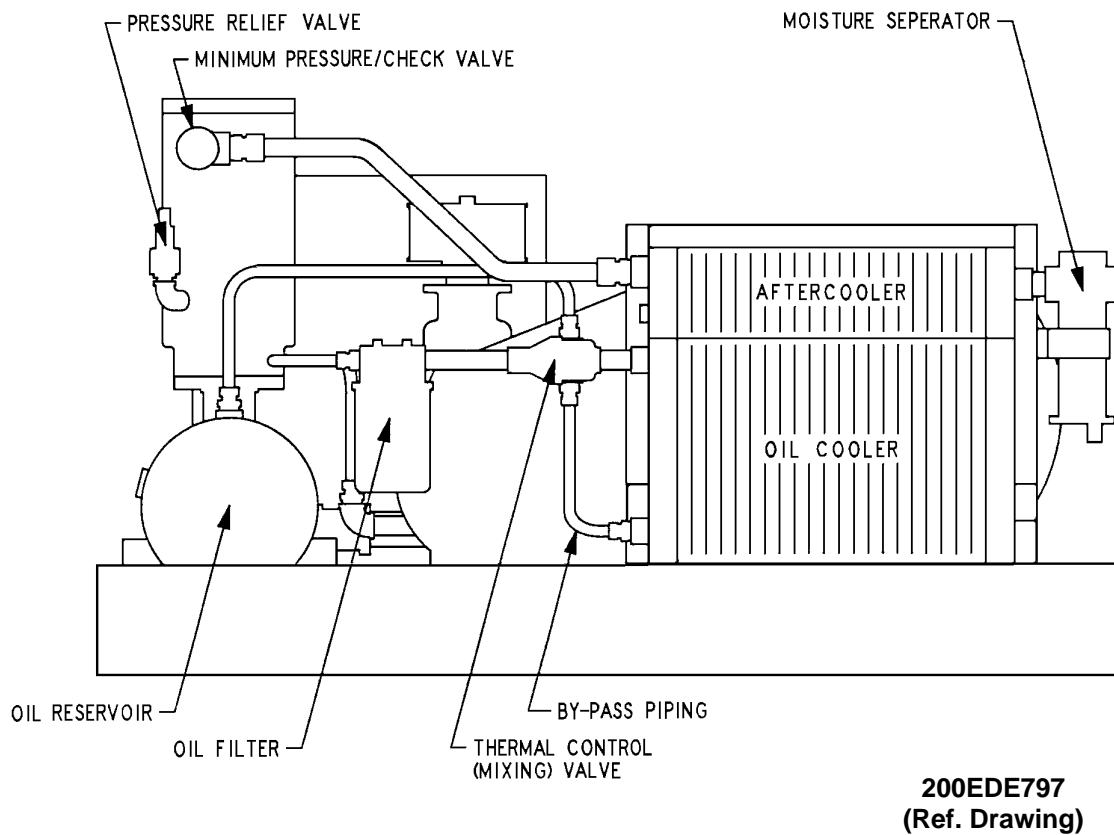

200EDE797
(Ref. Drawing)

FIGURE 1-2 – PACKAGE – MINIMUM PRESSURE/CHECK VALVE, MIXING VALVE & OIL FILTER


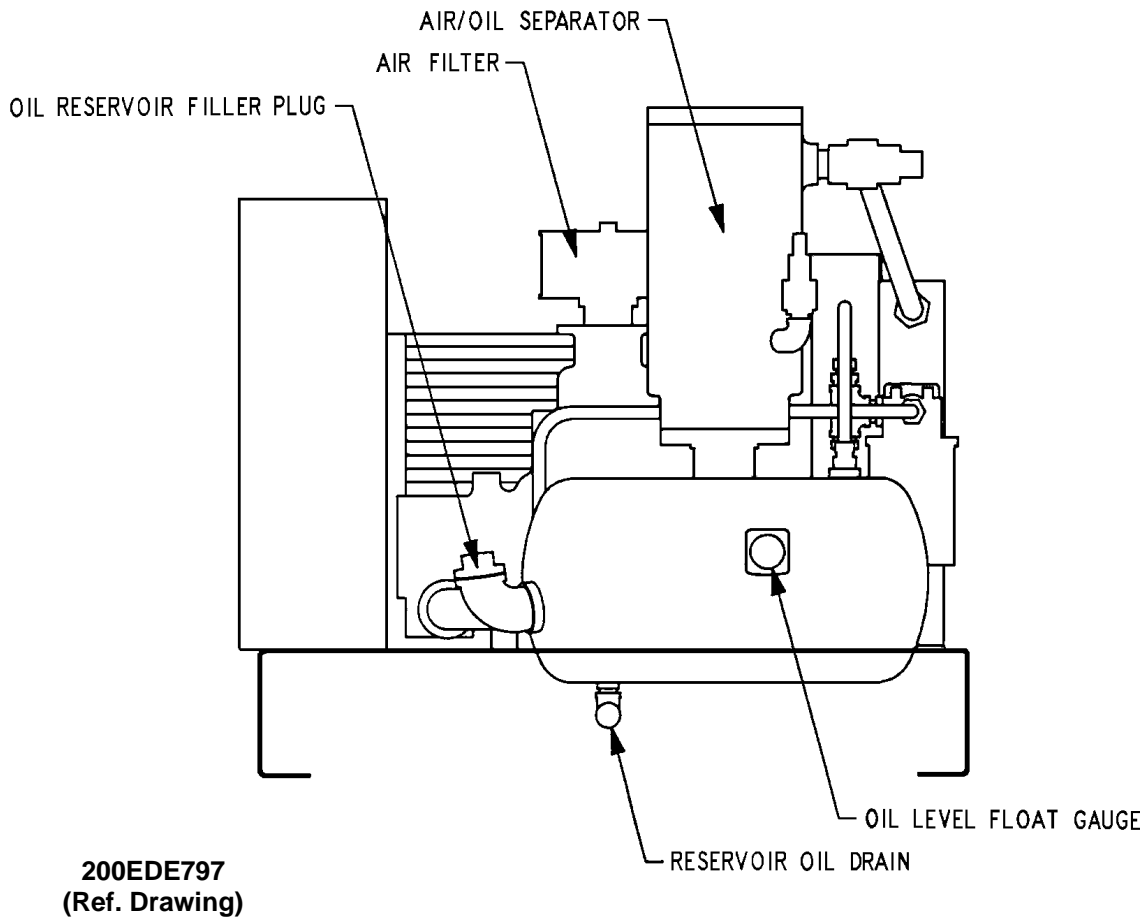


FIGURE 1-3 - PACKAGE - OIL LEVEL GAUGE, SEPARATOR & AIR FILTER

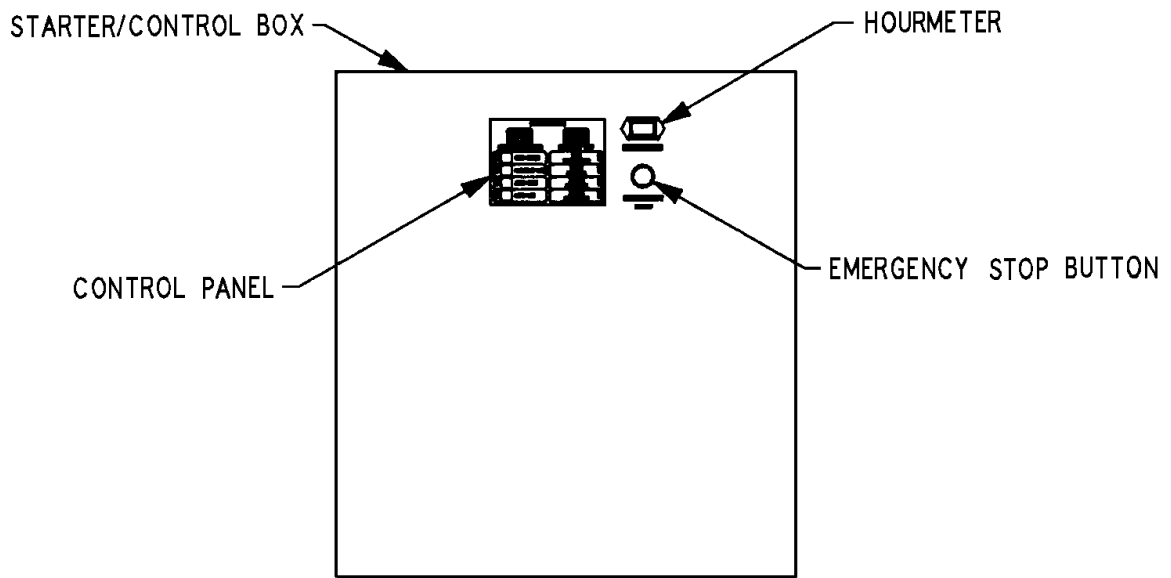

202EDE797
(Ref. Drawing)

FIGURE 1-4 - PACKAGE - CONTROLLER & STARTER BOX

SAFETY PRECAUTIONS

Safety is everybody's business and is based on your use of good common sense. All situations or circumstances cannot always be predicted and covered by established rules. Therefore, use your past experience, watch out for safety hazards and be cautious. Some general safety precautions are given below:

DANGER

Failure to observe these notices could result in injury to or death of personnel.


- **Keep fingers and clothing away from revolving fan, drive coupling, etc.**
- **Do not use the air discharge from this unit for breathing – not suitable for human consumption.**
- **Do not loosen or remove the oil filler plug, drain plugs, covers, the thermostatic mixing valve or break any connections, etc., in the compressor air or oil system until the unit is shut down and the air pressure has been relieved.**
- **Electrical shock can and may be fatal.**
- **Compressor unit must be grounded in accordance with the National Electrical Code. A ground jumper equal to the size of the equipment ground conductor must be used to connect the compressor motor base to the unit base.**
- **Fan motors must remain grounded to the main base through the starter mounting panel in accordance with the National Electrical Code.**
- **Open the main disconnect switch, tag and lockout before working on the control.**
- **Disconnect the compressor unit from its power source, tag and lockout before working on the unit – this machine is automatically controlled and may start at any time.**

 **WARNING**


Failure to observe these notices could result in damage to equipment.

- **Stop the unit** if any repairs or adjustments on or around the compressor are required.
- **Disconnect the compressor** unit from its power source, tag and lockout before working on the unit – this machine is automatically controlled and may start at any time.
- An **Excess Flow Valve** should be on all compressed air supply hoses exceeding 1/2 inch inside diameter. (OSHA Regulation, Section 1926.302, or local regulations)
- **Do not exceed the rated maximum pressure values** shown on the nameplate.
- **Do not operate unit** if safety devices are not operating properly. Check periodically. Never bypass safety devices.


DECALS

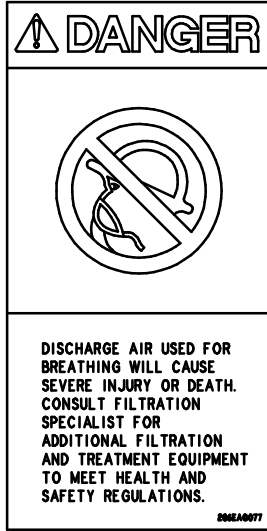


206EAQ077

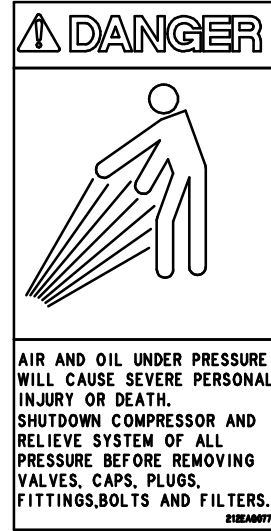


212EAQ077

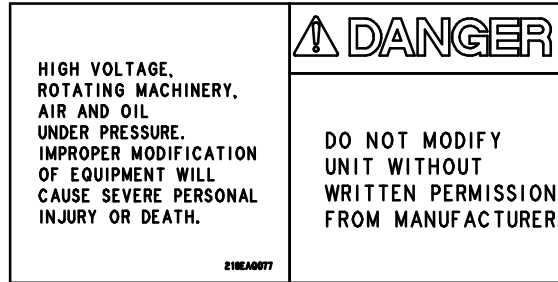

218EAQ077

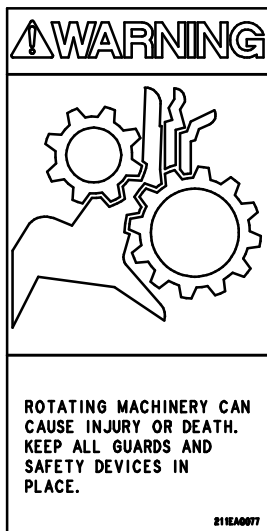


211EAQ077

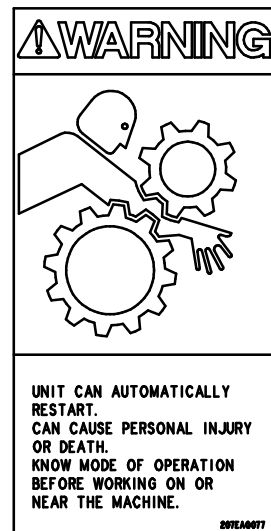


207EAQ077


DECALS

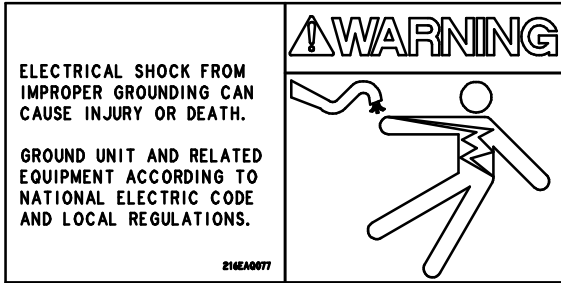


216EAQ077

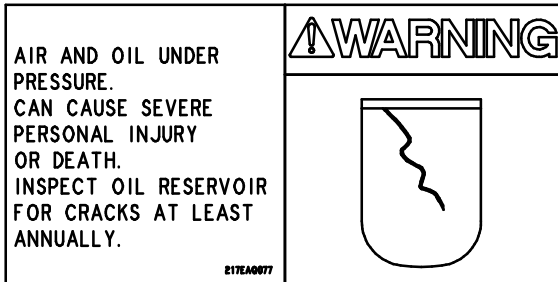


217EAQ077

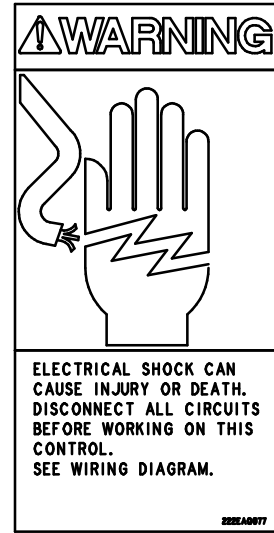

222EAQ077

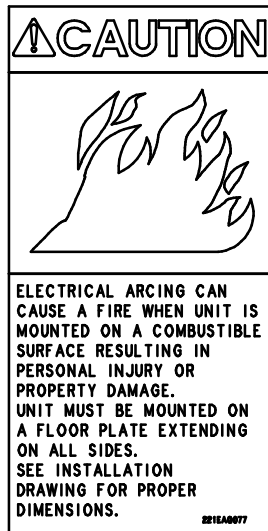

221EAQ077

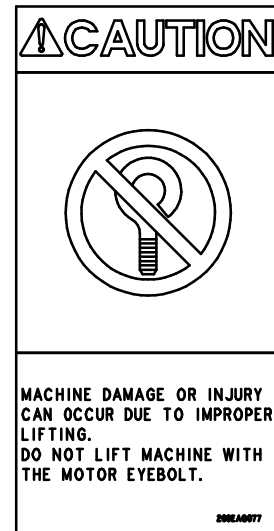

208EAQ077

SECTION 2 INSTALLATION

GENERAL – On receipt of the unit, check for any damage that may have been incurred during transit. Report any damage or missing parts as soon as possible.

CAUTION

Do not electric weld on the compressor or base; bearings can be damaged by passage of current.

LIFTING UNIT – Proper lifting and/or transporting methods must be used to prevent damage. Lifting slots are provided in the base for towmotor use. The unit may also be moved into location by rolling on bars.

CAUTION

Lift compressor unit by base only. Do not use other places such as motor, compressor or discharge manifold piping as lifting points.

DANGER

The eyebolts or lugs provided on the motor are for lifting the motor only and should not be used to lift any additional weight. All eyebolts must be securely tightened. When lifting the motor the lifting angle must not exceed 15 degrees. Failure to observe this warning may result in damage to equipment or personal injury.

DANGER

Compressor, air/oil reservoir, separation chamber and all piping and tubing may be at high temperature during and after operation.

LOCATION (FIGURE 2-1) – The compressor should be installed where it is protected from rain, snow and freezing temperatures, in a clean, well-lighted, well-ventilated area with ample space all around for maintenance. Select a location that provides a cool, clean, dry source of air. In some cases it may be necessary to install the air filter at some distance from the compressor to obtain proper air supply.

Air-Cooled Unit – A combination oil/aftercooler is supplied as standard equipment on all air-cooled units. The air-cooled unit with the standard enclosure requires sufficient flow for the compressor oil/aftercooling system and electric motor cooling (FIGURE 2-2). Air is drawn into the unit at the motor side of the enclosure and is exhausted at the oil cooler side. Do not block the air flow to and from the unit. Allow three and one half (3-1/2) feet (1.1M) to the nearest obstruction on the starter end and control box end of the unit. Allow two (2) feet (.6M) to the nearest obstruction above and on other sides of unit. For continuous efficiency, oil cooler cores must be periodically cleaned with either vacuum or compressed air. If wet cleaning is required, shield motor and spray on a mild soap solution and flush with clean water.

WARNING

For aluminum oil coolers, do not use any cleaning solution that is not compatible with aluminum. Use of improper solution may result in damage to the cooler.

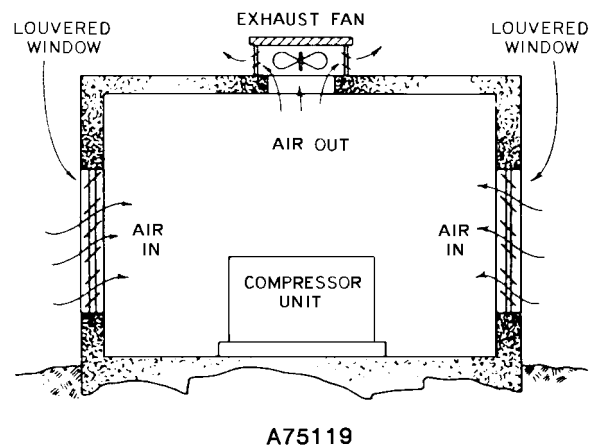


FIGURE 2-1 – TYPICAL COMPRESSOR ROOM

Minimum Air Flow* For Compressor And Cooling – Cubic Feet/Minute (Cubic Meters/Minute)	
Air Cooled	
All Models	6500 cfm (184 M ³ /min.)


* 80°F (27° C) Inlet Air

FIGURE 2-2 – AIR FLOW CHART

FOUNDATION – The Electra-Screw® compressor requires no special foundation, but should be mounted on a smooth, solid surface. Whenever possible install the unit near level. Temporary installation may be made at a maximum 10° angle lengthwise or 10° sidewise. Mounting bolts are not normally required. However, installation conditions such as piping rigidity, angle of tilt, or danger of shifting from outside vibration or moving vehicles may require the use of mounting bolts and shims to provide uniform support for the base. Belt alignment and tension should be checked after installation. (For information on belt alignment and tension see Section 7, page 37.)

OIL RESERVOIR DRAIN – The oil drain is piped from the bottom of the reservoir to the side of the frame. This drain is approximately 2 inches (50 mm) above the floor level. If this is not sufficient to conveniently drain the oil some other methods of providing drain are:


1. Elevate the compressor unit on a suitable structure to obtain the desired drain height.

 CAUTION
If the compressor unit base is raised above floor level, the space between the floor and the base bottom must be closed with solid material all around to prevent recirculation of hot air from the oil cooler end and over temperature operation.

2. Construct an oil sump or trough below the floor level and pump or bail the drained oil.
3. Pump oil from the reservoir filler opening or drain to a container.

ENCLOSURE – The compressor, electric motor, oil cooler and aftercooler are mounted inside the enclosure. Service doors are provided for maintenance access. Be sure to allow enough space around the unit for the doors to open completely. Any of the enclosure

doors may be removed by opening the door and lifting it up slightly to disengage the hinges.

 DANGER
Do not operate the compressor with the fan and belt guard removed. Exposed fan and belts may cause injury to personnel.

The motor inspection/air filter service panel is held by two latches and lifts away from the enclosure. The air outlet panel is attached by screws to the enclosure and is not readily removeable.

INSTALLATION FOR COLD WEATHER OPERATION (FIGURE 2-3) – It is recommended that the unit be installed inside a shelter that will be heated to temperatures above freezing (32°F, 0°C). This will eliminate many of the problems associated with operating units in cold climates, such as freezing in control lines and downstream of the cooler.

Refer to Engineering Data Sheet 13-9-411 for the advantages of using the heat recovered from rotary compressors. This heat recovery could easily pay for an adequate shelter for the unit.

When an outside installation must be made, the precautions required will depend on the severity of the environment. The following are general guidelines for outside installations:

Cold Weather (Down To +10°F, -12°C)

1. Be sure all drains, traps, and control lines, including pressure transducer lines are heated to avoid freezing of condensate. Heat tape with thermostat control is generally satisfactory for this purpose and can be obtained at various local plumbing or hardware outlets at nominal cost.
2. If an air-cooled aftercooler is to be used, provisions to bypass the aftercooler must be made. Since cold air contains very little moisture, successful operation can be achieved without the aftercooler.
3. Provide at least some simple shelter such as a plywood windbreak to protect against drifting snow.
4. Use only Gardner Denver® AEON™ 9000 SP lubricant.
5. Monitor the unit carefully during start-up and operation to be sure it is functioning normally.
6. Specify NEMA 4 enclosure for electrical devices.

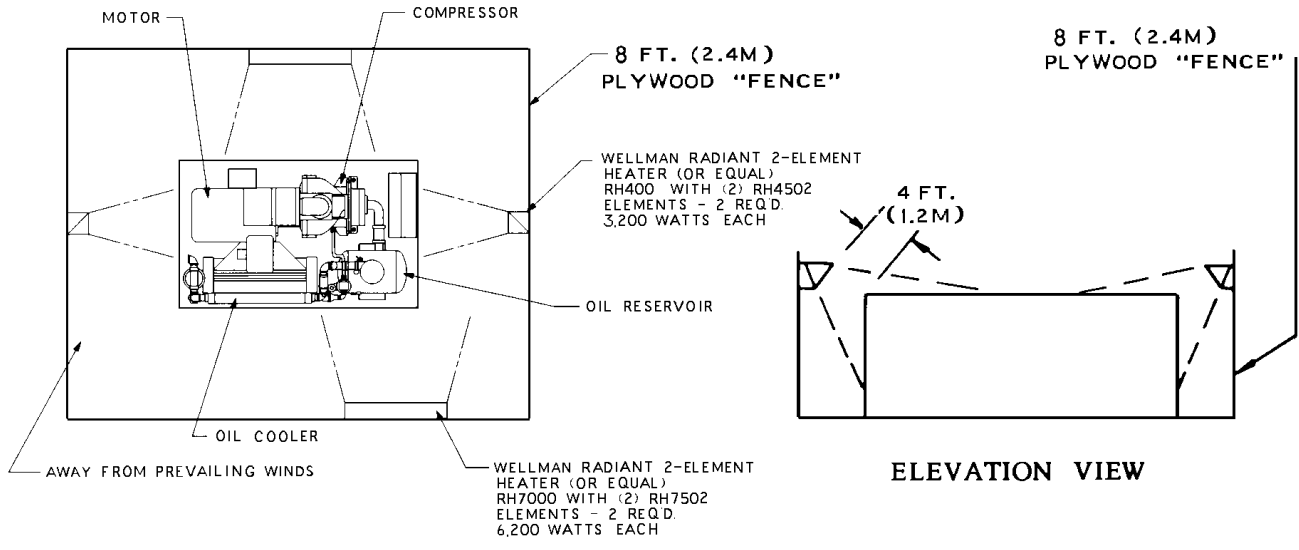


FIGURE 2-3 – COLD WEATHER INSTALLATION

Extreme Cold Weather Operation (Down To -40°F , -40°C)

In addition to the above, the following should be provided:

1. It will be necessary to provide shutters or to block off part of the cooler in some manner since the cooler is greatly oversized for operation in these low temperatures. Since shutters are not provided as a factory option, blocking off a portion of the cooler with plywood should be satisfactory.
2. In extreme environments, run the unit in "Constant Speed" only.
3. Some means of providing heat during shutdown should be provided. There are various methods to accomplish this, but since openings are not provided for sump heaters, the use of radiant heaters is recommended. The heaters should be sized to provide at least a $+10^{\circ}\text{F}$ (-12°C) environment for coolers, motor and sump. Figure 2-3, page 11, shows how these might be located in a typical installation and sizes required.

Remember unsheltered (outside) installations should be avoided where possible. Installation next to a heated building where enough heat can be used to keep the compressor room above freezing will save many complications in the operation and installation of the unit.

Refer to Engineering Data Sheet 13-9-411, available from an authorized Gardner Denver distributor, for the advantages of using the heat recovered from rotary compressors. This heat recovery could easily pay for an adequate shelter for the unit.

AUXILIARY AIR RECEIVER – An auxiliary air receiver is not required if the piping system is large and provides sufficient storage capacity to prevent rapid cycling. When used, an air receiver should be of adequate size, provided with a relief valve of proper setting, a pressure gauge and a means of draining condensate.

MOISTURE SEPARATOR/TRAP – Since the unit is equipped with a built-in aftercooler, a combination moisture separator and trap is furnished with the unit. A means of draining condensate will need to be provided for.

Length of Inlet Line	Diameter of Pipe Size
0 to 10 Feet (0 to 3 Meters)	Same as Compressor Inlet Opening
10 to 17 Feet (3 to 5 Meters)	One Size Larger Than Inlet Opening
17 to 38 Feet (5 to 11.5 Meters)	Two Sizes Larger Than Inlet Opening

FIGURE 2-4 – INLET LINE LENGTHS

CONTROL PIPING – Control piping is not necessary since the Electra-Screw® unit is factory wired and piped for the control system specified.

INLET LINE – Where an inlet line is used between the air filter and the compressor, it must be thoroughly cleaned on the inside to prevent dirt or scale from entering the compressor. **If welded construction is used, the line must be shot blasted and cleaned to remove welding scale.** In either case, the inlet line must be coated internally by galvanizing or painting with a moisture and oil-proof sealing lacquer. Up to ten (10) feet (3 meters) in length, the inlet line should be the full size of the inlet opening on the compressor. If an extra-long line is necessary, the pipe size should be increased according to Inlet Line Length Chart, FIGURE 2-4, page 11.

Accessibility for inlet air filter servicing must be considered when relocating the filters from the unit to a remote location.

DISCHARGE SERVICE LINE – The discharge service line connection is made at the upper right hand corner of the cooler, viewed from the oil cooler side. A hand operated valve, (air service valve) must be installed between the unit and the customer's air system. When manifolding two or more Electra-Screw® units on the same line, each unit is isolated by the check valve in the unit discharge line. If an Electra-Screw® unit is manifolded to another compressor, be sure the other compressor has a check valve in the line between the machine and the manifold. If an Electra-Screw® and a reciprocating compressor are manifolded together, an air receiver must be located between the two units.

 **DANGER**

Discharge air used for breathing will cause severe injury or death.

Consult filtration specialists for additional filtration and treatment equipment to meet health and safety standards.

BLOWDOWN VALVE PIPING – The blowdown valve is fitted with a muffler for operation indoors. If the installation requires, the muffler may be removed and the blowdown valve piped to the outside with a pipe size the same as the blowdown valve outlet connection.

ELECTRICAL WIRING

 **WARNING**

Electrical shock can cause injury or death. Open main disconnect switch, tag and lockout before working on starter/control box.

Standard Units – The Electra-Screw® compressor is factory wired for all starter to motor and control connections for the voltage specified on the order. It is necessary only to connect the unit starter to the correct power supply. The standard unit is supplied with an open drip-proof motor, a NEMA 12 starter and control enclosure. See "Location" paragraph, page 9, for distance to the nearest obstruction on starter and control box sides of the unit.

The overload heaters are to be selected according to starter manufacturer's tables, which are attached to the inside of the control box, based on motor nameplate full load amperage.

GROUNDING – Equipment must be grounded in accordance with Section 250 of the National Electrical Code.


 **WARNING**

Failure to properly ground the compressor package could result in controller malfunction.

MOTOR LUBRICATION – Long time satisfactory operation of an electric motor depends in large measure on proper lubrication of the bearings. The following charts show recommended grease qualities and regreasing intervals for ball bearing motors. For additional information refer to the motor manufacturer's instructions. The following procedure should be used in regreasing:

1. Stop the unit.
2. Disconnect, tag and lockout the unit from the power supply.
3. Remove the relief plug and free hole of hardened grease.

4. Wipe lubrication fitting clean and add grease with a hand-operated grease gun.
5. Leave the relief plug temporarily off. Reconnect the unit and run for about 20 minutes to expel the excess grease.
6. Stop the unit. Replace the relief plug.
7. Restart the unit.

 WARNING
<p>Rotating machinery can cause injury or death. Open main disconnect, tag and lockout power supply to the starter before working on the electric motor.</p>

ELECTRIC MOTOR GREASE RECOMMENDATIONS

	Standard Service	High Temperature
Worked Penetration	265–296	220–240
Grease Viscosity, SSU At 100°F (38° C)	400–550	475–525
Soap Type	Lithium	Lithium
N–H Bomb, Minimum Hours For 20 PSI (1.4 Bar) Drop at 210°F (99°C)	750	1000
Bleeding, Maximum Weight % In 500 Hours 212°F (100°C)	10	3
Rust Inhibiting	Yes	Yes

ELECTRIC MOTOR REGREASING INTERVAL

Type of Service	Typical Examples	Rating	Relubrication Interval
Standard	One– or Two–Shift Operation	150 HP (112 KW) & Below	18 Months
Severe	Continuous Operation	150 HP (112 KW) & Below	9 Months
Very Severe	Dirty Locations, High Ambient Temperature	150 HP (112 KW) & Below	4 Months

SECTION 3 STARTING & OPERATING PROCEDURES

PRESTART-UP INSTRUCTIONS – A new unit as received from the factory has been prepared for shipping only. Do not attempt to operate the unit until checked and serviced as follows:

1. **Compressor Oil** – Check the oil level in the reservoir. Add oil only if the oil level gauge reads in the red “ADD OIL” range. Do not mix different type oils. The unit is shipped filled with Gardner Denver AEON™ 4000 Lubricating Coolant which is suitable for the first 6000 hours under normal operating conditions. AEON™ 4000 is generally suitable for use up to 6000 hours service life, provided the lubricant is monitored by periodic analysis.

REPLACE OIL FILTER EVERY 1000 HOURS.

Initial fill, or filling after a complete draining of the system, may show the oil level above the FULL mark (the center of the gauge). After start-up, the oil level will drop and fluctuate as the machine runs. To check for proper oil level, shut off the machine and allow the foam to settle out. If necessary, add oil to bring the level to the FULL mark. See FIGURE 1–3, page 3.

During unloaded operation and after shutdown, the system will partially drain back into the oil reservoir and the oil level may read higher than when operating on load. DO NOT DRAIN OIL TO CORRECT; on the next loaded cycle or start, oil will again fill the system and the gauge will indicate the operating level.

2. **Air Filter** – Inspect the air filter to be sure it is clean and tightly assembled. Refer to Section 6, “Air Filter,” page 35, for complete servicing instructions. Be sure the inlet line, if used, is tight and clean.
3. **Piping** – Refer to Section 2, “Installation,” page 9, and make sure piping meets all recommendations.
4. **Electrical** – Check the wiring diagrams furnished with the unit to be sure it is properly wired. See FIGURE 4–10 and FIGURE 4–11, page 25 and 26, for general wiring diagrams and Section 2, page 9 for installation instructions.
5. **Grounding** – The unit must be properly grounded according to Section 250 of the National Electrical Code.

NOTICE

Regular maintenance and replacement at required intervals of the oil filter, air filter and air-oil separator is necessary to achieve maximum service and extended drain intervals of AEON™ 4000 petroleum base lubricant. Use only genuine Gardner Denver filters designed and specified for this compressor.

WARNING

Failure to properly ground the compressor package could result in controller malfunction.

DANGER

Before removing the oil filler plug, always stop the unit and release air pressure, tag and lockout the power supply to the starter. Failure to release pressure or properly disconnect the power may result in personal injury or death.

WARNING

Operation with incorrect motor rotation can damage equipment and cause oil eruption from the compressor inlet. When checking motor rotation, induce minimum rotation (less than one revolution if possible). Never allow motor to reach full speed.

6. **Rotation** – Check for correct motor rotation using “JOG MODE.” Compressor drive shaft rotation must be clockwise standing facing the compressor sheave. See Section 4, page 21, Step 8.

7. **System Pressure** – Set the controls to the desired load pressure. DO NOT EXCEED THE MAXIMUM OPERATING PRESSURE ON THE COMPRESSOR NAMEPLATE. See Section 4, pages 20 through 22, “Programming the Load–Unload Pressure Setpoints,” for procedure.

 **WARNING**

Operation at excessive discharge air pressure can cause personal injury or damage to equipment. Do not adjust the full discharge air pressure above the maximum stamped on the unit nameplate.

8. **Operating Mode** – Refer to Section 4 for detailed information on the control system.
9. **Enclosure** – Check for damaged panels or doors. Check all screws and latches for tightness. Be sure doors are closed and latched.

STARTING THE UNIT – Observe the following starting procedures.

Unit Cold:

1. Close the air service valve (customer furnished) between the main air system and the check valve on the package.
2. Start the unit by pushing either the “CONSTANT RUN” or one of the “AUTO” buttons.

3. Run for approximately five minutes or until the temperature stabilizes and then open the air service valve.

The unit is equipped with a minimum (65 psig, 4.5 Bars) pressure/check valve; no special procedure to maintain the unit reservoir pressure is required.

Unit Hot (No warm–up period is required):

1. Close the air service valve (customer furnished) between the main air system and the check valve on the package.
2. Start the unit by pushing either the “CONSTANT RUN” or one of the “AUTO” buttons.
3. Run for approximately one minute and then open the air service valve.

The unit is equipped with a minimum (65 psig, 4.5 Bars) pressure/check valve, no special procedure to maintain the unit reservoir pressure is required.

DAILY CHECK – Refer to Section 8, “Maintenance Schedule,” page 38.

STOPPING THE UNIT:

1. Close the air service valve (customer furnished) between the main air system and the check valve on the package.
2. Allow the unit to build up to full unloaded pressure and run unloaded for 1 to 2 minutes.
3. Wait a short period for the reservoir to blow down.
4. Press the “STOP–RESET” button.

Stopping the unit at a pressure below full unloaded may cause oil carry–over and can damage the air/oil separator element. The oil reservoir will automatically blow down as the motor stops. Open the air service valve.

SECTION 4 CONTROLS & INSTRUMENTATION

GENERAL – The Gardner Denver® EDE Electra-Screw® compressor is supplied with a factory mounted starter and complete controls as standard equipment. The standard control system consists of constant run load/unload operation, or auto start/timed stop operation. Lead/Lag operation of two EDE compressors is also possible without additional equipment. Inlet valve modulation is standard.

PROTECTIVE DEVICES – All compressors incorporate the following protective devices:

Standard Domestic Motor Protection Devices – Overload heaters are furnished for the starter in the voltage range specified. There are three (3) overloads in the starter of proper size for the starter and its enclosure. An overload trip is indicated by the “MOTOR OVERLOAD” LED located on the control keypad.

Optional Domestic Motor and Standard International Protective Devices – Wye-Delta Starter – Overload heaters are furnished for the starter in the voltage range specified. There are three (3) overloads

in the starter of proper size for the starter and its enclosure. Note that motor nameplate current must be multiplied by .577 for wye-delta starters. Proper starter coil and contact action is also monitored to ensure proper operation.

Separator Differential Pressure – The Separator differential pressure is continually monitored by the microprocessor controller. At a differential of approximately 8 PSI (.6 Bar), the “CHANGE SEPARATOR” LED located on the control keypad flashes indicating required maintenance. If the warning is ignored, and the separator differential continues to increase, the microprocessor controller will stop the unit at 15 PSI (1 Bar) and the LED will remain on steady. See “Control System Operation,” page 18, for further information on operation of the microprocessor controller.

High Discharge Temperature – The compressor is protected from high discharge temperature by two independent thermistor probes. One probe is located in the compressor discharge housing to sense compress-

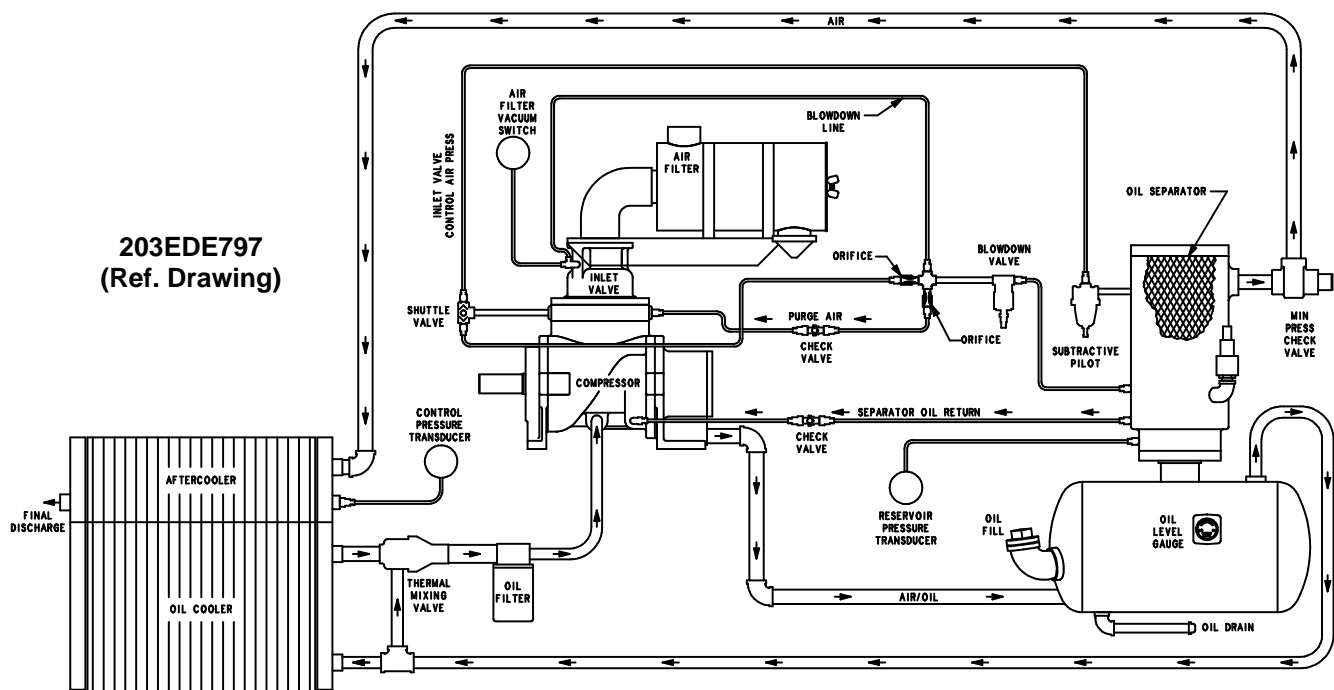


FIGURE 4-1 – CONTROL SCHEMATIC

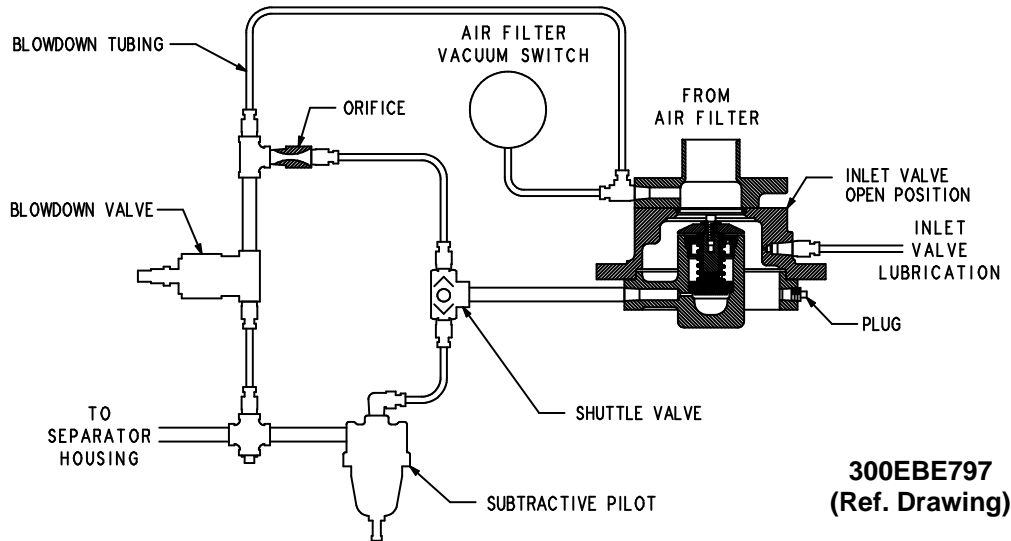


FIGURE 4-2 – INLET VALVE

sor discharge air–oil mixture temperature. The second probe is located at the separator discharge and senses the temperature of the air at the oil separator.

The microprocessor controller will shut the compressor down if the temperature sensed at either location exceeds 225° F (107° C). See “High Air Temperature LED,” page 19.

⚠ CAUTION
Damage will occur to the machine if it is repeatedly restarted after high temperature stops operation. Find and correct the malfunction before re-suming operation.

Relief Valve – A pressure relief valve(s) is (are) installed in the final discharge line and set at the factory to approximately 120% of the unit’s full load operating pressure for protection against overpressure. Periodic checks should be made to insure that it is operating properly.

The relief valve should be tested for proper operation at least once every year. To test the relief valve, raise the system operating pressure to 75% of the relief valve set pressure and manually open the valve with the hand lever. Hold the valve open for a few seconds and allow it to snap shut.

⚠ WARNING
When the relief valve opens, a stream of high velocity air is released, resulting in a high noise level and possible discharge of accumulated dirt or other debris. Always wear eye and ear protection and stand clear of the discharge port when testing the relief valve to prevent injury.

⚠ CAUTION
Never paint, lubricate or alter a relief valve. Do not plug vent or restrict discharge.

⚠ WARNING
Operation of the unit with improper relief valve setting can result in severe personal injury or machine damage.
Insure properly set valves are installed and maintained.

Blowdown Valve (FIGURE 4-1, page 16) – The blow-

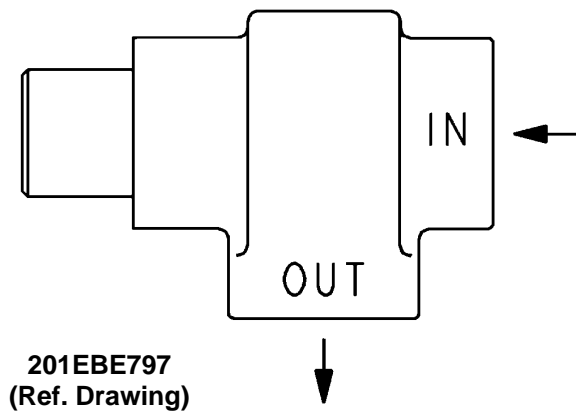


FIGURE 4-3 – MINIMUM PRESSURE/CHECK VALVE

down valve releases pressure from the oil reservoir. See description under “Air Control Components,” below, for construction and operation information.

INSTRUMENTS – All units incorporate the following instruments and indicators:

Oil Level Gauge (FIGURE 1-3, page 3) – The oil level gauge is located on the side of the reservoir. See Section 5, page 27, “Lubrication, Oil Cooler, Oil Filter and Separator”, for information on how to correctly read the gauge. All other instruments are a part of the Auto Sentry S controller.

AIR CONTROL COMPONENTS – All units incorporate the following air control components. See FIGURE 4-1, page 16, for schematic tubing diagram.

Inlet Valve (FIGURE 4-2, page 17) – The inlet valve is a pilot-actuated valve that restricts the inlet to control capacity and closes to unload the compressor. At shutdown the inlet valve closes to function as a check valve and prevent backflow of air.

As control pressure is increased the valve will begin to close, restricting the inlet and reducing compressor capacity. Approximately 18 psig (1.2 Bar) of control pressure is required to close the inlet valve completely. When closed, the inlet valve prevents the flow of air in either direction. With optional modulating control feature: when the control pressure is less than 18 psig (1.2 Bar), the inlet valve will modulate to match compressor capacity to system demand.

Blowdown Valve (FIGURE 4-2, page 17) – The blowdown valve is a two-way solenoid valve that is piped into the oil separator outlet, but ahead of the check valve. When the solenoid is de-energized, the blowdown valve opens, and the oil system is blown down. When the solenoid is energized, the blowdown valve closes, and allows the oil system to pressurize.

Minimum Pressure/Check Valve (FIGURE 4-3) – An internal spring-loaded minimum pressure valve is

used in the final discharge line to provide a positive pressure on the oil system even when the air service valve is fully open. The valve senses upstream pressure. If demand for air exceeds the compressor capacity, the valve throttles the flow to maintain a minimum pressure on the upstream (oil reservoir) side of the valve. When pressure rises above the minimum pressure (standard setting 60 to 65 PSIG, 4.1 to 4.5 Bar) the valve reaches the full open position.

A check valve incorporated in the minimum pressure valve prevents backflow of air from the shop air line when the unit stops, unloads or is shut down.

The valve does not require maintenance or adjustment. If the valve fails to function, it must be replaced because it is not field adjustable or field repairable.

⚠ DANGER

Air/oil under pressure will cause severe personal injury or death. Shut down compressor, relieve system of all pressure, disconnect, tag and lockout power supply to the starter before removing valves, caps, plugs, fittings, bolts, and filters.

STARTER/CONTROL BOX (FIGURE 1-3, page 3) – The following control components are located on the combination starter/control box.

Hourmeter – A continuous reading (nonreset) type hourmeter displays the accumulated operating time of the unit and provides a convenient means for scheduling changes of oil and servicing of filters, separators and other devices.

Auto-Sentry S Controller With Keypad – Monitors and controls compressor operation.

Emergency Stop Pushbutton – Removes power from the microprocessor controller outputs to provide a positive means of stopping the unit in an emergency situation.

CONTROL SYSTEM OPERATION – See FIGURE 4-9, page 24. The following are operations of the Auto Sentry S Controller.

“STOP/RESET” Button With LED – This button is used to stop the compressor under ordinary conditions. It is also used to extinguish any fault LED’s that are illuminated. In addition, it is used in the procedure to adjust operating pressure. See “Programming the Load-Unload Pressure Setpoints,” page 20. The LED is illuminated whenever the unit is stopped for any reason EXCEPT a normal shutdown in one of the “AUTO” modes. A flashing LED indicates that a reset is required.



CAUTION

Damage will occur to the machine if it is repeatedly restarted after any one of the shutdown modes stops operation of the unit. Find and correct the malfunction before resuming operation.

“CONSTANT RUN” Button With LED – This button is used to operate the unit in the constant run mode. In this mode, the compressor runs continuously, loading and unloading in response to air demand. It will continue to run until stopped, either manually or by a protective shutdown. The LED is illuminated at all times while running in this mode.

“AUTO LEAD” Button With LED – This button is used to operate the unit in “Auto–Start–Timed–Stop” mode, either by itself, or as the lead compressor in a Lead/Lag arrangement. Loading and unloading occurs as in the “CONSTANT RUN” mode, however, if the compressor runs unloaded for a period of 10 minutes, the unit is stopped. At this point, the compressor remains in the “AUTO LEAD” mode and will restart when the system pressure reaches the ‘load’ setpoint programmed into the controller. The LED will remain illuminated throughout the cycle.



WARNING

Automatic restarting or electrical shock can cause injury or death. Open, tag and lockout main disconnect and any other circuits before servicing the unit.

“AUTO LAG” Button With LED – This button is used to select the ‘lag’ unit in a lead–lag arrangement. Operation is identical to “AUTO LEAD” except that the start–load and unload setpoints are automatically 5 PSI (.3 Bar) lower than programmed.

NOTICE

Any mode may be selected at any time without stopping the compressor.

“HIGH AIR TEMPERATURE” LED – This LED is used to indicate an over temperature condition at either the

compressor or oil separator discharge. At the time of a high temperature shutdown, the LED is illuminated and the temperature digital readout is locked on to the offending temperature. Illumination of the decimal point in the lower right hand corner of the digital readout indicates that the temperature displayed is at the oil separator. A non–illuminated decimal point indicates compressor discharge. Pressing “STOP/RESET” will extinguish the LED (if the temperature has lowered below 225° F, 107° C) and revert the digital readout to displaying actual discharge temperature.

“MOTOR OVERLOAD” LED – This LED indicates that one of the motor overload relays has tripped. The overload relay itself must be reset before pressing “STOP/RESET” will extinguish the LED.

“CHANGE SEPARATOR” LED – This LED flashes when the differential pressure across the oil separator reaches approximately 8 PSI (.6 Bar). At this point, schedule the separator element for service at the earliest opportunity. (See Section 5, page 32, for separator maintenance.)

Should the condition be ignored and allowed to further deteriorate, the compressor will be shutdown and the LED illuminated steadily when the differential pressure reaches 15 PSI (1.0 Bar).



CAUTION

Machine damage will occur if compressor is repeatedly restarted after any one of the shutdown modes stops operation of the unit. Find and correct the malfunction before resuming operation.

“CHANGE AIR FILTER” LED – This LED is used to signal when the air filter requires servicing or changing. It is a reminder only and will not stop or impede the operation of the unit. Operating the compressor with the LED illuminated risks collapse of the filter and ingestion into the compressor.



CAUTION

Machine damage can occur with extended operation after the “Change Air Filter” LED illuminates. Service the air filter as soon as possible.

Pressure And Temperature Digital Readouts – These readouts normally indicate pressure at the minimum pressure check valve and temperature at the air end discharge. See “High Air Temperature LED” above for a description of readout action during a high temperature condition.

Alternately, these readouts can be selected to display oil reservoir pressure and separator air temperature. To obtain such display while the compressor is running, simply press the operating mode button that corresponds to the current operating mode of the unit. (For Example: If the unit is operating in “AUTO LEAD” mode, press the “AUTO LEAD” button.) This will cause the readout to display the alternate parameters. This alternate display mode is indicated by illuminated decimal points in the lower right hand corner of each display. After releasing the button, the display will revert to its normal mode in 5 seconds.


The digital readouts are also used to display error messages. These error messages correspond to various indications concerning condition of pressure and temperature sensors and EMERGENCY STOP condition.

DEFINITIONS OF ERROR MESSAGES – Refer to the chart in FIGURE 4–4, below, for definitions. An error message will stop the compressor, if running, and prevent it from restarting. The failed sensor must be replaced to clear the error.

Any condition requiring the control panel to be reset will be indicated by a flashing “STOP/RESET” LED. If all readouts and LED’s are flashing, a power interruption has occurred, requiring the control panel to be reset.

Programming The Load–Unload Pressure Setpoints – Programming of the Load and Unload Pressure setpoints can only be accomplished with the unit not running.

Step 1: Stop the compressor and remove all power from the unit by opening main disconnect.

 **WARNING**

Electrical shock can cause injury or death. Open main disconnect, tag and lockout power supply to the starter and any other circuits before working inside the control box.


Step 2: Turn the “Setup” switch located on the controller circuit board (inner side of control box panel) to the “+” position. Close the control box panel and restore power.

NOTICE

This switch is provided to prevent unauthorized programming of the setpoints. If this level of security is not required, the “Setup” switch can be left in the “+” position, eliminating Steps 1 and 2.

Step 3: With the unit already in the STOP/RESET condition, press the “STOP/RESET” button a second time. This puts the controller in program mode. The displays will read as follows:


Pressure: the current unload setpoint (adj. 58–175 psig, 4.0 to 12.1 Bar)

Temperature:  indicates that the pressure value is the “unload” value.

Pressure Readout		Temperature Readout	
Error #	Meaning	Error #	Meaning
E01	Failure of Final Discharge Pressure Sensor	E01	Failure of Compressor Temperature Sensor
E02	Failure of Oil Sump Pressure Sensor	E02	Failure of Separator Temperature Sensor
E03	Failure of Both Pressure Sensors	E03	Failure of Both Temperature Sensors
E04	EMERGENCY STOP		


FIGURE 4–4 – DEFINITION OF ERROR MESSAGES

Step 4: Press the “AUTO LEAD” button to raise the unload setpoint. Press “AUTO LAG” to lower the unload setpoint. See FIGURE 4–8, page 24.

 WARNING
Operation at excessive discharge air pressure can cause personal injury or damage to equipment. Do not set unload pressure above the maximum stamped on the unit nameplate.

Step 5: When the desired unload setpoint is displayed in the pressure readout, press the “STOP/RESET” button. This will enter the desired unload setpoint and advance the programming function to the load setpoint. The displays will now read:


Pressure: the current load setpoint (adj. 50–167 psig, 3.4 to 11.5 Bars)

Temperature:  indicates that the pressure value is the “load” value.

Step 6: Raise or lower the load setpoint in the same manner as the unload setpoint in Step 4.

NOTICE
The load setpoint cannot be set within 8 PSI (.6 Bar) of the unload setpoint. See FIGURE 4–8, page 24.

Step 7: When the desired load setpoint is displayed in the pressure readout, press the “STOP/RESET” button, entering the new load setpoint and completing the programming.

Step 8: The display now indicates: 

At this time, compressor rotation may be checked by pressing any of the three operating mode buttons. The correct rotation is clockwise when facing compressor sheave. The starter will be momentarily energized giving a slight rotation that is short enough in


 
duration to prevent reverse oil flow in the event that rotation is reversed. Press “Stop/Reset” to exit jog mode.

Step 9: The displays will now read:

Pressure 
 Temperature 

If this compressor is equipped with the expansion board for the remote control option this must be set to “yes”. The standard setting is “no”. This value is toggled by pressing any mode switch. Press the “Stop/Reset” button to continue to the next step.

Step 10: The display now indicates either


 or


Pressing any mode key will toggle the display from one set of units to the other. PSI/°F causes the controller to display pressures in pounds per square inch and temperatures in degrees Fahrenheit. bar/°C causes the controller to display parameters in bars and degrees Centigrade. Press “Stop/Reset” when the desired units are visible in the display to continue.

Step 11: When display shows dashes (— —): (The Following steps may be skipped by waiting until the display resumes its normal numbers.)

- a) Press “Stop–Reset” – the pressure display now shows the current “zero” pressure for the final discharge transducer in the left window, and “P1” in the right window.
- b) Press “Stop–Reset” again – this will zero the circuit board on the final discharge pressure transducer and move the display to the next step. The left window will read the current “zero” pressure for the oil reservoir transducer and the right window will now read “P2.”
- c) Press “Stop–Reset” again – this will zero the circuit board on the oil reservoir pressure transducer and move the display program back to the normal setup mode. The display should read “0” pressure in the left window, and — current sump temperature in the right window.

Step 12: Stop the compressor and disconnect, tag and lockout the power supply to the starter.

Step 13: Move the circuit board slide switch back to the “set” position (right). You may now proceed with normal start up procedure.

NOTICE

- A. To readjust, the slide switch must be in the “+” position.
- B. If procedure is repeated, the transducer zero operation may be bypassed by not pressing “Stop–Reset” while the dashes (— —) are displayed.
- C. Transducer must be zeroed only while at zero “0” pressure, or invalid shutdowns may occur.

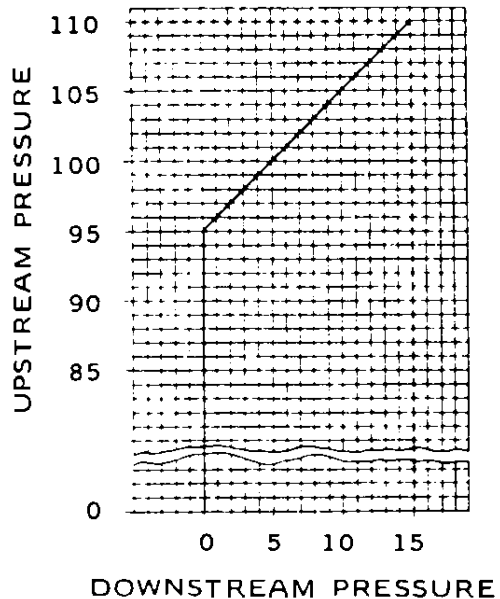


FIGURE 4-5 – PRESSURE CHART

LEAD-LAG OPERATION OF TWO COMPRESSORS – The Auto–Sentry S controller provides the capability of true lead–lag operation without the need to purchase any additional equipment and without complicated interconnecting wiring.

Follow these steps to operate two compressors in a lead–lag arrangement:

Step 1: Program load and unload pressure setpoint on both units to the same value. For example: Compressor “A” load at 92 PSI (6.3 Bars); unload at 100 PSI (6.9 Bars). Compressor “B” load at 92 PSI (6.3 Bars); unload at 100 PSI (6.9 Bars). See page 20, this section, for complete information on programming the setpoints.

WARNING

Operation at excessive discharge air pressure can cause personal injury or damage to equipment. Do not set unload pressure above the maximum stamped on the unit nameplate.

Step 2: Operate one compressor in the “Auto Lead” mode. This compressor will now be the “Lead” or “Base Load” compressor.

Step 3: Operate the second compressor in the “Auto

Lag” mode. This compressor will now be the “lag” or “trim” compressor. It will automatically be brought on line, if required, by a large air demand. After the demand is satisfied, the lag unit will unload, time out and stop, ready to start again when needed.

Step 4: Periodically reverse the roles of the units by changing each unit’s mode of operation from “Auto Lead” to “Auto Lag” and vice versa. By using the hourmeters on the control panel to schedule the mode changes, the operating hours can be kept as close as possible, equalizing machine wear and minimizing maintenance costs.

WARNING

Automatic restarting or electrical shock can cause injury or death. Open, tag and lockout main disconnect and any other circuits before servicing the unit.

Subtractive Pilot (Modulating Feature) – The subtractive pilot is an adjustable, spring–loaded diaphragm valve that controls pressure in relation to the upstream (discharge) pressure.

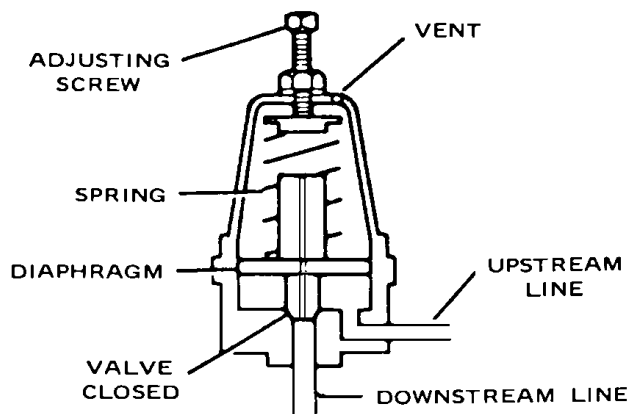


FIGURE 4-6 – SUBTRACTIVE PILOT (CLOSED)

The downstream pressure is maintained equal to the upstream pressure minus a constant which is adjustable. In the example shown in FIGURE 4-5, the downstream pressure equals the upstream pressure minus 95 psi (6.6 Bars). When the upstream pressure rises to 100 psig (6.9 Bars), the downstream pressure rises to 5 psig (.3 Bar). This 1 to 1 psi (Bar) rise is constant above the set point.

Below the set point, the valve seat is closed and the downstream pressure is vented. In the example of FIGURE 4-5, page 22, downstream pressure is vented below 95 psig (6.6 Bars).

FIGURE 4-6 shows a schematic cross section of the subtractive pilot with the valve seat closed and downstream line vented.

FIGURE 4-7 shows the pilot with valve seat open, holding a downstream pressure which is adjustable with the screw. In this position it is normal for the valve to continually bleed air through the small vent hole in the bowl.

Moisture, oil and dirt in the control system lines and components can cause the set point of the subtractive pilot to shift or be erratic. The subtractive pilot can be disassembled and the diaphragm and ports cleaned when necessary.

Operating Air Pressure Adjustment – The Auto-Sentry S controller load and unload pressure setpoints should already be programmed. See page 20, and FIGURE 4-8, page 24.

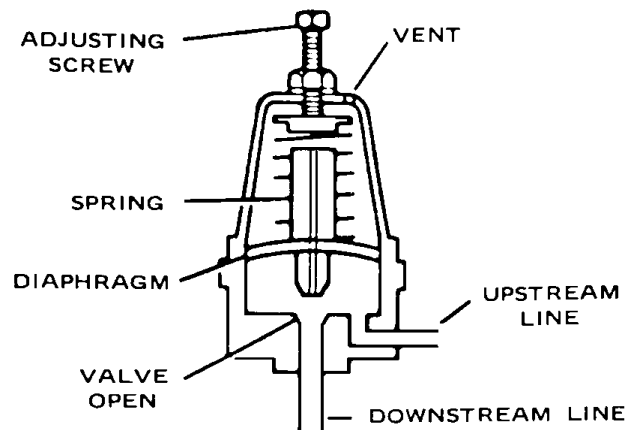


FIGURE 4-7 – SUBTRACTIVE PILOT (OPENED)

⚠ WARNING

Operation at excessive discharge air pressure can cause personal injury or damage to equipment. Do not set unload pressure above the maximum stamped on the unit nameplate.

To adjust the subtractive pilot:

1. With the unit off, loosen the locknut and back out the adjusting screw several turns so the subtractive pilot will fully unload the compressor before the unload pressure setpoint of the microprocessor controller is reached.
2. Close the air service valve and start the unit in the "CONSTANT RUN" mode. Allow the unit to reach the pressure at which the subtractive pilot fully unloads the compressor.
3. Turn-in the adjusting screw until the unload pressure setpoint is reached and the microprocessor controller allows the unit to blow down.
4. Turn-in the adjusting screw an additional one-eighth (1/8) turn and tighten the locknut. As a result, the subtractive pilot will not fully unload the compressor before the microprocessor controller's unload pressure setpoint is reached.
5. Using the air service valve, cycle the unit between load and unload several times to be certain that the unit will reach the microprocessor controller's unload pressure setpoint and blow down.

NAMEPLATE FULL LOAD OPERATING PRESSURE	CONTROL SYSTEM PRESSURE	
	LOAD	UNLOAD
100 PSI (6.9 Bars)	100 PSI (6.9 Bars)	108 PSI (7.5 Bars)
125 PSI (8.6 Bars)	125 PSI (8.6 Bars)	133 PSI (9.2 Bars)
150 PSI (10.4 Bars)	150 PSI (10.4 Bars)	158 PSI (10.9 Bars)
175 PSI (12.1 Bars)	167 PSI (11.5 Bars)	175 PSI (12.1 Bars)

NOTICE

Load setpoint cannot be set within 8 psi (.6 Bar) of the unload setpoint.

Minimum operating pressure is 60 to 65 PSIG (4.1 to 4.5 Bars).

FIGURE 4-8 – MAXIMUM SETPOINTS FOR AUTO SENTRY “S” CONTROLLER, PSIG

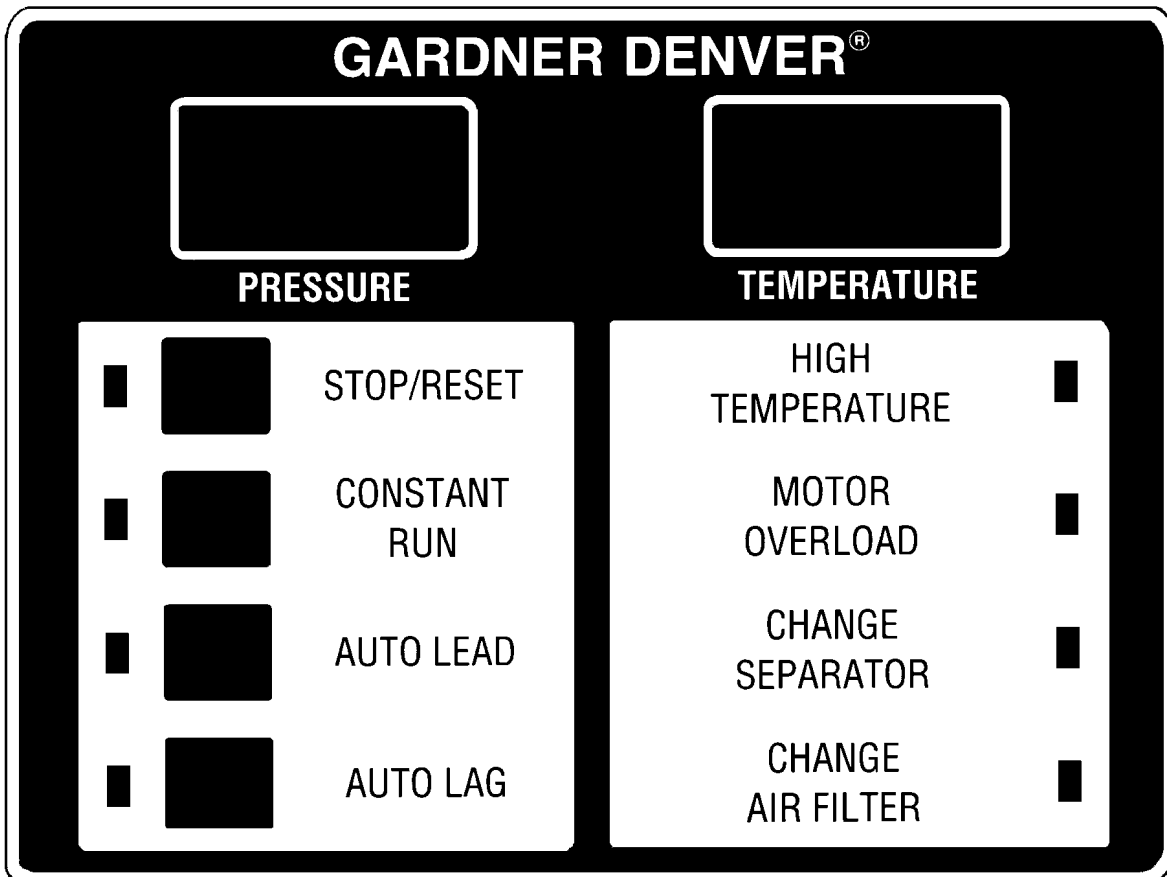


FIGURE 4-9 – AUTO SENTRY “S” SOLID STATE CONTROL TOUCH PAD



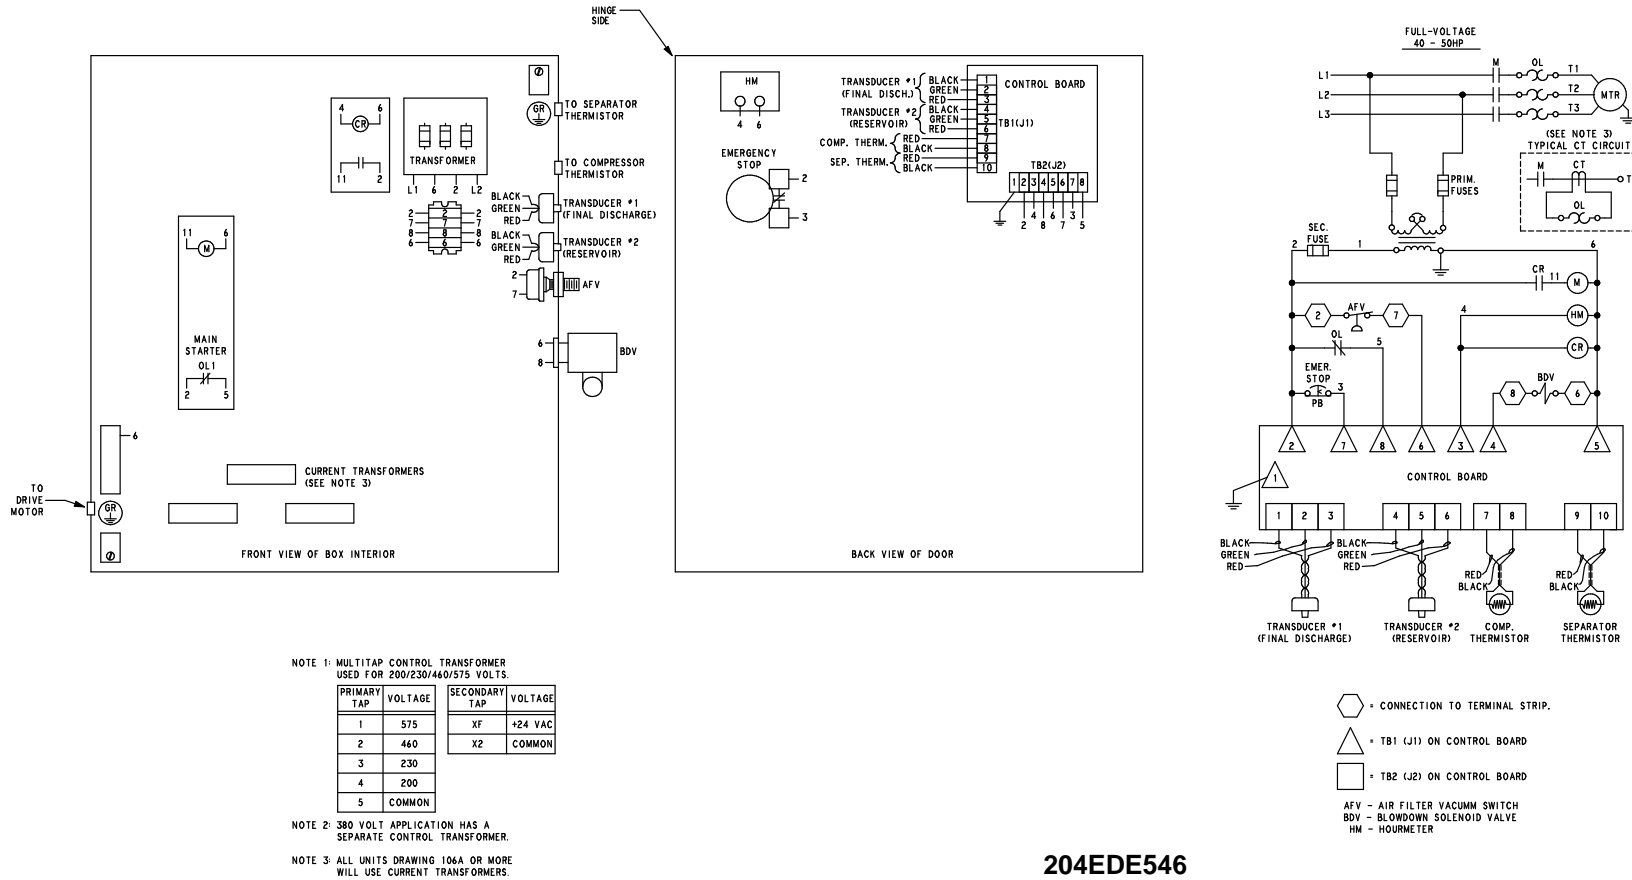


FIGURE 4-10 - WIRING DIAGRAM - FULL VOLTAGE - DUAL CONTROL

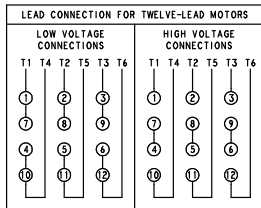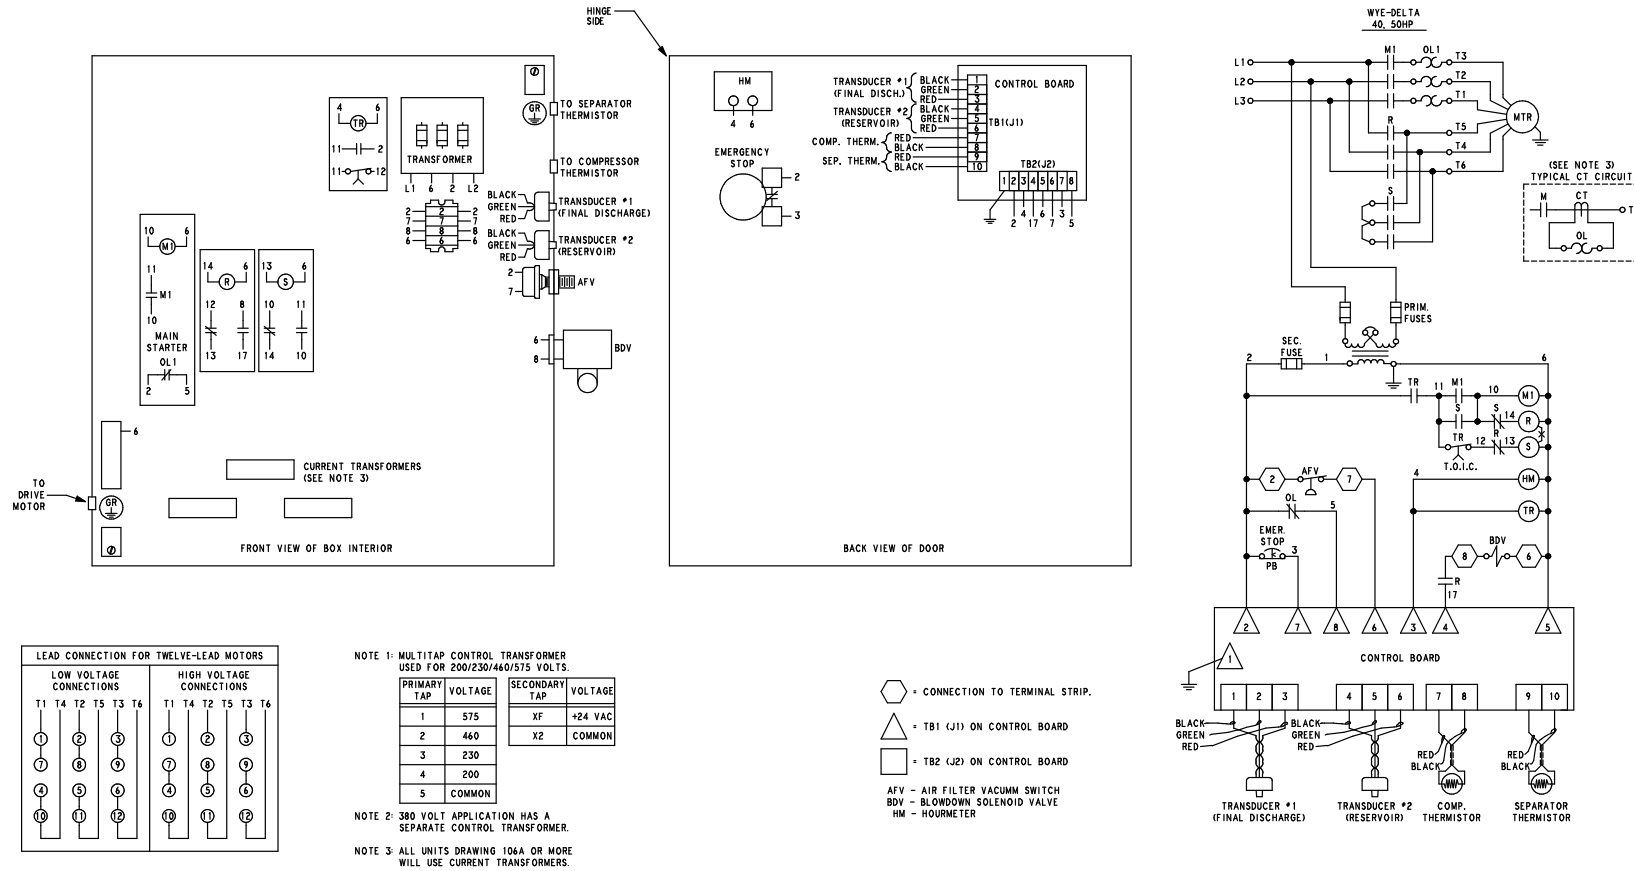

NOTE 1: MULTITAP CONTROL TRANSFORMER USED FOR 200/230/440/575 VOLTS.

PRIMARY TAP	VOLTAGE	SECONDARY TAP	VOLTAGE
1	575	XF	+24 VAC
2	460	Y2	COMMON
3	230		
4	200		
5	COMMON		

NOTE 2: 380 VOLT APPLICATION HAS A SEPARATE CONTROL TRANSFORMER.

NOTE 3: ALL UNITS DRAWING 106A OR MORE WILL USE CURRENT TRANSFORMERS.

○ = CONNECTION TO TERMINAL STRIP.

△ = TB1 (J1) ON CONTROL BOARD

□ = TB2 (J2) ON CONTROL BOARD

AFV - AIR FILTER VACUUM SWITCH
BDV - BLOWDOWN SOLENOID VALVE
HM - HOURMETER

205EDE546
(Ref. Drawing)

FIGURE 4-11 - WIRING DIAGRAM - WYE DELTA

SECTION 5 LUBRICATION OIL COOLER, OIL FILTER & SEPARATOR

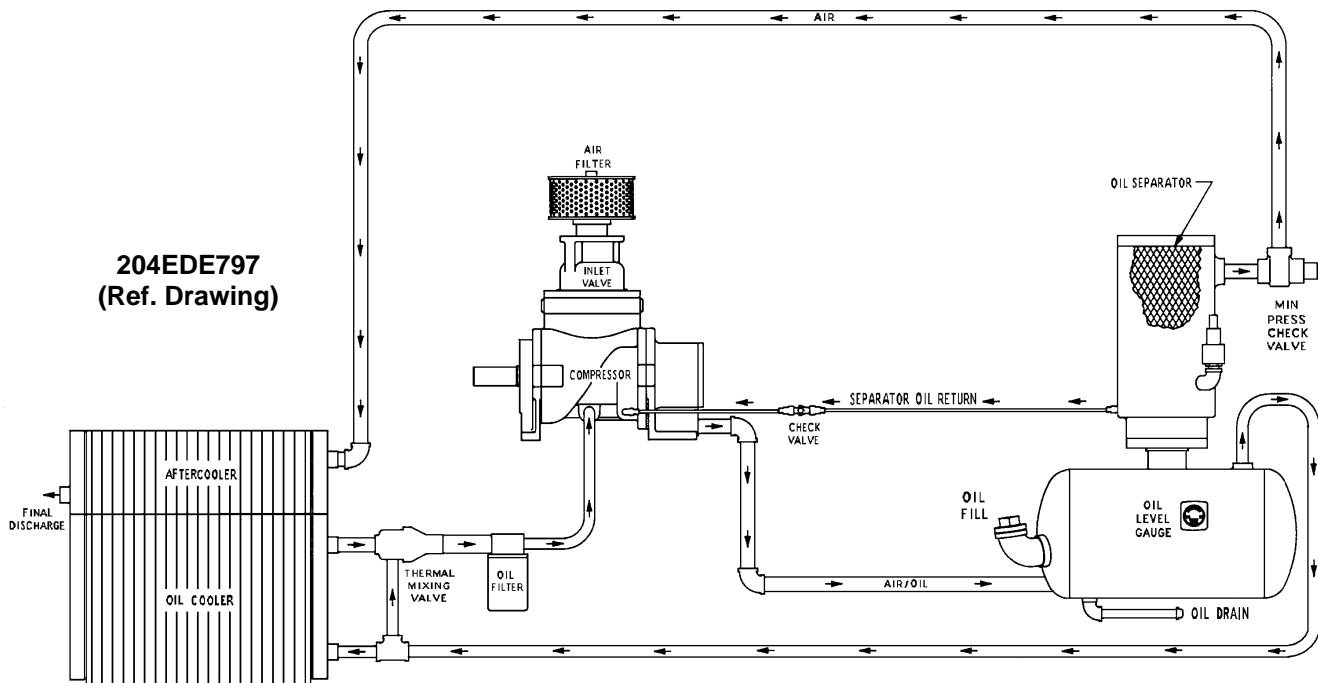


FIGURE 5-1 – FLOW DIAGRAM – AIR-OIL SYSTEM

COMPRESSOR OIL SYSTEM (FIGURE 5-1) cools the compressor, lubricates moving parts and seals internal clearances in the compression chamber.

The oil inlet line is connected at the bottom of the oil reservoir. Air pressure in the oil reservoir forces oil through the oil cooler, thermostatic mixing valve, oil filter and into the compressor main oil gallery.

The oil passes through internal passages for lubrication, cooling and sealing. The air-oil mixture is then discharged to the oil reservoir where a large part of the entrained oil drops out of the air stream; the air then passes through the final oil separator where most of the remaining oil is removed. The separated oil is returned to the compressor and the air passes to the final discharge line.

RECOMMENDED LUBRICANT – Gardner Denver® compressors are factory filled with AEON™ lubricants. These lubricants are formulated to the highest quality standards and are factory authorized, tested and approved for use in rotary screw compressors. AEON™ lubricants are available through your authorized Gardner Denver compressor distributor.

OIL SPECIFICATIONS – The recommended compressor lubricant is Gardner Denver AEON 4000 Lubricating Coolant which can be used for year-round operation except as noted in the “High Temperature Operation” paragraph below, or low temperature, see “Installation for Cold Weather,” page 10.

AEON™ 4000 Lubricating Coolant is a superior petroleum base lubricant formulated and containing additives for use in Gardner Denver compressors.



CAUTION

Specific AEON lubricants are recommended for use in this equipment. Other lubricants may cause excessive carryover or compressor damage. Do not mix different types of lubricants or use inferior lubricants.

HIGH TEMPERATURE OPERATION – If the discharge temperature is sustained between 200° to 210°F (93° to 99°C) for a period of more than four (4) hours due to continuing high ambient air temperature, use Gardner Denver® AEON 9000 SP Lubricating Coolant which is a superior synthetic lubricant. Short periods of up to four (4) hours of sustained discharge temperatures up to 210°F (99°C) do not require a change from the recommended year-round lubricant AEON™ 4000.


COLD AMBIENT OPERATION – See “Installation for Cold Weather Operation,” page 10, and FIGURE 2–3, page 11.


ADDITION OF OIL BETWEEN CHANGES must be made when the oil level is at the bottom of the red range on the gauge as read while the unit is running.

To add oil, follow these steps:

1. Be sure the unit is completely off and that no air pressure is in the oil reservoir.
2. Disconnect, tag and lockout the power supply to the starter.
3. Wipe away all dirt around the oil filler plug.
4. Remove the oil filler plug and add oil as required to return the oil level to the center of the green range.
5. Install the oil filler plug, run and check for leaks.

DO NOT OVERFILL . The quantity required to raise the oil level from “ADD” to “FULL” is shown in FIGURE 5–2. Repeated addition of oil between oil changes may indicate excessive oil carry-over and should be investigated.

 DANGER
Air/oil under pressure will cause severe personal injury or death. Shut down compressor, relieve system of all pressure, disconnect, tag and lockout power supply to the starter before removing valves, caps, plugs, fittings, bolts, and filters.

 DANGER
Compressor, air/oil reservoir, separation chamber and all piping and tubing may be at high temperature during and after operation.

 CAUTION
Excessive oil carry-over can damage equipment. Never fill oil reservoir above the “FULL” marker.


LUBRICANT CHANGE PROCEDURE – Upgrading to a longer life lubricant is essentially a very worthwhile practice. Following are the primary steps to be completed when upgrading or changing the type of lubricant.

1. Thoroughly drain system:
 - Drain oil from air end and cooler while hot.
 - Break low point connections and drain oil from pipe runs.
 - Dump oil from the filter and reinstall used filter.


	40 & 50 HP (30 & 37 KW)
Refill Capacity For Normal Oil Change	5.5 U.S. Gallons (20.75 Liters)
Red to Yellow Range	1.25 U.S. Gallons (4.75 Liters)

FIGURE 5–2 – APPROXIMATE OIL SYSTEM CAPACITIES


2. Fill the system with a 50 percent charge of the new lubricant:
 - Start the machine and stay there to observe.
 - Allow the machine to run about five minutes at temperature, or until temperature stabilizes, then shut down.
3. Thoroughly drain the machine.
4. Change to a new filter and separator.
5. Fill the system with a full charge of the new lubricant.
6. Machine should then be run normally, however, total run time after the initial changeout should be 50 percent of normal anticipated service life of the new lubricant.
 - Drain all lubricant from the system, change the filter and separator, and replace with a full charge of the new lubricant.
7. Subsequent lubricant changeouts should be at normal intervals. (See “Oil Change Interval” and chart, FIGURE 5–3.)

 **DANGER**

Air/oil under pressure will cause severe personal injury or death. Shut down compressor, relieve system of all pressure, disconnect, tag and lockout power supply to the starter before removing valves, caps, plugs, fittings, bolts, and filters.


 **WARNING**

High temperature operation can cause damage to equipment or personal injury. Do not repeatedly restart the unit after high temperature stops operation. Find and correct the malfunction before resuming operation.

 **WARNING**

All materials used in Gardner Denver® compressor units are compatible with AEON™ 9000 SP Lubricating Coolant. Use caution when selecting downstream components such as air line lubricating bowls, gaskets and valve trim.

AEON™ 9000 SP Synthetic Lubricant is not compatible with low nitrile Buna N or acrylic paints. AEON™ 9000 SP is compatible with most air system downstream components.

 **CAUTION**

Improper equipment maintenance with use of synthetic lubricants will damage equipment. Oil filter and oil separator change intervals remain the same as for AEON™ 4000 — See Maintenance Schedule, page 38.

Discharge Temperature	AEON 4000 Change Interval	AEON 9000 SP Change Interval
Up to 180°F (82°C)	4000 hrs.	8000 hrs.
180° to 190°F (82° to 88°C)	3000 hrs.	6000 hrs.
190° to 200°F (88° to 93°C)	2000 hrs.	4000 hrs.
200°F+ (93°C)	1000 hrs.	2000 hrs.

FIGURE 5-3 – OIL CHANGE INTERVAL

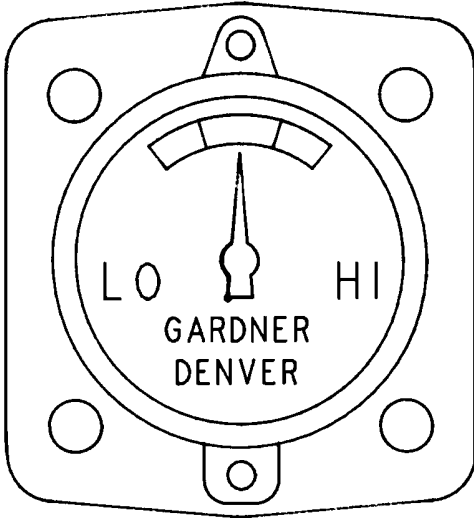


FIGURE 5-4 – OIL LEVEL GAUGE

Material Safety Sheets (MSDS) are available for all AEON lubricants from your authorized Gardner Denver distributor or by calling 217-222-5400.

OIL LEVEL GAUGE (FIGURE 1-3, page 3 and FIGURE 5-4) indicates the amount of oil in the oil reservoir. Read oil level only when unit is on. In operation the oil level will fluctuate as the compressor loads and unloads. Add oil only when the oil is at the bottom of the red range on the gauge as read when the compressor is on. Drain oil only when the oil level is above the center of the green range on the gauge as read when the compressor is on.

MOISTURE IN THE OIL SYSTEM – In normal humidity and with normal operating temperatures and pressures, the thermal mixing valve controls the oil temperature and prevents moisture contamination of the oil. Unusual cooling of the oil reservoir, short loaded cycle in high humidity or malfunctions of the thermal valve may result in moisture in the oil system which is detrimental to compressor lubrication and could cause oil carryover. If moisture is observed in the oil reservoir, drain the moisture and correct the condition causing the accumulation. See “Compressor Oil System Check,” page 33 and “Thermal Control (Thermostatic Mixing) Valve,” page 32.

OIL CHANGE INTERVAL – Recommended oil change intervals are based on oil temperature. FIGURE 5-3, page 29, shows how the change interval is affected by temperature.

When operating conditions are severe (very dusty, high humidity, etc.), it will be necessary to change the oil more frequently. Operating conditions and the appearance of the drained oil must be surveyed and the oil

change intervals planned accordingly by the user. Gardner Denver® offers a free oil analysis program with the AEON™ lubricants and we recommend a sample be sent in at 100 hours on a new unit.

DRAINING AND CLEANING OIL SYSTEM

DANGER

Air/oil under pressure will cause severe personal injury or death. Shut down compressor, relieve system of all pressure, disconnect, tag and lockout power supply to the starter before removing valves, caps, plugs, fittings, bolts, and filters.

Always drain the complete system. Draining when the oil is hot will help to prevent varnish deposits and carry away impurities.

To drain the system, use one of the following methods:

1. If the unit is not elevated high enough to use the oil reservoir drain line to drain oil, a small hand, electric or air operated pump should be used to drain reservoir through the oil filler opening or from the drain valve.
2. If the unit is elevated so that the oil reservoir drain can be used, empty the oil reservoir through the drain valve to a suitable container or sump.
3. If the drained oil and/or the oil filter element are contaminated with dirt, flush the entire system: reservoir, oil cooler, mixing valve and lines. Inspect the oil separator elements for dirt accumulation; replace if necessary. If a varnish deposit exists, contact the factory for recommendations for removal of the deposit and prevention of varnish.

FILLING OIL RESERVOIR

DANGER

Air/oil under pressure will cause severe personal injury or death. Shut down compressor, relieve system of all pressure, disconnect, tag and lockout power supply to the starter before removing valves, caps, plugs, fittings, bolts, and filters.

 **DANGER**

Compressor, air/oil reservoir, separation chamber and all piping and tubing may be at high temperature during and after operation.

1. Be sure the unit is completely off and that no air pressure is in the oil reservoir.
2. Disconnect, tag and lockout the power supply to the starter.
3. Wipe away all dirt around the oil filler plug.
4. Remove the oil filler plug and add oil as required to return the oil level to the center of the green range on the gauge.
5. Install the oil filler plug and operate the unit for about a minute allowing oil to fill all areas of the system. Check for leaks.
6. Shut down unit, allowing the oil to settle, and be certain all pressure is relieved.
7. Add oil, if necessary, to bring level to the center of the green range on the gauge.

On unloaded operation and after shutdown some oil will drain back into the oil reservoir and the oil level will read over "FULL". DO NOT DRAIN OIL TO CORRECT. On the next start, oil will again fill the system and the gauge will indicate operating at the proper level. DO NOT OVERFILL as oil carryover will result. The quantity of oil required to raise the oil level from "ADD" to "FULL" is shown in FIGURE 5-2, page 28. Repeated addition of oil between oil changes may indicate excessive oil carryover and should be investigated.

Use only CLEAN containers and funnels so no dirt enters the reservoir. Provide for clean storage of oils. Changing the oil will be of little benefit if done in a careless manner.

 **CAUTION**

Excessive oil carry-over can damage equipment. Never fill oil reservoir above the "FULL" marker.

COMPRESSOR OIL FILTER (FIGURE 1-2, page 2)
– This replaceable element filter is a vital part in maintaining a trouble-free compressor, since it removes dirt and abrasives from the circulated oil. The filter is equipped with a relief valve that opens in the event the

element becomes dirty enough to block the flow of oil.

 **CAUTION**

Improper oil filter maintenance will cause damage to equipment. Replace filter element every 1000 hours of operation. More frequent replacement could be required depending on operating conditions. A filter element left in service too long may damage equipment.

Use only the replacement element shown on the filter tag or refer to the parts list for the part number. Use the following procedure to replace the filter element. Do not disturb the piping.

 **DANGER**

Air/oil under pressure will cause severe personal injury or death. Shut down compressor, relieve system of all pressure, disconnect, tag and lockout power supply to the starter before removing valves, caps, plugs, fittings, bolts, and filters.

 **DANGER**

Compressor, air/oil reservoir, separation chamber and all piping and tubing may be at high temperature during and after operation.

1. Stop the unit and be sure no air pressure is in the oil reservoir.
2. Remove the spin-on element.
3. Clean the gasket face of the filter body.
4. Coat the new element gasket with clean lubricant used in the unit.
5. Screw the new element on the filter body and tighten by hand. DO NOT OVERTIGHTEN ELEMENT.
6. Run the unit and check for leaks.

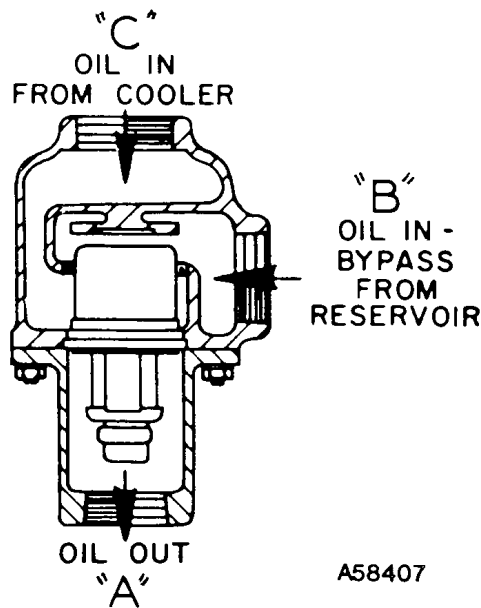


FIGURE 5-5 – THERMOSTATIC MIXING VALVE

COMPRESSOR OIL COOLER – (FIGURE 5-1, page 27) – The cooler fan is mounted on the compressor motor shaft; air is exhausted through the oil cooler and away from the unit. Do not obstruct air flow to and from the oil cooler. Allow a minimum of two (2) feet (.6M) clearance around the cooler. Keep both faces of the cooler core clean for efficient cooling of compressor oil.

THERMAL CONTROL (THERMOSTATIC MIXING) VALVE (FIGURE 5-5) is installed in the system as shown in FIGURE 5-1, page 27. This valve is used to control the temperature of the oil. On start-up with unit cold, the element is open to bypass, allowing oil to pass directly from the reservoir to compressor during warm-up. As oil warms, the element gradually closes to the bypass allowing more of the oil from the cooler to mix with oil from the bypass.

After the unit is warmed up, the mixing valve maintains oil injection temperature into the compressor at a minimum of 170°F (77°C). This system provides proper compressor warm-up and prevents moisture contamination of the oil.

To check the element, heat in oil – it should be fully extended at 170°F (77°C). If the unit shuts down due to high air discharge temperature, the cause may be that the element is stuck open to the bypass, in which case bypass lines (FIGURE 5-1, page 27) will be hot to touch and lines out of mixing valve much cooler. When flushing the oil system, remove the mixing valve and clean all parts thoroughly.

OIL RESERVOIR – The oil reservoir-separator combines multiple functions into one vessel. The lower half

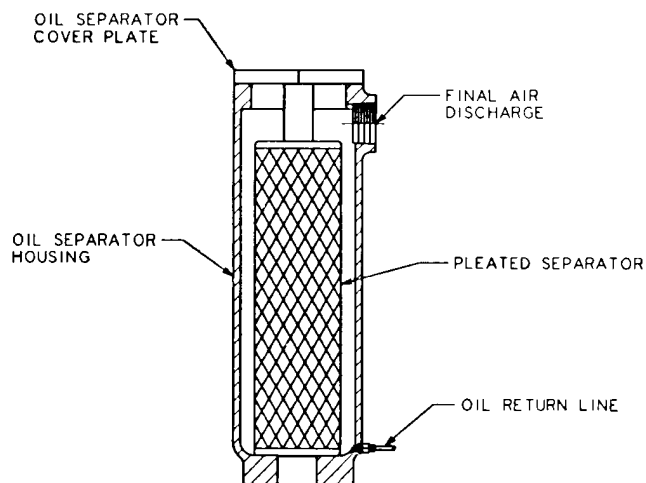


FIGURE 5-6 – OIL SEPARATOR

is the oil reservoir, providing oil storage capacity for the system and the top portion, a primary oil separation means. The reservoir also provides limited air storage for control and gauge actuation.

COMPRESSOR (G-D ELIMINATOR) OIL SEPARATOR located in a separate housing, consists of a renewable cartridge-type separator element and provides the final removal of oil from the air stream. See FIGURE 5-6.

Oil impinging on the inside of the separator element drains directly back into the oil reservoir by gravity. Oil collected outside the element is returned through tubing to the compressor cylinder.

Oil carry-over through the service lines may be caused by a faulty oil separator, overfilling of the oil reservoir, oil that foams, oil return line malfunction, or water condensate in the oil. If oil carryover occurs, inspect the separator only after it is determined that the oil level is not too high, the oil is not foaming excessively, the oil return tube from the bottom of the separator to the compressor cylinder is not clogged or pinched off, the check valve in the oil return is functioning properly, and there is not water or an oil/water emulsion in the oil.

Oil carry-over malfunctions of the oil separator are usually due to using elements too long, heavy dirt or varnish deposits caused by inadequate air filter service, use of improper oil, or using oil too long for existing conditions. Excessive tilt angle of the unit will also hamper separation and cause oil carry-over.

Oil separator element life cannot be predicted; it will vary greatly depending on the conditions of operation, the quality of the oil used and the maintenance of the

oil and air filters. The condition of the separator can be determined by pressure differential or by inspection.

Pressure Differential Gauging – The “CHANGE SEPARATOR” message will flash when the pressure differential across the oil separator reaches approximately 8 PSI (.6 Bar). Replace the oil separator element at this time. If ignored, the unit will shut down and the display will indicate shutdown and the change separator LED will be on when the pressure differential reaches 15 PSI (1 Bar).

To measure the pressure differential, see “Pressure and Temperature Digital Readouts” in Section 4, page 20. Simply subtract the downstream reading from the upstream reading.

 **CAUTION**

Using an oil separator element at excessive pressure differential can cause damage to equipment. Replace the separator when the “Change Separator” advisory appears.

NOTICE

A sudden drop of zero pressure differential or sudden heavy oil carryover may indicate a ruptured element.

Inspection – After removal of separator element, shine a light inside the element to reveal areas of heavy dirt or varnish deposits or breaks (ruptures) in element media.

Removal Of Oil Separator For Inspection Or Replacement:

 **DANGER**

Air/oil under pressure will cause severe personal injury or death. Shut down compressor, relieve system of all pressure, disconnect, tag and lockout power supply to the starter before removing valves, caps, plugs, fittings, bolts, and filters.

 **DANGER**

Compressor, air/oil reservoir, separation chamber and all piping and tubing may be at high temperature during and after operation.

1. Be certain the unit is off and all system pressure is relieved.
2. Disconnect, tag and lockout the power supply to the starter.
3. Remove the screws holding the top plate to the separator housing. Lift the top plate from the separator housing.
4. Lift the separator from the separator housing.
5. Inspect and/or replace the separator as necessary. Be sure the o-ring is not damaged. Before installing (or re-installing) any separator, apply grease to the o-ring. Oil will be wiped off by the chamfer and the ring could be damaged.
6. Remove any gasket material adhering to the top of the plate or separator housing, and install the new gasket.
7. Lower the separator into the housing and center the separator on the chamfer. Press the separator down into the housing. Do not use excessive force as separator damage can occur.
8. Place the spacer on the indent in the separator. Seat the top plate to the separator, spacer and separator housing. Install and tighten all cap screws.
9. Run the unit and check for leaks.

COMPRESSOR OIL SYSTEM CHECK – The following readings are based on ambient temperature of 80°F (27°C) with the system in good condition. The compressor should be at operating temperature at the time of the checks. One-half hour of loaded operation is usually sufficient to reach level-out operating temperatures.

Air and Oil Discharge Temperature – 170° to 200°F (77° to 93°C)– Read at the gauge on the instrument panel or check with a thermometer at the discharge housing.

Compressor Oil Inlet Temperature – 165° to 175°F (74° to 79°C) – Install a tee at the oil filter outlet and check with a thermometer.

Oil Inlet Pressure – Check at the fitting in the line near the compressor oil inlet. With air receiver pressure at 100 psi (6.9 Bars), oil inlet pressure should be 65 to 75 psig (4.5 to 5.2 Bars).

Oil Cooler Oil Pressure Differential (Air-Cooled Radiator) – Check differential across the oil system by measuring oil inlet pressure as described above.

Oil Cooler Temperature Differential (Air-Cooled

Radiator) – The oil temperature differential depends on the temperature of the air at the oil cooler fan and cleanliness of the core faces. As ambient temperatures and core restrictions increase, the oil cooler outlet temperature will increase. The oil inlet temperature is approximately the same as the air discharge temperature – see the gauge on the instrument panel. The outlet oil temperature may be checked by installing a tee at the oil filter outlet.

SECTION 6 AIR FILTER

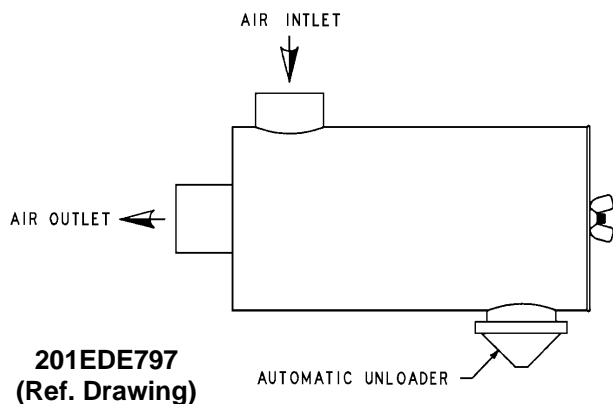


FIGURE 6-1 – HEAVY DUTY AIR FILTER

GENERAL – The air filter must receive proper maintenance if maximum service is to be obtained from the unit. Establishing adequate and timely filter service is MOST IMPORTANT. A wide range of operating hours is possible. With wide variation of dust conditions encountered, only experience can determine the proper time interval for servicing filters.

HEAVY-DUTY AIR FILTER (FIGURE 6-1) furnished as standard equipment on units with an enclosure is a heavy-duty washable element dry type air filter. The air filter must receive proper maintenance if maximum service is to be obtained from the unit. Establishing adequate and timely filter service is MOST IMPORTANT. Improperly maintained air filter can cause a loss of compressor air delivery.

Filter Element – Service the air filter element when the “CHANGE AIR FILTER” LED is illuminated. Clean every 50 to 150 operating hours depending on dust conditions.

NOTICE

Use only genuine Gardner Denver air filter elements on Gardner Denver compressor units. Genuine parts are available through your authorized Gardner Denver distributor.

To service:

1. Remove the wingnut and pull out the filter element.

2. Visually inspect the element. If cleaning is not necessary, reinstall the filter element. If the element requires cleaning, go through steps 3, 4 and 5.
3. Wash the element by soaking about 15 minutes in warm water with a mild nonsudsing detergent. Rinse the element thoroughly with clean water; a hose may be used if the water pressure does not exceed 40 psig (2.8 Bars).
4. Inspect the element for ruptures or cracks in the pleated media; replace the element if any are found. Inspect the gasket on the bottom (outlet end) of the element; replace the entire element if the gasket is damaged, a spare element will keep downtime to a minimum.
5. Allow the element to air dry COMPLETELY. Do not expose the element to heat over 150° F (66° C). Install the element in the filter body and fasten securely with the wing nut.

WARNING


Do not oil this element. Do not wash in inflammable cleaning fluids. Do not use solvents other than water. Improper cleaning may damage the element.

CAUTION

Never operate the unit without the element. Never use elements that are damaged, ruptured or wet. Never use gaskets that won't seal. Keep spare elements and gaskets on hand to reduce downtime. Store elements in a protected area free from damage, dirt and moisture. Handle all parts with care.

Filter Element Life – The element should be replaced after six (6) cleanings or if:

1. Visual inspection indicates a rupture, crack or pin hole in the pleated media. Inspection should be

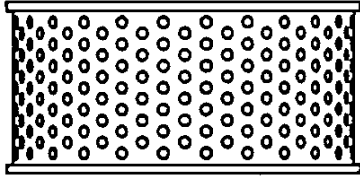

201EDE797
(Ref. Drawing)

**FIGURE 6-2 – STANDARD DUTY AIR FILTER,
OPTIONAL, DOMESTIC ONLY**

done by placing a bright light inside the element.

2. Pressure drop through a filter with a freshly cleaned element is below three (3) inches (76 mm) of water with the compressor running at full load – this would indicate a rupture or crack.

Inlet Tube – Inspect the inlet screen and tube for dirt accumulation each time the filter is serviced. Clean the tube when required by ramming a clean dry cloth through the tube. Wipe the inside of the filter body to remove any dirt falling from the inlet tube before reinstalling the element.

Causes of short element life include: severe dust conditions, infrequent servicing, improper cleaning, or contamination by oil or chemical fumes.

STANDARD DUTY AIR FILTER (OPTIONAL, DOMESTIC ONLY) – (FIGURE 6-2) – Service and replacement instructions are given in the following sections: Filter Element and Filter Element Life.

Filter Element – The element should be serviced when inspection indicates an accumulation of dirt on the outside of the element. Clean every 100 to 500 operating hours depending on dust conditions. Inspect every few days until experience determines the proper time interval for servicing.

To Service:

1. Remove the element from the filter housing.
2. Blow off excess dirt with air nozzle. Direct air blast parallel to element pleats at a slight upward angle. Do not point air blast directly at the element.
3. Elements contaminated with dry dirt only:
 - (a) Mix a sufficient amount of warm water and household detergent to allow the element to be fully submerged.

- (b) Place the element into the cleaning solution and allow to soak for five minutes. Agitate in solution for two more minutes.

Elements contaminated with oil or greasy dirt deposits:

- (a) Mix a sufficient amount of the following cleaning solution to allow the element to be fully submerged. To one gallon of lukewarm water add four tablespoons of mild household detergent and one-half teaspoon of trisodium phosphate. Mix well.
- (b) Place element into cleaning solution and allow to soak for five minutes. Agitate in solution and allow to soak for five minutes. Agitate in solution for two minutes and remove.
- (c) Discard dirty solution and mix a new batch of cleaning solution as above.
- (d) Place element in clean solution and agitate for five minutes

4. Remove from solution, drain, and flush with clear water from the inside out by using a hose. Use a gentle water stream and do not point directly at the element
5. Inspect for rupture by placing a bright light inside the element. The slightest rupture requires replacement of the element
6. Allow the element to dry before reinstalling. A wet element may collapse during operation.

Filter Element Life – The element should be replaced after eight cleanings or if visual inspection indicates a rupture, crack or pin hole in the pleated media. Inspection should be done by placing a bright light inside the element.

 **WARNING**

Do not oil this element. Do not wash in other cleaning fluids. Never operate unit without element. Never use elements that are damaged or ruptured. Never use elements that won't seal. Keep spare elements on hand to reduce downtime. Store elements in a protected area free from damage, dirt and moisture. Handle filter parts with care.

SECTION 7 BELT DRIVE

Proper drive belt tension and alignment are provided at the factory, however, good practice dictates checking the drive alignment and tension after shipment and before initial start-up.

Sheaves should align straight across the front with a straight edge. The best tension is just enough tension to keep belts from “squealing” on start-up.

CAUTION

Excessive belt tension can damage the equipment. Tension the belts as shown in FIGURE 7-1.

Belts can be changed when necessary by the following instructions. First, disconnect, tag and lockout power to the starter. Then remove the wire guard. Then loosen, but do not remove, the four motor foot nuts.

Next, use the adjusting screws in the motor base to loosen belt tension. Remove the belts, and replace with new belts. Check for correct belt tension and re-attach the wire guard.


CAUTION

Interference between the fan and the orifice can damage equipment. Be certain the orifice has even clearance around the fan before starting the unit.

CHECKING BELT TENSION – Using a spring scale, apply a perpendicular force to each belt at the midpoint of the span and measure the deflection. Correct deflection force and deflection are shown in FIGURE 7-1. To tighten belts, merely increase the center distance.

NOTICE

When a new set of belts is installed on a drive, the initial deflection force should be 1/3 greater than shown in FIGURE 7-1. Recheck tension frequently during the first 24 hours of operation.

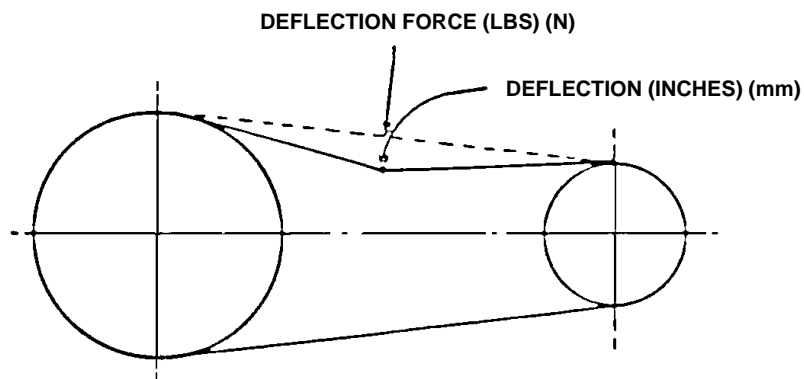

Motor H.P. (KW)	No. Of Belts	Deflection Force Pounds (Newtons) (per belt)	Deflection In Inches (mm)
40 (30 KW)	4	6 to 8.5 (1.3 to 1.9)	3/8 (9.5)
50 (37 KW)	4	7 to 10 (1.5 to 2.2)	3/8 (9.5)

FIGURE 7-1 – BELT TENSION 3VX BELTS

SECTION 8 MAINTENANCE SCHEDULE

SERVICE CHECK LIST –

Air Filter – Operating conditions determine frequency of service. The “CHANGE AIR FILTER” display will flash to signal that the air filter requires servicing or changing. See “Air Filter,” Section 6, page 35.

Oil Separator – Operating conditions determine frequency of service. The “CHANGE SEPARATOR” display will flash to signal that oil separator element requires changing. See “Compressor Oil Separator” in Section 5, page 32, for further details.

Motor Lubrication – Refer to Section 2, page 12, and Maintenance Schedule Chart below.

Every 8 Hours Operation

1. Check the reservoir oil level – add oil if required. See Section 5, page 38. If oil consumption is high, refer to “Excessive Oil consumption, page 40.
2. Observe if the unit loads and unloads properly.
3. Check discharge pressure and temperature.
4. Drain the moisture trap in the control system. See Section 4, page 16.
5. Check Panel LED’s for advisories.

Every 125 Hours Operation

1. Check for dirt accumulation on oil/aftercooler core faces and the cooling fan. If cleaning is required, clean the exterior fin surfaces of the cores by blowing compressed air carrying a nonflammable safety solvent in a direction opposite that of the cooling fan air flow. This cleaning operation will keep the exterior cooling surfaces clean and ensure effective heat dissipation.

Every 1000 Hours Operation

1. Change the oil filter element.

Every 4000 Hours Operation

1. Change the compressor lubricant. UNDER ADVERSE CONDITIONS, CHANGE MORE FREQUENTLY (refer to “Oil Change Interval”, page 29). Flush system if required.

Every Year

1. Check the relief valve for proper operation. See Section 4, page 17.

MAINTENANCE SCHEDULE (See detail notes above)

Maintenance Action	If Panel LED is Lit	Every 8 Hours	Every 125 Hours	Every 1000 Hours	Every 4000* Hours	Every Year
Change Air Filter	•					
Change Oil Separator	•					
Check Reservoir Oil Level		•				
Check For Proper Load/Unload		•				
Check Discharge Pressure/Temp		•				
Check Dirt Accumulation on Cooler			•			
Change Oil Filter Element	•			•		
Change Compressor Lubricant (AEON 4000)	•				•	
Check Relief Valve						•

* See Oil Change Interval Chart, FIGURE 5–3, Page 29, for specific lubricant life.

SECTION 9 TROUBLE SHOOTING

SYMPTOM	POSSIBLE CAUSE	REMEDY
Compressor fails to start.	<ol style="list-style-type: none"> 1. Wrong lead connections. 2. Blown fuses in control box. 3. Motor starter overload heaters tripped. 4. Pressure in reservoir. 5. Read error message on control panel. See Section 4. 	<ol style="list-style-type: none"> 1. Change leads. 2. Replace fuse. 3. Reset and investigate cause of overload. 4. Inspect blowdown valve. 5. Replace switch.
Compressor starts but stops after a short time.	<ol style="list-style-type: none"> 1. High discharge temperature. 2. High discharge temperature switch malfunction. 3. Blown fuse in starter/control box. 4. Motor starter overload heaters trip. 	<ol style="list-style-type: none"> 1. See "High Discharge Air Temperature," this section, page 40. 2. Replace switch. 3. Replace fuse (investigate if fuses continue to blow). 4. Reset and investigate cause of overload.
Compressor does not unload (or load).	<ol style="list-style-type: none"> 1. Improperly adjusted control. 2. Air leak in control lines. 3. Restricted control line. 4. Subtractive pilot or blow-down valve malfunction. 	<ol style="list-style-type: none"> 1. Refer to Section 4, page 20, and adjust control. 2. Determine source of leak and correct. 3. Clean control lines. 4. Repair, clean or replace valve.
Compressor cycles from load to unload excessively.	<ol style="list-style-type: none"> 1. Insufficient receiver capacity. 2. Restriction in control tubing. 3. Subtractive pilot setting too high. 	<ol style="list-style-type: none"> 1. Increase receiver size. 2. Inspect and clean control tubing. 3. Adjust the valve. See Section 4, page 23.

SYMPTOM	POSSIBLE CAUSE	REMEDY
Compressor is low on delivery and pressure.	<ol style="list-style-type: none"> 1. Restricted air filter. 2. Sticking inlet valve. 3. Subtractive pilot or unload pressure adjusted too low. 4. Minimum pressure valve stuck closed. 	<ol style="list-style-type: none"> 1. Clean or replace filter. 2. Inspect and clean inlet valve. 3. Adjust the valve or unload pressure. See page 23. 4. Replace valve.
High discharge air temperature.	<ol style="list-style-type: none"> 1. Thermostatic mixing valve stuck open. 2. Dirty or clogged cooler face. 3. Insufficient cooling air flow. 4. Clogged oil filter or cooler (interior). 5. Low compressor oil. 	<ol style="list-style-type: none"> 1. Repair or replace valve. 2. Clean cooler. 3. Provide unrestricted supply of cooling air. 4. Replace filter or clean cooler. 5. Add oil to proper level.
Excessive Oil Consumption	<ol style="list-style-type: none"> 1. Oil carryover through lines. 2. Oil leaks at all fittings and gaskets. 	<ol style="list-style-type: none"> 1. See "Oil Carryover", in this section. 2. Tighten or replace fittings or gasket.
Oil Carry-Over	<ol style="list-style-type: none"> 1. Overfilling the reservoir. 	<ol style="list-style-type: none"> 1. Drain excess oil from system.

 **DANGER**

Air/oil under pressure will cause severe personal injury or death. Shut down compressor, relieve system of all pressure, disconnect, tag and lockout power supply to the starter before removing valves, caps, plugs, fittings, bolts, and filters.

- | | |
|--|---|
| 2. Clogged, broken or loose oil return lines | 2. Tighten or replace faulty lines. |
| 3. Ruptured oil separator element. | 3. Replace element. |
| 4. Loose assembly. | 4. Tighten all fittings and gaskets. |
| 5. Foam caused by use of incorrect oil. | 5. Use Gardner Denver® AEON™ 4000 or 9000 SP Lubricating Coolant. |
| 6. Inoperative minimum pressure valve. | 6. Replace valve. |

SYMPTOM	POSSIBLE CAUSE	REMEDY
Oil Carry-Over (Continued)	<ol style="list-style-type: none"> 7. Operation at elevated discharge temperatures. 8. Scavenge line check valve failure. 9. Water condensate in oil. 	<ol style="list-style-type: none"> 7. Reduce temperature. See High Discharge Air Temperature, page 40, this section. 8. Replace check valve. 9. Check oil reservoir temperature and if low, change thermal mixing valve element to higher temperature.
"CHANGE SEPARATOR" light (Flashing or on steadily) <u>ON STARTUP</u>	<ol style="list-style-type: none"> 1. Separator differential is greater than 8 psid (.5 Bars). 2. Bad Transducer. 3. Misadjusted minimum pressure valve. 4. Sticky minimum pressure valve. 5. Defective minimum pressure valve. [Won't set at 65 psig (4.5 Bars)] 	<ol style="list-style-type: none"> 1. Change Separator. 2. Verify readings with mechanical gauges. If defective, replace with 88H242. 3. Set minimum pressure valve at 65 psig (4.5 Bars). 4. Disassemble and clean. 5. Rebuild or replace.
"CHANGE SEPARATOR" light (Flashing or on steadily) <u>WHILE RUNNING</u>	<ol style="list-style-type: none"> 1. Separator differential is greater than 8 psid (.5 Bars). 2. Electrical noise creating false readings. 3. Oil reservoir is overfilling. 4. Unit is rapidly cycling. 5. Defective transducer. 6. Plugged aftercooler, due to freezing or varnishing. 7. Oil reservoir shotgun improperly located. 	<ol style="list-style-type: none"> 1. Change Separator. 2. Make sure transducer wires are kept to a minimum length and are twisted. 3. Fill to proper level (see FIGURE 5-1, Section 5, page 27). 4. Adjust subtractive pilot. See Service Memo #248. (Add subtractive pilot if unit does not have one.) 5. Verify readings with mechanical gauges. If defective, replace with 88H242. 6. Clean or replace aftercooler. 7. Call factory for specifications.

SYMPTOM	POSSIBLE CAUSE	REMEDY
"MOTOR OVERLOAD" shutdown.	<ol style="list-style-type: none"> 1. Running compressor at a pressure over nameplate pressure. 2. Incoming voltage low or high. 3. Imbalanced voltage (check phase to phase). 4. Imbalanced amps. 5. Incorrect motor overload setting. 	<ol style="list-style-type: none"> 1. Lower pressure to nameplate. 2. Consult your power company. 3. If imbalance exceeds 5%, check incoming power. 4. Rotate 3 phase power leads. If the high reading stays on the same leg, the problem is with the motor. If the high reading moves with the lead, the problem is with the incoming power. 5. Set overload to motor nameplate amps.
"CHANGE AIR FILTER" light on.	<ol style="list-style-type: none"> 1. Dirty air filter. 	<ol style="list-style-type: none"> 1. Clean or replace.
"CHANGE AIR FILTER" light on, and <u>WILL NOT RESET.</u>	<ol style="list-style-type: none"> 1. Faulty vacuum switch. 2. Control board fault. 	<ol style="list-style-type: none"> 1. Measure the AC voltage between wire number 7 and wire number #6 at board. If the reading is zero, replace the vacuum switch. 2. Measure the AC voltage between wire number 7 and wire number #6 at board. If the reading is 24 volts, replace the control board.
"MOTOR OVERLOAD" shutdown. (<u>RELAY NOT TRIPPED</u>)	<ol style="list-style-type: none"> 1. Loose connections. 2. Control board fault. 	<ol style="list-style-type: none"> 1. Measure the AC voltage between wire number 5 and wire number #6 at board. If the reading is zero, tighten the connections. 2. Measure the AC voltage between wire number 5 and wire number #6 at board. If the reading is 24 volts, replace the control board.
"EO4", Emergency Stop will not clear.	<ol style="list-style-type: none"> 1. Loose connections or faulty switch. 2. Control board fault. 3. Contact block not properly installed. 	<ol style="list-style-type: none"> 1. Tighten connection or repair or replace switch. 2. Measure the AC voltage between wire number 3 and wire number #6 at board. If the reading is 24 volts, replace the control board. 3. Ensure contact block is fully snapped into left or right (not center) slot of switch operator.

SYMPTOM	POSSIBLE CAUSE	REMEDY
Erroneous Pressure Readings [135 – 150 psig constantly]. (9.3 – 10.3 Bars)	<ol style="list-style-type: none"> 1. Electrical noise creating false readings. 2. Loose connector. 3. Bad transducer. 	<ol style="list-style-type: none"> 1. Make sure transducer wires are kept to a minimum length and are twisted. 2. Measure the DC voltage between the green and black wires of the corresponding transducer at the control board with zero pressure on the transducer. If .460 to .540 volts, replace the plug-gable connector that connects transducers to the board. 3. Measure the DC voltage between the white and black wires of the corresponding transducer at the control board with <u>zero</u> pressure on the transducer. If 3.10 to 3.60 volts, replace the transducer.
Oil leak at the bottom of the seal housing.	<ol style="list-style-type: none"> 1. Gasket leaking. 2. Plug leak. 3. Capscrew leaking. 4. Shaft seal leaking. 	<ol style="list-style-type: none"> 1. Replace the gasket. 2. Repair. 3. Repair. 4. Change the seal.
Fuse on board blows.	<ol style="list-style-type: none"> 1. Bad board. 	<ol style="list-style-type: none"> 1. Remove all power from the unit by opening the main disconnect, replace fuse, energize main power. If fuse blows – replace board.
Fuse on transformer blows.	<ol style="list-style-type: none"> 1. Shorted coils on hour meter, starter coil, or blowdown valve. 	<ol style="list-style-type: none"> 1. If fuse does not blow, check for shorted coils.

NOTICE

Gardner Denver factory remanufactured replacement compressor air end units are available from your authorized distributor, on an exchange basis, for all rotary screw compressor units.

GENERAL PROVISIONS AND LIMITATIONS

Gardner Denver Machinery Inc. (the "Company") warrants to each original retail purchaser ("Purchaser") of its new products from the Company or its authorized distributor that such products are, at the time of delivery to the Purchaser, made with good material and workmanship. No warranty is made with respect to:

1. Any product which has been repaired or altered in such a way, in the Company's judgment, as to affect the product adversely.
2. Any product which has, in the Company's judgment been subject to negligence, accident, improper storage, or improper installation or application.
3. Any product which has not been operated or maintained in accordance with the recommendations of the Company.
4. Components or accessories manufactured, warranted and serviced by others.
5. Any reconditioned or prior owned product.

Claims for items described in (4) above should be submitted directly to the manufacturer.

WARRANTY PERIOD

The Company's obligation under this warranty is limited to repairing or, at its option, replacing, during normal business hours at an authorized service facility of the Company, any part which in its judgment proved not to be as warranted within the applicable Warranty Period as follows.

COMPRESSOR AIR ENDS

Compressor air ends, consisting of all parts within and including the compressor cylinder and gear housing, are warranted for 24 months from date of initial use or 27 months from date of shipment to the first purchaser, whichever occurs first.

Any disassembly or partial disassembly of the air end, or failure to return the "unopened" air end per Company instructions, will be cause for denial of warranty.

OTHER COMPONENTS

All other components are warranted for 12 months from date of initial use or 15 months from date of shipment to first purchaser, whichever occurs first.

LABOR TRANSPORTATION AND INSPECTION

The Company will provide labor, by Company representative or authorized service personnel, for repair or

replacement of any product or part thereof which in the Company's judgment is proved not to be as warranted. Labor shall be limited to the amount specified in the Company's labor rate schedule.

Labor costs in excess of the Company rate schedule amounts or labor provided by unauthorized service personnel is not provided for by this warranty.

All costs of transportation of product, labor or parts claimed not to be as warranted and, of repaired or replacement parts to or from such service facilities shall be borne by the Purchaser. The Company may require the return of any part claimed not to be as warranted to one of its facilities as designated by Company, transportation prepaid by Purchaser, to establish a claim under this warranty.

Replacement parts provided under the terms of the warranty are warranted for the remainder of the Warranty Period of the product upon which installed to the same extent as if such parts were original components.

DISCLAIMER

THE FOREGOING WARRANTY IS EXCLUSIVE AND IT IS EXPRESSLY AGREED THAT, EXCEPT AS TO TITLE, THE COMPANY MAKES NO OTHER WARRANTIES, EXPRESSED, IMPLIED OR STATUTORY, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY.

THE REMEDY PROVIDED UNDER THIS WARRANTY SHALL BE THE SOLE, EXCLUSIVE AND ONLY REMEDY AVAILABLE TO PURCHASER AND IN NO CASE SHALL THE COMPANY BE SUBJECT TO ANY OTHER OBLIGATIONS OR LIABILITIES. UNDER NO CIRCUMSTANCES SHALL THE COMPANY BE LIABLE FOR SPECIAL, INDIRECT, INCIDENTAL OR CONSEQUENTIAL DAMAGES, EXPENSES, LOSSES OR DELAYS HOWSOEVER CAUSED.

No statement, representation, agreement, or understanding, oral or written, made by any agent, distributor, representative, or employee of the Company which is not contained in this Warranty will be binding upon the Company unless made in writing and executed by an officer of the Company.

This warranty shall not be effective as to any claim which is not presented within 30 days after the date upon which the product is claimed not to have been as warranted. Any action for breach of this warranty must be commenced within one year after the date upon which the cause of action occurred.

Any adjustment made pursuant to this warranty shall not be construed as an admission by the Company that any product was not as warranted.

Gardner
Denver

For additional information contact your local representative or Gardner Denver Machinery Inc., Customer Service Department, 1800 Gardner Expressway, Quincy, Illinois 62301
Telephone: (800) 682-9868 FAX: (217) 224-7814



Sales and Service in all major cities.

For parts information, contact Gardner Denver, Master Distribution Center, Memphis, TN
Telephone: (800) 245-4946 FAX: (901) 542-6159

Specifications subject to change without notice.
Copyright 1996 Gardner Denver Machinery Inc.

Litho in U.S.A.