
GARDNER DENVER®

13-8-612
3rd Edition
January, 1999

**ELECTRA-SCREW® STATIONARY
BASE-MOUNTED,
BASE-MOUNTED with
INTEGRATED DRYER and
TANK- MOUNTED COMPRESSORS**

MODELS

EBB_BB – 7.5 HP (ES-7.5)

EBB_CB – 10 HP (ES-10.0)

EBB_DB – 15 HP (ESS-15.0)

EBB99C – 7.5 HP, 10 & 15 HP

**PARTS LIST &
OPERATING AND
SERVICE MANUAL**

**Gardner
Denver**

**TOTAL PRODUCT SUPPORT – GARDNER DENVER’S
CONTINUING COMMITMENT
TO YOUR AIR COMPRESSOR PERFORMANCE**

Commitment to total product support continues long after the purchase of your quality Gardner Denver® rotary screw compressor.

Gardner Denver original parts incorporate years of experience and improvements in design, materials and quality assurance. Maintaining your compressor investment with Gardner Denver® parts will insure protection for the air compressor unit and long, dependable service life.

Your authorized Gardner Denver® compressor distributor maintains a complete stock of all common maintenance parts, factory approved AEON™ lubricants, and Gardner Denver® factory warranted exchange air ends. In addition, authorized distributor technicians are factory trained, and can provide complete diagnostic, compressor maintenance and repair services.

This manual is designed to assist you in maintaining high performance and receiving many years of dependable service you expect from your Gardner Denver compressor.

REMANUFACTURED AIR ENDS

Whenever an air end requires replacement or repair, Gardner Denver® offers an industry unique, factory remanufactured air end exchange program. From its modern Remanufacturing Center in Indianapolis, IN, Gardner Denver is committed to supplying you with the highest quality, factory remanufactured air ends that are guaranteed to save you time, aggravation and money.

Immediately Available

Repair downtime costs you money, which is why there are over 200 remanufactured units in inventory at all times, ready for immediate delivery.

Skilled Craftsmen

Our Remanufacturing assembly technicians average over 20 years experience with air compression products.

Precision Remanufacturing

All potentially usable parts are thoroughly cleaned, inspected and analyzed. Only those parts that can be brought back to original factory specifications are remanufactured. Every remanufactured air end receives a new overhaul kit: bearings, gears, seals, sleeves and gaskets.

Extensive Testing

Gardner Denver® performs testing that repair houses just don't do. Magnaflux and ultrasonic inspection spot cracked or stressed castings, monochromatic light analysis exposes oil leaks, and coordinate measurement machine inspects to +/- .0001", insuring that all remanufactured air ends meet factory performance specifications.

Warranty

Gardner Denver backs up every remanufactured air end with a new warranty . . . 18 months from purchase, 12 months from service.

Gardner Denver remanufactured air ends deliver *quality without question . . . year in and year out.*

Call Gardner Denver for information on the air end exchange program and the name of your authorized distributor.

Phone Number: 800-245-4946 or
FAX: 901-542-6159

FOREWORD

Gardner Denver® Electra-Screw® compressors are the result of advanced engineering and skilled manufacturing. To be assured of receiving maximum service from this machine the owner must exercise care in its operation and maintenance. This book is written to give the operator and maintenance department essential information for day-to-day operation, maintenance and adjustment. Careful adherence to these instructions will result in economical operation and minimum downtime.

DANGER

Danger is used to indicate the presence of a hazard which will cause severe personal injury, death, or substantial property damage if the warning is ignored.

WARNING

Warning is used to indicate the presence of a hazard which can cause severe personal injury, death, or substantial property damage if the warning is ignored.

CAUTION

Caution is used to indicate the presence of a hazard which will or can cause minor personal injury or property damage if the warning is ignored.

NOTICE

Notice is used to notify people of installation, operation or maintenance information which is important but not hazard-related.

This book covers the following models:

| HP | PSI | Air Cooled |
|----------|--------------------|----------------------------|
| 7.5 | 100, 125, 150, 175 | EBBQBB EBBRBB EBBSBB |
| 10 | 100, 125, 150, 175 | EBBQCB EBBRCB EBBSCB |
| 15 | 100, 125, 150, 175 | EBBQDB EBBRDB EBBSDB |
| 7.5 – 15 | 100, 125, 150, 175 | EBB99C |

TABLE OF CONTENTS

PAGE

| | |
|---|------------|
| Total Product Support – Gardner Denver’s Continuing Commitment To Your Air Compressor Performance | i |
| Remanufactured Air Ends | i |
| Foreword | ii |
| Maintain Compressor Reliability And Performance With Genuine Gardner Denver® Compressor Parts and Support Services | iv |
| Instructions for Ordering Repair Parts | iv |
| Index | v thru vii |
| List of Illustrations | viii |
| Model EBB – 7.5, 10 & 15 HP Electra–Screw® Compressors Matrix/Menu | ix |
| Section 1, General Information | 1 |
| Section 2, Installation | 8 |
| Section 3, Starting & Operating Procedures | 13 |
| Section 4, Controls & Instrumentation | 15 |
| Section 5, Lubrication, Oil Cooler, Oil Filter & Separator | 24 |
| Section 6, Air Filter | 30 |
| Section 7, Belt Drive | 31 |
| Section 8, Maintenance Schedule | 32 |
| Section 9, Trouble Shooting | 33 |
| Section 10, Parts List | 38 |
| Section 11, Optional Integrated Dryer, Service Instructions and Parts List | 60 |
| Warranty | Last Page |

**MAINTAIN COMPRESSOR RELIABILITY AND PERFORMANCE WITH
GENUINE GARDNER DENVER® COMPRESSOR
PARTS AND SUPPORT SERVICES**

Gardner Denver® Compressor genuine parts, manufactured to design tolerances, are developed for optimum dependability — specifically for Gardner Denver compressor systems. Design and material innovations are the result of years of experience with hundreds of different compressor applications. Reliability in materials and quality assurance are incorporated in our genuine replacement parts.

Your authorized Gardner Denver® Compressor distributor offers all the backup you'll need. A worldwide network of authorized distributors provides the finest product support in the air compressor industry. Your local authorized distributor maintains a large inventory of genuine parts and he is backed up for emergency parts by direct access to the Gardner Denver Master Distribution Center (MDC) in Memphis, Tennessee.

Your authorized distributor can support your Gardner Denver® air compressor with these services:

1. Trained parts specialists to assist you in selecting the correct replacement parts.
2. Factory warranted new and remanufactured rotary screw air ends. Most popular model remanufactured air ends are maintained in stock at MDC for purchase on an exchange basis with liberal core credit available for the replacement unit.
3. A full line of factory tested AEON™ compressor lubricants specifically formulated for use in Gardner Denver compressors.
4. Repair and maintenance kits designed with the necessary parts to simplify servicing your compressor.

Authorized distributor service technicians are factory-trained and skilled in compressor maintenance and repair. They are ready to respond and assist you by providing fast, expert maintenance and repair services.

For the location of your local authorized Gardner Denver Air Compressor distributor refer to the yellow pages of your phone directory or contact:

Distribution Center:
Gardner Denver
Master Distribution Center
5585 East Shelby Drive
Memphis, TN 38141
Phone: (901) 542-6100
(800) 245-4946
Fax: (901) 542-6159

Factory:
Gardner Denver
1800 Gardner Expressway
Quincy, IL 62301
Phone: (217) 222-5400
Fax: (217) 224-7814

REMANUFACTURED AIR ENDS

Whenever an air end requires replacement or repair, Gardner Denver offers an industry unique, factory remanufactured air end exchange program. From its modern Remanufacturing Center in Indianapolis, IN, Gardner Denver is committed to supplying you with the highest quality, factory remanufactured air ends that are guaranteed to save you time, aggravation and money.

Immediately Available

Repair downtime costs you money, which is why there are over 200 remanufactured units in inventory at all times, ready for immediate delivery.

Skilled Craftsmen

Our Remanufacturing assembly technicians average over 20 years experience with air compression products.

Precision Remanufacturing

All potentially usable parts are thoroughly cleaned, inspected and analyzed. Only those parts that can be brought back to original factory specifications are remanufactured. Every remanufactured air end receives

a new overhaul kit: bearings, gears, seals, sleeves and gaskets.

Extensive Testing

Gardner Denver performs testing that repair houses just don't do. Magnaflux and ultrasonic inspection spot cracked or stressed castings, monochromatic light analysis exposes oil leaks, and coordinate measurement machine inspects to +/- .0001", insuring that all remanufactured air ends meet factory performance specifications.

Warranty

Gardner Denver backs up every remanufactured air end with a new warranty . . . 18 months from purchase, 12 months from service.

Gardner Denver remanufactured air ends deliver *quality without question . . . year in and year out.*

Call Gardner Denver for information on the air end exchange program and the name of your authorized distributor.

Phone Number: 800-245-4946 or
FAX: 901-542-6159

INDEX

| | |
|---|---|
| <p>Adding/Checking Oil Level and Changing Oil 24</p> <p>Air Control Components 16</p> <p style="padding-left: 20px;">Inlet Valve 16</p> <p style="padding-left: 20px;">Intake Controller 17</p> <p style="padding-left: 20px;">Minimum Pressure/Check Valve 16</p> <p>Air Cooled Unit 8</p> <p>AIR FILTER, SECTION 6 30</p> <p>Air Filter 40</p> <p style="padding-left: 20px;">Standard Duty 30</p> <p>Air Filter Element 30</p> <p>Air Filter Element Life 30</p> <p>Air Flow in Compressor System 1</p> <p>Air Receiver, Auxiliary 10</p> <p>Air Receiver With Condensate Drain 48</p> <p>Air Receiver Without Condensate Drain 47</p> <p>AUTO LAG Button with LED 18</p> <p>AUTO LEAD Button with LED 18</p> <p>Auto–Sentry S Controller with Keypad 17</p> <p>Auxiliary Air Receiver 10</p> <p>Bare Compressor 38</p> <p>BELT DRIVE, SECTION 7 31</p> <p>Belt Tension, Checking 31</p> <p>Change Air Filter LED 18</p> <p>Change Separator LED 18</p> <p>Changing Oil 24</p> <p>Check, Daily 14</p> <p>Checking Belt Tension 31</p> <p>Cleaning and Draining Oil System 26</p> <p>Cold Ambient Operation 25</p> <p>Cold Weather Operation 10</p> <p>Cold Weather Operation, Installation for 10</p> <p>Compression Principle 1</p> <p>Compressor 1</p> <p>Compressor Oil Filter 27</p> <p>Compressor Oil Separator 27</p> <p>Compressor Oil System 24</p> <p>Compressor Oil System Check 28</p> <p>Compressor System, Air Flow 1</p> <p>CONSTANT RUN Button with LED 18</p> <p>Control Piping 10</p> <p>Control System Operation 17</p> <p style="padding-left: 20px;">AUTO LAG Button with LED 18</p> | <p>AUTO LEAD Button with LED 18</p> <p>Change Air Filter LED 18</p> <p>Change Separator LED 18</p> <p>CONSTANT RUN Button with LED 18</p> <p>High Air Temperature LED 18</p> <p>Motor Overload LED 18</p> <p>Pressure and Temperature Digital Readouts . . 19</p> <p>STOP/RESET Button with LED 17</p> <p>Control Tubing 50</p> <p>Controller</p> <p style="padding-left: 20px;">Auto–Sentry S with Keypad 17</p> <p style="padding-left: 20px;">Intake 17</p> <p style="padding-left: 20px;">Intake Valve 41</p> <p>Controller Assembly 55</p> <p>CONTROLS & INSTRUMENTS, SECTION 4 15</p> <p>Controls & Instruments, General 15</p> <p>Cooling, Sealing and Lubrication 1</p> <p>Daily Check 14</p> <p>Decals 6, 7</p> <p>Definitions of Error Messages 19</p> <p>Discharge Service Line 10</p> <p>Drain, Oil Reservoir 9</p> <p>Draining and Cleaning Oil System 26</p> <p>Drive Group 49</p> <p>Electric Motor Grease Recommendations 12</p> <p>Electric Motor Regreasing Interval 12</p> <p>Electrical Group 51 thru 54</p> <p>Electrical Wiring 11</p> <p>Element, Air Filter 30</p> <p>Element Life, Air Filter 30</p> <p>Emergency Stop Pushbutton 17</p> <p>Enclosure 9</p> <p>Error Messages, Definitions 19</p> <p>Fan Motors 56</p> <p>Filter, Air 40</p> <p>Filter, Compressor Oil 27</p> <p>Foundation 9</p> <p>GENERAL INFORMATION, SECTION 1 1</p> <p>Grease Recommendations, Electric Motor 12</p> <p>Grounding 11</p> <p>High Air Temperature LED 18</p> <p>High Discharge Temperature 15</p> |
|---|---|

INDEX

| | | | |
|---|--------|--|------------|
| High Discharge Temperature | 15 | Mounting Group | 45 |
| High Temperature Operation | 25 | Oil Changing Procedure | 24 |
| Hourmeter | 17 | Oil Carry-Over | 34 |
| Identification and Instruction Group | 58, 59 | Oil Change Interval | 26 |
| Inlet Line | 10 | Oil Filter, Compressor | 27 |
| Inlet Line Lengths | 10 | Oil Level, Adding/Checking Procedure | 24 |
| Inlet Valve | 16, 39 | Oil Reservoir | 27 |
| INSTALLATION, SECTION 2 | 8 | Oil Reservoir Drain | 9 |
| Installation, General | 8 | Oil Scavenge Site Glass, Oil Separator | 28 |
| Installation for Cold Weather Operation | 10 | Oil Separator | |
| Intake Controller | 17 | Compressor | 27 |
| Intake Valve Controller | 41 | Inspection | 28 |
| Integrated Dryer Assembly and Piping | 67, 68 | Oil Scavenge Site Glass | 28 |
| Integrated Dryer Installation | 60 | Removal for Inspection or Replacement | 28 |
| Integrated Dryer Mounting Group | 69 | Oil Specifications | 24 |
| Integrated Dryer Operating Instructions | 60 | Oil System | |
| Lead-Lag Operation of Two Compressors | 21 | Compressor | 24 |
| Lifting Unit | 8 | Draining and Cleaning | 26 |
| Line, Discharge Service | 10 | Oil System Check | 28 |
| Line, Inlet | 10 | Air and Oil Discharge Temperature | 28 |
| Load-Unload Pressure Setpoints, Programming .. | 19 | Compressor Oil Inlet Temperature | 28 |
| Location | 8 | Oil Cooler Oil Pressure Differential | 29 |
| Lubricant, Recommended | 24 | Oil Cooler Temperature Differential | 29 |
| Lubricant Upgrade Procedure | 25 | Oil Inlet Pressure | 29 |
| Lubrication, Motor | 11 | Operation | |
| Lubrication, Cooling and Sealing | 1 | Control System | 17 |
| LUBRICATION, OIL COOLER, OIL FILTER & SEPARATOR, SECTION 5 | 24 | High Temperature | 25 |
| MAINTENANCE SCHEDULE, SECTION 8 | 32 | Lead-Lag, of Two Compressors | 21 |
| Matrix/Menu, Model EBB | ix | OPTIONAL INTEGRATED DRYER, SERVICE INSTRUCTIONS AND PARTS LIST, SECTION 11 | 60 |
| Minimum Pressure, Readjustment | 17 | Overload Relay Heater Conversion | 57 |
| Minimum Pressure Valve | 42 | PARTS LIST | |
| Minimum Pressure/Check Valve | 16 | Air Filter | 40 |
| Moisture in the Oil System | 26 | Air Receiver With Condensate Drain | 48 |
| Moisture Separator/Trap, Optional | 10 | Air Receiver Without Condensate Drain | 47 |
| Motor Grease Recommendations | 12 | Bare Compressor | 38 |
| Motor Group | | Control Tubing | 50 |
| Fan Motors | 56 | Controller Assembly | 55 |
| Main Motor | 56 | Drive Group | 49 |
| Motor Lubrication | 11 | Electrical Group | 51 thru 54 |
| Motor Overload LED | 18 | Identification and Instruction Group | 58 |
| Motor Protection Devices | 15 | | |
| Motor Regreasing Interval | 12 | | |

INDEX

| | |
|--|--|
| <p>Inlet Valve 39</p> <p>Intake Valve Controller 41</p> <p>Integrated Dryer Assembly and Piping ... 67, 68</p> <p>Integrated Dryer Mounting Group 69</p> <p>Minimum Pressure Valve 42</p> <p>Motor Group, Main & Fan 56</p> <p>Mounting Group 45</p> <p>Overload Relay Heater Conversion 57</p> <p>Piping and Mounting Group 43, 44</p> <p>Quiet Enclosure 46</p> <p>Refrigeration Components 70</p> <p>Repair Parts 59</p> <p>Starter/Control Box 70</p> <p>Wiring Diagram 72</p> <p>PARTS LIST, SECTION 10 38</p> <p>Piping, Control 10</p> <p>Piping and Mounting Group 43, 44</p> <p>Pressure and Temperature Digital Readouts 19</p> <p>Pressure Differential Gauging 28</p> <p>Prestart–Up Instructions 13</p> <p style="padding-left: 20px;">Air Filter 13</p> <p style="padding-left: 20px;">Compressor Oil 13</p> <p style="padding-left: 20px;">Electrical 13</p> <p style="padding-left: 20px;">Enclosure 14</p> <p style="padding-left: 20px;">Grounding 13</p> <p style="padding-left: 20px;">Operating Mode 14</p> <p style="padding-left: 20px;">Optional Integrated Dryer 14</p> <p style="padding-left: 20px;">Piping 13</p> <p style="padding-left: 20px;">Rotation 13</p> <p style="padding-left: 20px;">System Pressure 13</p> <p>Programming Load–Unload Pressure Setpoints .. 19</p> <p>Protective Devices</p> <p style="padding-left: 20px;">High Discharge Temperature 15</p> <p style="padding-left: 20px;">Motor Protection Devices 15</p> <p style="padding-left: 20px;">Relief Valve 16</p> <p style="padding-left: 20px;">Separator Differential Pressure 15</p> <p>Quiet Enclosure 46</p> <p>Recommended Lubricant 24</p> <p>Refrigeration Components 71</p> <p>Regreasing Interval, Electric Motor 12</p> <p>Relief Valve 16</p> <p>Remanufactured Air Ends i</p> | <p>Repair Parts 59</p> <p style="padding-left: 20px;">Ordering Instructions iv</p> <p>Reservoir, Oil 27</p> <p>Safety Precautions 4, 5</p> <p>Sealing, Lubrication and Cleaning 1</p> <p>Separator Differential Pressure 15</p> <p>Separator/Trap, Moisture, Optional 10</p> <p>Service Check List 32</p> <p style="padding-left: 20px;">Air Filter 32</p> <p style="padding-left: 20px;">Every 1000 Hours Operation 32</p> <p style="padding-left: 20px;">Every 125 Hours Operation 32</p> <p style="padding-left: 20px;">Every 2000 Hours Operation 32</p> <p style="padding-left: 20px;">Every 8 Hours Operation 32</p> <p style="padding-left: 20px;">Every Year 32</p> <p style="padding-left: 20px;">Motor Lubrication 32</p> <p style="padding-left: 20px;">Oil Separator 32</p> <p style="padding-left: 20px;">On All Startups or Every 100 Hours Operation 32</p> <p>Specifications, Oil 24</p> <p>Starter/Control Box 17</p> <p style="padding-left: 20px;">Auto–Sentry S Controller with Keypad 17</p> <p style="padding-left: 20px;">Emergency Stop Pushbutton 17</p> <p style="padding-left: 20px;">Hourmeter 17</p> <p>STARTING & OPERATING PROCEDURES, SECTION 3 13</p> <p>Starting the Unit 14</p> <p style="padding-left: 20px;">Unit Cold 14</p> <p style="padding-left: 20px;">Unit Hot 14</p> <p>STOP/RESET Button with LED 17</p> <p>Stopping the Unit 14</p> <p>Temperature, High Discharge 15</p> <p>Thermal Control (Thermostatic Mixing) Valve 27</p> <p>TROUBLE SHOOTING, SECTION 9 33</p> <p>Upgrade Procedure, Lubricant 25</p> <p>Valve</p> <p style="padding-left: 20px;">Control 16</p> <p style="padding-left: 20px;">Inlet 39</p> <p style="padding-left: 20px;">Minimum Pressure 42</p> <p style="padding-left: 20px;">Minimum Pressure/Check 16</p> <p style="padding-left: 20px;">Relief 16</p> <p style="padding-left: 20px;">Thermal Control (Thermostatic Mixing) 27</p> <p>Warranty Last Page</p> <p>Wiring, Electrical 11</p> <p>Wiring Diagram 72</p> |
|--|--|

LIST OF ILLUSTRATIONS

| | | |
|-------------|--|----|
| Figure 1–1 | Compressor Cycle | 1 |
| Figure 1–2 | Compressor/Motor Side – Package | 2 |
| Figure 1–3 | Belt Guard Side – Package | 2 |
| Figure 1–4 | Controller End – Package | 3 |
| Figure 2–1 | Typical Compressor Room | 8 |
| Figure 2–2 | Air Flow Chart | 9 |
| Figure 2–3 | Cold Weather Installation | 9 |
| Figure 4–1 | Control Schematic | 15 |
| Figure 4–2 | Inlet Valve | 16 |
| Figure 4–3 | Minimum Pressure/Check Valve | 16 |
| Figure 4–4 | Intake Controller | 17 |
| Figure 4–5 | Definition of Error Messages | 19 |
| Figure 4–6 | Maximum Setpoints for Auto–Sentry S Controller, PSIG | 21 |
| Figure 4–7 | Auto–Sentry S Solid State Control Touch Pad | 22 |
| Figure 4–8 | Wiring Diagram | 23 |
| Figure 5–1 | Oil Fill | 24 |
| Figure 5–2 | Approximate Oil System Capacities | 25 |
| Figure 5–3 | Oil Change Interval | 26 |
| Figure 5–4 | Thermostatic Mixing Valve | 27 |
| Figure 6–1 | Standard Duty Air Filter | 30 |
| Figure 7–1 | Belt Tension 3VX Belts | 31 |
| Figure 11–1 | Compressor with Integrated Dryer | 60 |
| Figure 11–2 | Temperature–Pressure Chart (R–22) | 61 |
| Figure 11–3 | Adjusting Nut for Suction Pressure | 61 |
| Figure 11–4 | Refrigerated Dryer | 62 |
| Figure 11–5 | Suction Pressure Gauge, Dryer Inlet and Outlet | 62 |
| Figure 11–6 | Condenser, Heat Exchanger, Hot Gas Bypass | 63 |
| Figure 11–7 | Compressor (Refrigerated Dryer) | 63 |

**MODEL EBB – 7.5, 10 & 15 HP
ELECTRA-SCREW® COMPRESSORS
MATRIX/MENU**

NOTICE TO CUSTOMER – To find the construction options for your compressor unit, FILL IN THE BALANCE OF LETTERS OR NUMBERS FROM YOUR UNIT NAMEPLATE.

| | | | | | | | | | | | | | |
|-------|---|---|---|---|---|---|---|---|---|----|----|----|----|
| | E | B | B | | | | | | | | | | |
| | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 | 10 | 11 | 12 | 13 |

..... COLUMN NUMBER:
Follow the line down and over from each space thus filled in to find the appropriate construction option with which your machine is equipped. The number "9" in any column space indicates "NOT APPLICABLE." The number "8" in any column space indicates SPECIAL DESIGN – REFER TO FACTORY ORDER TICKET.

COLUMNS 1, 2 & 3 – COMPRESSOR TYPE & SIZE

COLUMN 4 – TYPE OF CONSTRUCTION

- Q. Base-Mounted
- R. Tank-Mounted
- S. Base-Mounted with Integrated Dryer

COLUMN 5 – HORSEPOWER

- B. 7.5 HP
- C. 10.0 HP
- D. 15 HP

COLUMN 6 – ENGINEERING SPECIFICATION

COLUMN 7 – PRESSURE & HZ

- | | |
|----------------------|----------------------|
| A. 7.5 HP – 100 PSI | G. 10.0 HP – 175 PSI |
| B. 7.5 HP – 125 PSI | H. 15.0 HP – 125 PSI |
| C. 7.5 HP – 150 PSI | I. 15.0 HP – 150 PSI |
| D. 7.5 HP – 175 PSI | J. 15.0 HP – 175 PSI |
| E. 10.0 HP – 125 PSI | K. 10.0 HP – 100 PSI |
| F. 10.0 HP – 150 PSI | L. 15.0 HP – 100 PSI |

COLUMN 8 – COOLING FAN MOTOR (Per Voltage & H.P.)

- | | |
|---------------------|-----------------------------|
| A. 200V – 15 HP | D. 200V – 7-1/2 & 10 HP |
| B. 230/460V – 15 HP | E. 230/460V – 7-1/2 & 10 HP |
| C. 575V – 15 HP | F. 575 – 7-1/2 & 10 HP |

COLUMN 9 – CONTROL BOX STARTER (Per Voltage) (With Main Motor Starter)

- | | |
|------------------|------------------|
| A. 200 Volt – N1 | C. 460 Volt – N1 |
| B. 230 Volt – N1 | D. 575 Volt – N1 |

COLUMN 10 – ENCLOSURE

- | | |
|---|--|
| A. With Enclosure | C. With Enclosure – Integrated Dryer |
| B. With Enclosure – Quiet (Not available on 15 HP Units) | D. With Enclosure – Integrated Dryer – Quiet (Not available on 15 HP Units) |

COLUMN 11 – AIR RECEIVER

- | | |
|--|---|
| A. Base Mounted | D. Tank Mtd – W/O Cond Drain – 120 Gal. |
| B. Tank Mtd – W/O Cond Drain – 80 Gal. | E. Tank Mtd – W/Cond Drain – 120 Gal. |
| C. Tank Mtd – W/Cond Drain – 80 Gal. | F. Base Mtd – W/Integrated Dryer |

COLUMN 12 – SEPARATOR TRAP

- A. W/O Separator/Trap
- B. With Separator/Trap – 7.5 & 10 HP (Shipped Loose)
- C. With Separator/Trap – 15 HP (Shipped Loose)

COLUMN 13 – COMPRESSOR DRIVE MOTOR

- | | |
|-------------------------------------|-------------------------------------|
| A. 7.5 HP – 200V – 60 HZ – ODP | F. 10.0 HP – 575V – 60 HZ – ODP |
| B. 7.5 HP – 230/460V – 60 HZ – ODP | G. 15.0 HP – 200V – 60 HZ – ODP |
| C. 7.5 HP – 575V – 60 HZ – ODP | H. 15.0 HP – 230/460V – 60 HZ – ODP |
| D. 10.0 HP – 200V – 60 HZ – ODP | I. 15.0 HP – 575V – 60 HZ – ODP |
| E. 10.0 HP – 230/460V – 60 HZ – ODP | |

SECTION 1

GENERAL INFORMATION

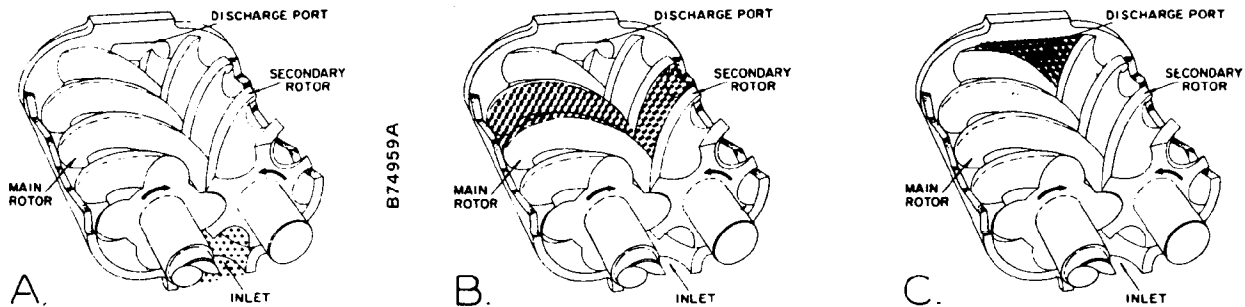


FIGURE 1-1 – COMPRESSOR CYCLE

COMPRESSOR – The Gardner Denver® compressor is a single stage, positive displacement rotary machine using meshing helical rotors to effect compression. Both rotors are supported between high capacity roller bearings located outside the compression chamber. Single width cylindrical roller bearings are used at the inlet end of the rotors to carry part of the radial loads. Tapered roller bearings at the discharge end locate each rotor axially and carry all thrust loads and the remainder of the radial loads.

COMPRESSION PRINCIPLE (FIGURE 1-1) – Compression is accomplished by the main and secondary rotors synchronously meshing in a one-piece cylinder. The main rotor has four (4) helical lobes 90° apart. The secondary rotor has six (6) matching helical grooves 60° apart to allow meshing with main rotor lobes.

The air inlet port is located on top of the compressor cylinder near the drive shaft end. The discharge port is near the bottom at the opposite end of the compressor cylinder. *FIGURE 1-1 is an inverted view to show inlet and discharge ports.* The compression cycle begins as the rotors unmesh at the inlet port and air is drawn into the cavity between the main rotor lobes and the secondary rotor grooves (A). When the rotors pass the inlet port cutoff, air is trapped in the interlobe cavity and flows axially with the meshing rotors (B). As meshing continues, more of the main rotor lobe enters the secondary rotor groove, normal volume is reduced and pressure increases.

Oil is injected into the cylinder to remove the heat of compression and seal internal clearances. Volume reduction and pressure increase continues until the air/oil mixture trapped in the interlobe cavity by the rotors passes the discharge port and is released to the oil reservoir (C). Each rotor cavity follows the same “fill-compress-discharge” cycle in rapid succession to produce a discharge air flow that is continuous, smooth and shock free.

AIR FLOW IN THE COMPRESSOR SYSTEM (FIGURE 4-1, page 15) – Air enters the air filter and passes through the inlet unloader valve and on into the compression chamber where oil is injected into the air. After compression, the air/oil mixture passes into the oil reservoir where most of the entrained oil is removed by velocity change and impingement and drops back into the reservoir. The air and remaining oil then passes through the air/oil separator. The air then passes through the minimum pressure/check valve, the after-cooler and the moisture separator and into the plant air lines.

LUBRICATION, COOLING AND SEALING – Oil is forced by air pressure from the oil reservoir through the oil cooler, thermostatic mixing valve, and oil filter and discharge into the compressor main oil gallery. A portion of the oil is directed through internal passages to the bearings and shaft oil seal. The balance of the oil is injected directly into the compression chamber to remove heat of compression, seal internal clearances and lubricate the rotors.

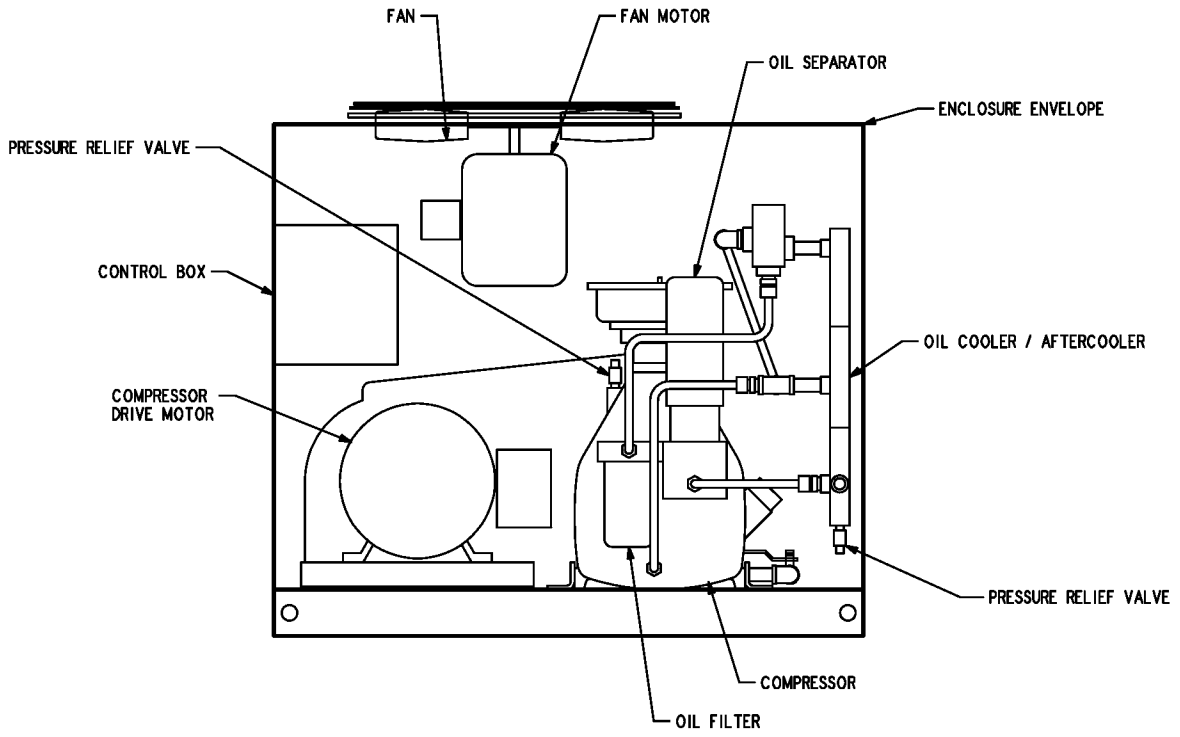


FIGURE 1-2 - PACKAGE - COMPRESSOR / MOTOR SIDE

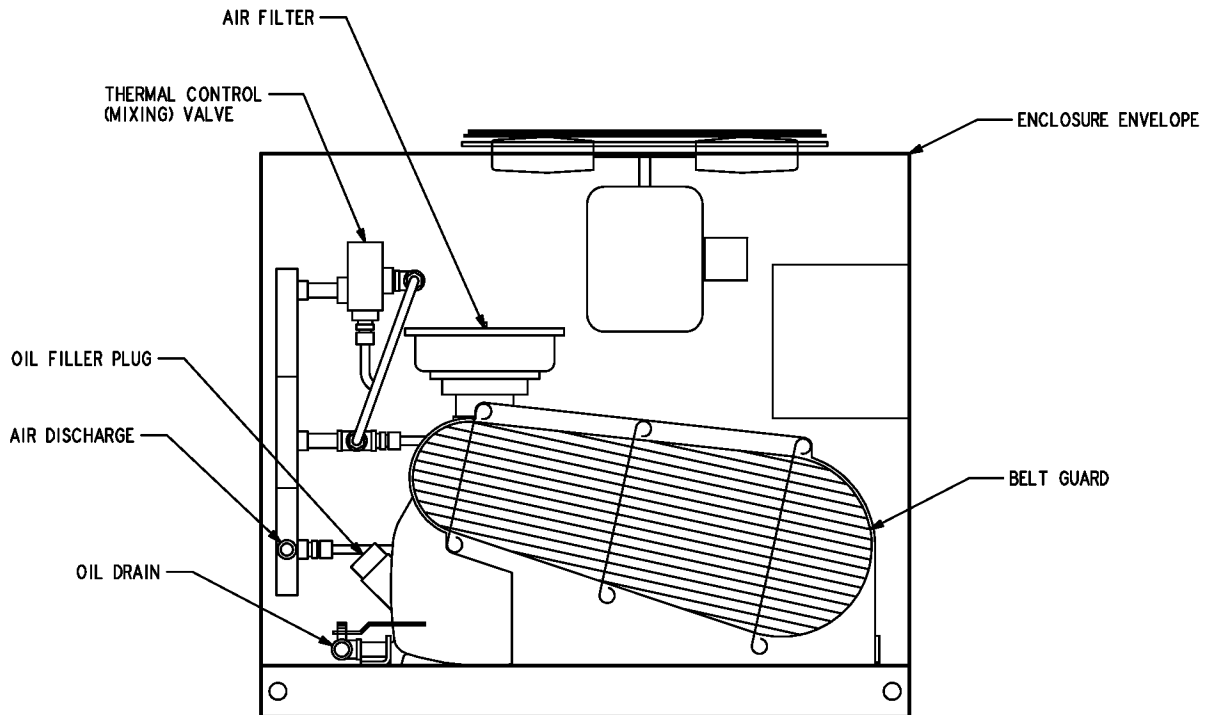


FIGURE 1-3 - PACKAGE - BELT GUARD SIDE

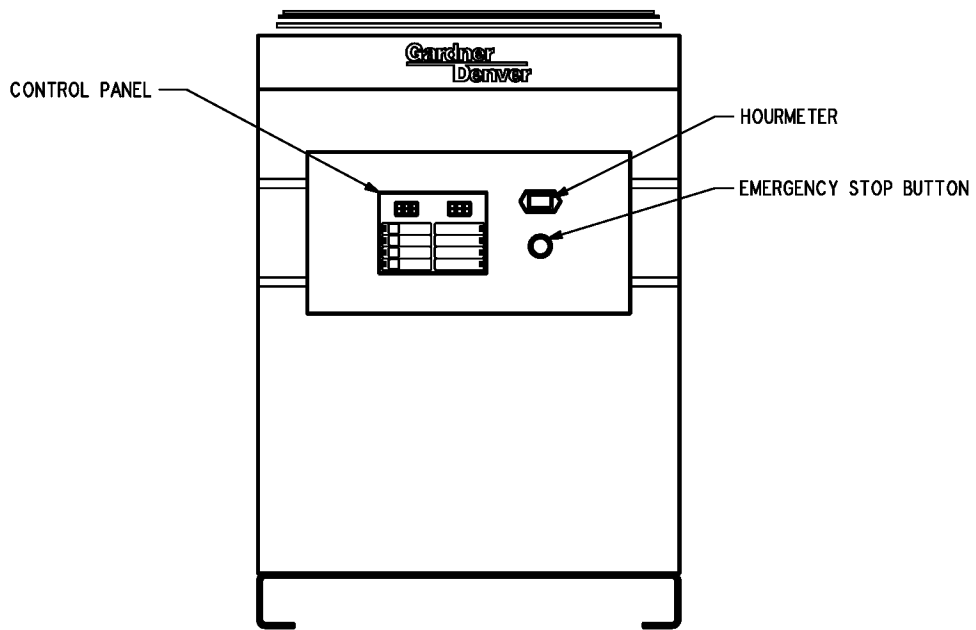


FIGURE 1-4 – PACKAGE – CONTROLLER END

SAFETY PRECAUTIONS

Safety is everybody's business and is based on your use of good common sense. All situations or circumstances cannot always be predicted and covered by established rules. Therefore, use your past experience, watch out for safety hazards and be cautious. Some general safety precautions are given below:

 **DANGER**

Failure to observe these notices could result in injury to or death of personnel.


- **Keep fingers and clothing away from revolving fan, drive coupling, etc.**
- **Do not use the air discharge from this unit for breathing – not suitable for human consumption.**
- **Do not loosen or remove the oil filler plug, drain plugs, covers, the thermostatic mixing valve or break any connections, etc., in the compressor air or oil system until the unit is shut down and the air pressure has been relieved.**
- **Electrical shock can and may be fatal.**
- **Compressor unit must be grounded in accordance with the National Electrical Code. A ground jumper equal to the size of the equipment ground conductor must be used to connect the compressor motor base to the unit base.**
- **Fan motors must remain grounded to the main base through the starter mounting panel in accordance with the National Electrical Code.**
- **Open main disconnect switch, tag and lockout before working on the control.**
- **Disconnect the compressor unit from its power source, tag and lockout before working on the unit – this machine is automatically controlled and may start at any time.**

 **WARNING**


Failure to observe these notices could result in damage to equipment.

- **Stop the unit if any repairs or adjustments on or around the compressor are required.**
- **Disconnect the compressor unit from its power source, tag and lockout before working on the unit – this machine is automatically controlled and may start at any time.**
- **An Excess Flow Valve should be on all compressed air supply hoses exceeding 1/2 inch inside diameter. (OSHA Regulation, Section 1926.302)**
- **Do not exceed the rated maximum pressure values shown on the nameplate.**
- **Do not operate unit if safety devices are not operating properly. Check periodically. Never bypass safety devices.**


DECALS

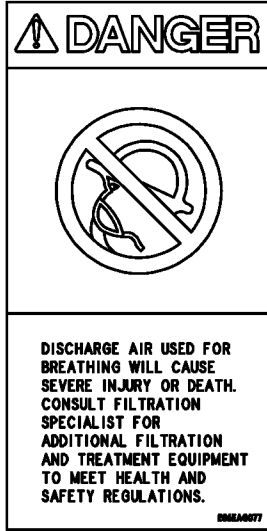


206EAQ077

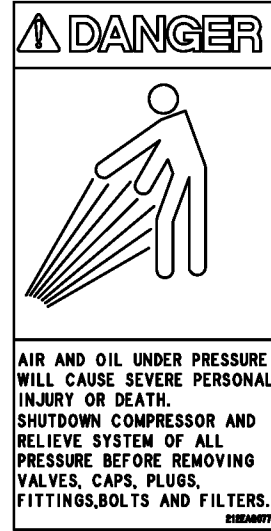


212EAQ077

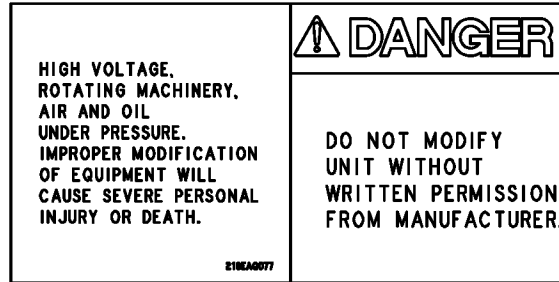

218EAQ077

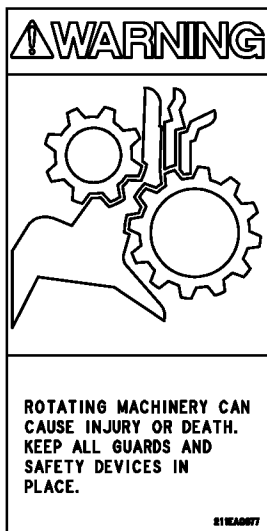


211EAQ077

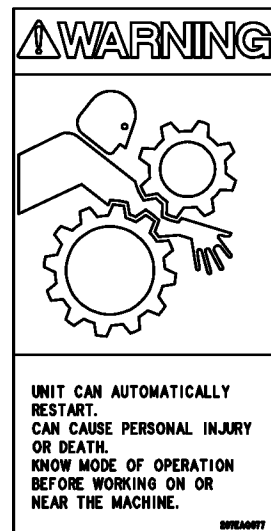


207EAQ077


DECALS

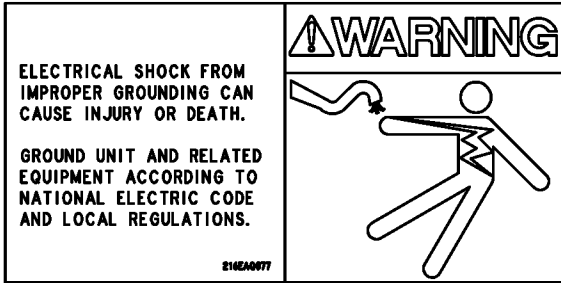


216EAQ077

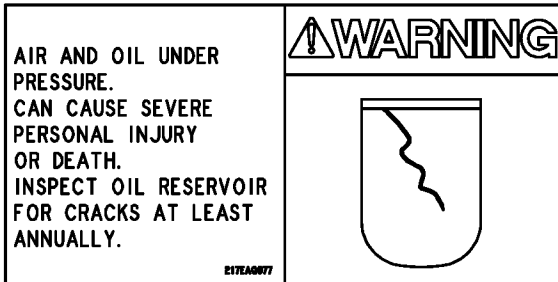


217EAQ077

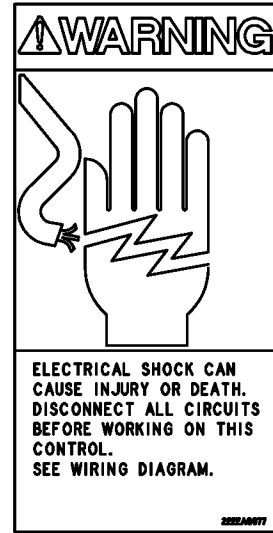

222EAQ077

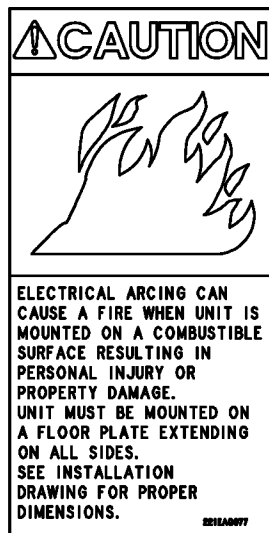

221EAQ077

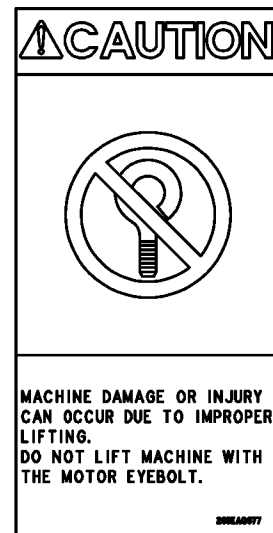

208EAQ077

SECTION 2 INSTALLATION

GENERAL – On receipt of the unit, check for any damage that may have been incurred during transit. Report any damage or missing parts as soon as possible.

CAUTION

Do not electric weld on the compressor or base; bearings can be damaged by passage of current.

LIFTING UNIT – Proper lifting and/or transporting methods must be used to prevent damage. Lifting slots are provided in the base for towmotor use. Unit may also be moved into location by rolling on bars.

CAUTION

Lift compressor unit by base only. Do not use other places such as motor, compressor or discharge manifold piping as lifting points.

DANGER

The eyebolts or lugs provided on the motor are for lifting the motor only and should not be used to lift any additional weight. All eyebolts must be securely tightened. When lifting the motor the lifting angle must not exceed 15 degrees. Failure to observe this warning may result in damage to equipment or personal injury.

LOCATION (FIGURE 2-1) – The compressor should be installed where it is protected from rain, snow and freezing temperatures, in a clean, well-lighted, well-ventilated area with ample space all around for maintenance. Select a location that provides a cool, clean, dry source of air. In some cases it may be necessary to install the air filter at some distance from the compressor to obtain proper air supply.

AIR-COOLED UNIT – A combination oil/aftercooler is supplied as standard equipment on all air-cooled units. The air-cooled unit with the standard enclosure requires sufficient flow for the compressor oil/aftercooling system and electric motor cooling (FIGURE 2-2, page 9). Air is drawn into the unit above the motor and discharged through the cooler. Do not block the air flow to and from the unit. Allow three and one half (3-1/2) feet to the nearest obstruction on the starter end and control box end of the unit. Allow two (2) feet to the nearest obstruction above and on other sides of unit. For continuous efficiency, oil cooler cores must be periodically cleaned with either vacuum or compressed air. If wet cleaning is required, shield motor and spray on a mild soap solution and flush with clean water.

CAUTION

Do not operate machine while the enclosure panels are not in place. High temperature shutdowns will occur.

WARNING

For aluminum oil coolers, do not use any cleaning solution that is not compatible with aluminum. Use of improper solution may result in damage to the cooler.

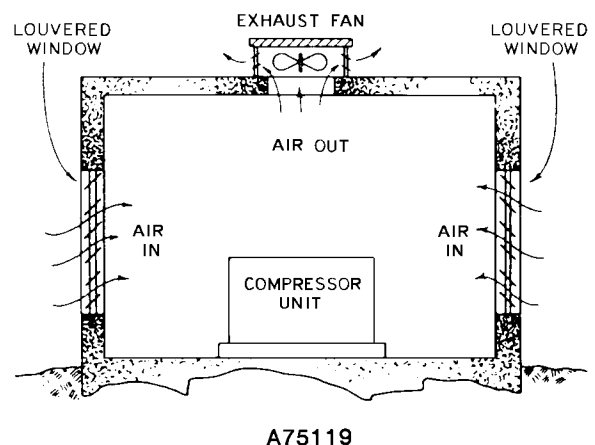


FIGURE 2-1 – TYPICAL COMPRESSOR ROOM

| Minimum Air Flow* For Compressor And Cooling (Cubic Feet/Minute) | |
|--|------------|
| | Air Cooled |
| All Models | 3000 cfm |


* 80° F Inlet Air

FIGURE 2-2

FOUNDATION – The Electra-Screw® compressor requires no special foundation, but should be mounted on a smooth, solid surface. Whenever possible install the unit near level. Temporary installation may be made at a maximum 10° angle lengthwise or 10° sidewise. Mounting bolts are not normally required. However, installation conditions such as piping rigidity, angle of tilt, or danger of shifting from outside vibration or moving vehicles may require the use of mounting bolts and shims to provide uniform support for the base. Belt alignment and tension should be checked after installation. (For information on belt alignment and tension, see page 31.)

OIL RESERVOIR DRAIN – The oil drain is piped from the bottom of the reservoir to the side of the frame. This drain is approximately 2 inches above the floor level. If this is not sufficient to conveniently drain the oil some other methods of providing drain are:

1. Elevate the compressor unit on a suitable structure to obtain the desired drain height.

 **CAUTION**

If the compressor unit base is raised above floor level, the space between the floor and the base bottom must be closed with solid material all around to prevent recirculation of hot air from the oil cooler end and over temperature operation.

2. Construct an oil sump or trough below the floor level and pump or bail the drained oil.
3. Pump oil from the reservoir filler opening or drain to a container.

ENCLOSURE – The compressor, electric motor, oil cooler and aftercooler are mounted inside the enclosure.

Service panels are provided for maintenance access. Be sure to allow enough space around the unit for the doors to be removed.

Any of the enclosure panels may be removed by opening the latch and lifting it up slightly.

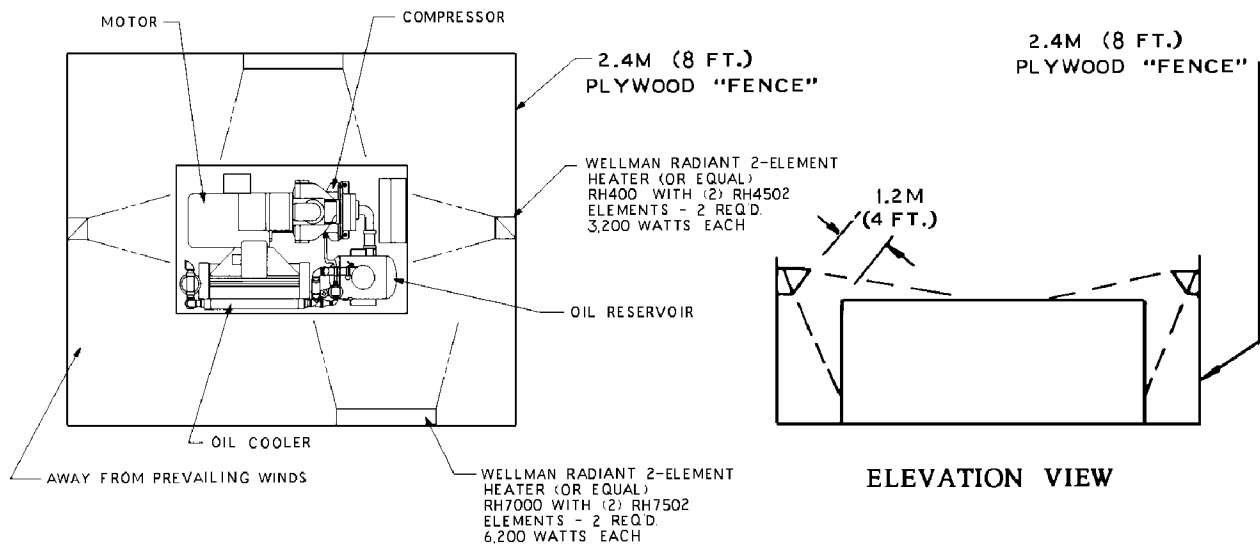


FIGURE 2-3 – COLD WEATHER INSTALLATION

⚠ DANGER

Do not operate the compressor with the fan and belt guard removed. Exposed fan and belts may cause injury to personnel.

INSTALLATION FOR COLD WEATHER OPERATION (FIGURE 2-3, page 9) – It is recommended that the unit be installed inside a shelter that will be heated to temperatures above freezing (32°F, 0°C). This will eliminate many of the problems associated with operating units in cold climates, such as freezing in control lines and downstream of the cooler.

Refer to Engineering Data Sheet 13-9-411 for the advantages of using the heat recovered from rotary compressors. This heat recovery could easily pay for an adequate shelter for the unit.

When an outside installation must be made, the precautions required will depend on the severity of the environment. The following are general guidelines for outside installations:

Cold Weather (Down To +10°F)

1. Be sure all drains, traps, and control lines, including pressure transducer lines are heated to avoid freezing of condensate. Heat tape with thermostat control is generally satisfactory for this purpose and can be obtained at various local plumbing or hardware outlets at nominal cost.
2. If an air-cooled aftercooler is to be used, provisions to bypass the aftercooler must be made. Since cold air contains very little moisture, successful operation can be achieved without the aftercooler.
3. Provide at least some simple shelter such as a plywood windbreak to protect against drifting snow.
4. Use only Gardner Denver® AEON™ 9000 SP lubricant.
5. Monitor unit carefully during start-up and operation to be sure it is functioning normally.

Remember unsheltered (outside) installations should be avoided where possible. Installation next to a heated building where enough heat can be used to keep the compressor room above freezing will save many complications in the operation and installation of the unit.

Refer to Engineering Data Sheet 13-9-411, available from an authorized Gardner Denver distributor, for the advantages of using the heat recovered from rotary compressors. This heat recovery could easily pay for an adequate shelter for the unit.

AUXILIARY AIR RECEIVER – An auxiliary air receiver is not required if the piping system is large and provides sufficient storage capacity to prevent rapid cycling. When used, an air receiver should be of adequate size, provided with a relief valve of proper setting, a pressure gauge and a means of draining condensate.

OPTIONAL MOISTURE SEPARATOR/TRAP – The unit is equipped with a built-in aftercooler, a combination moisture separator and trap is furnished as an option to the unit. This should be piped into the system down stream of the aftercooler.

CONTROL PIPING – Control piping is not necessary since the Electra-Screw® unit is factory wired and piped for the control system specified.

INLET LINE – Where an inlet line is used between the air filter and the compressor, it must be thoroughly cleaned on the inside to prevent dirt or scale from entering the compressor. **If welded construction is used, the line must be shot blasted and cleaned to remove welding scale.** In either case, the inlet line must be coated internally by galvanizing or painting with a moisture and oil-proof sealing lacquer. Up to ten (10) feet in length, the inlet line should be the full size of the inlet opening on the compressor. If an extra-long line is necessary, the pipe size should be increased according to Inlet Line Length Chart below.


Accessibility for inlet air filter servicing must be considered when relocating the filters from the unit to a remote location.

DISCHARGE SERVICE LINE – The discharge service line connection is made at the lower right hand corner of the cooler, viewed from the oil cooler side. A hand operated valve, (air service valve) must be installed be-

INLET LINE LENGTHS

| Length of Inlet Line | Diameter of Pipe Size |
|----------------------|-------------------------------------|
| 0 to 10 Feet | Same as Compressor Inlet Opening |
| 10 to 17 Feet | One Size Larger Than Inlet Opening |
| 17 to 38 Feet | Two Sizes Larger Than Inlet Opening |

tween the unit and the customer's air system. If a fast operating valve, such as a ball valve, is used, it must be closed slowly to give the intake valve time to shut and keep the discharge pressure from spiking. When manifolding two or more Electra-Screw® units on the same line, each unit is isolated by the check valve in the unit discharge line. If an Electra-Screw® unit is manifolded to another compressor, be sure the other compressor has a check valve in the line between the machine and the manifold. If an Electra-Screw® and a reciprocating compressor are manifolded together, an air receiver must be located between the two units.


| |
|---|
|  DANGER |
| <p>Discharge air used for breathing will cause severe injury or death.</p> <p>Consult filtration specialists for additional filtration and treatment equipment to meet health and safety standards.</p> |

ELECTRICAL WIRING – Standard Units – The Electra-Screw® compressor is factory wired for all starter to motor and control connections for the voltage specified on the order. It is necessary only to connect the unit starter to the correct power supply. The standard unit is supplied with an open drip-proof motor, a NEMA 1 starter and control enclosure. See “Location”, page 8, for the distance to the nearest obstruction on the starter and control box sides of the unit.


Terminals for incoming power are located on the contactor behind the fan motor fuse block. To remove the fuse block, locate the locking tab on the back side and press forward, then slide the fuse block up and off of the contactor. Connect incoming power leads to L1, L2 and L3 on the contactor. Replace the fuse block by sliding back down on the mounting track until the locking tab snaps and hold it in place.

| |
|--|
|  WARNING |
| <p>Do not connect incoming power to the fan motor fuse box.</p> |

The overload heaters are to be selected according to starter manufacturer's tables, which are attached to the inside of the control box, based on motor nameplate full load amperage.


| |
|---|
|  WARNING |
| <p>Electrical shock can cause injury or death. Open main disconnect switch, tag and lockout before working on starter/control box.</p> |

GROUNDING – Equipment must be grounded in accordance with Section 250 of the National Electrical Code.

| |
|---|
|  WARNING |
| <p>Failure to properly ground the compressor package could result in controller malfunction.</p> |

MOTOR LUBRICATION – Long time satisfactory operation of an electric motor depends in large measure on proper lubrication of the bearings. The following charts show recommended grease qualities and regreasing intervals for ball bearing motors. For additional information refer to the motor manufacturer's instructions. The following procedure should be used in regreasing:

1. Stop the unit.
2. Disconnect, tag and lockout the unit from the power supply.
3. Remove the relief plug and free hole of hardened grease.
4. Wipe lubrication fitting clean and add grease with a hand-operated grease gun.
5. Leave the relief plug temporarily off. Reconnect unit and run for about 20 minutes to expel the excess grease.
6. Stop the unit. Replace the relief plug.
7. Restart the unit.

| |
|---|
|  WARNING |
| <p>Rotating machinery can cause injury or death. Open main disconnect, tag and lockout power supply to the starter before working on the electric motor.</p> |

ELECTRIC MOTOR GREASE RECOMMENDATIONS

| | Standard Service | High Temperature |
|--|-----------------------------|-----------------------------|
| Worked Penetration | 265–296 | 220–240 |
| Grease Viscosity, SSU At 100°F | 400–550 | 475–525 |
| Soap Type | Lithium | Lithium |
| N–H Bomb, Minimum Hours For 20 PSI Drop at 210°F | 750 | 1000 |
| Bleeding, Maximum Weight % In 500 Hours 212°F | 10 | 3 |
| Rust Inhibiting | Yes | Yes |

ELECTRIC MOTOR REGREASING INTERVAL

| Type of Service | Typical Examples | Rating | Relubrication Interval |
|-----------------|---|----------------|------------------------|
| Standard | One– or Two–Shift Operation | 150 HP & Below | 18 Months |
| Severe | Continuous Operation | 150 HP & Below | 9 Months |
| Very Severe | Dirty Locations, High Ambient Temperature | 150 HP & Below | 4 Months |

SECTION 3 STARTING & OPERATING PROCEDURES

PRESTART-UP INSTRUCTIONS – A new unit as received from the factory has been prepared for shipping only. Do not attempt to operate the unit until checked and serviced as follows:

1. **Compressor Oil** – The oil must be checked before starting the unit and every 100 hours of operation. For instructions on checking the oil and the proper oil level, refer to Section 5, page 24.

Do not mix different type oils. Unit is shipped filled with Gardner Denver® AEON™ 2000 Lubricating Coolant which is suitable for the first 2000 hours under normal operating conditions. AEON™ 4000 and AEON™ 9000 SP are also available. Check the decal on the reservoir to be sure which lubricant is in the machine.

REPLACE OIL FILTER EVERY 1000 HOURS.

NOTICE

Regular maintenance and replacement at required intervals of the oil filter, air filter and air-oil separator is necessary to achieve maximum service and extended drain intervals of AEON™ 2000 lubricant. Use only genuine Gardner Denver filters designed and specified for this compressor.

DANGER

Always stop the unit and release air pressure before removing oil filler plug. Failure to release pressure may result in personal injury or death.

During unloaded operation and after shutdown, the system will partially drain back into the oil reservoir and the oil level may read higher than when operating on load. **DO NOT DRAIN OIL TO CORRECT**; on the next loaded cycle or start, oil will again fill the system.

2. **Air Filter** – Inspect the air filter to be sure it is clean and tightly assembled. Refer to Section 6, “Air Fil-

ter,” page 30, for complete servicing instructions. Be sure the inlet line, if used, is tight and clean.

3. **Piping** – Refer to Section 2, “Installation,” and make sure piping meets all recommendations.
4. **Electrical** – Check the wiring diagrams furnished with the unit to be sure it is properly wired. See FIGURE 4–8, page 23, for general wiring diagrams and Section 2, page 8 for installation instructions. If the unit has optional integrated dryer, see Section 11, page 60.
5. **Grounding** – Unit must be properly grounded according to Section 250 of the National Electrical Code.

WARNING

Failure to properly ground the compressor package could result in controller malfunction.

6. **Rotation** – Check for correct motor rotation using “JOG MODE.” Compressor drive shaft rotation must be counterclockwise standing facing the compressor sheave. See Section 4, page 20, Step 8.

WARNING

Operation with incorrect motor rotation can damage equipment and cause oil eruption from the compressor inlet. When checking motor rotation, induce minimum rotation (less than one revolution if possible). Never allow motor to reach full speed.

7. **System Pressure** – The discharge pressure of the unit is set at the factory. To change the discharge pressure, set the controls to the desired load pressure. **DO NOT EXCEED THE MAXIMUM OPERATING PRESSURE ON THE COMPRESSOR NAMEPLATE.** See Section 4, pages 19 through 21, “Programming the Load-Unload Pressure Setpoints,” for procedure.

 **WARNING**

Operation at excessive discharge air pressure can cause personal injury or damage to equipment. Do not adjust the full discharge air pressure above the maximum stamped on the unit nameplate.

8. **Operating Mode** – Refer to Section 4 for detailed information on the control system.
9. **Enclosure** – Check for damaged panels or doors. Check all screws and latches for tightness. Be sure doors are closed and latched.
- 10 **Optional Integrated Dryer** – see Section 11, pages 60 thru 66, for Operating Instructions and pages 67 thru 71, for Parts Listing.

STARTING THE UNIT – Observe the following starting procedures.

Unit Cold:

1. If the unit has the optional integrated dryer, start the dryer.
2. Close the air service valve (customer furnished) between the main air system and the check valve on the package.
3. Start the unit by pushing either the “CONSTANT RUN” or one of the “AUTO” buttons.
4. Run for approximately five minutes or until the temperature stabilizes and then open the air service valve.

The unit is equipped with a minimum (65 psig) pressure/check valve, no special procedure to maintain the unit reservoir pressure is required.

Unit Hot (No warm–up period is required):

1. If the unit has the optional integrated dryer, start the dryer.
2. Close the air service valve (customer furnished) between the main air system and the check valve on the package.
3. Start the unit by pushing either the “CONSTANT RUN” or one of the “AUTO” buttons.
4. Run for approximately one minute and then open the air service valve. The unit is equipped with a minimum (65 psig) pressure/check valve, no special procedure to maintain the unit reservoir pressure is required.

DAILY CHECK – Refer to Section 8, “Maintenance Schedule,” page 32.

STOPPING THE UNIT:

1. Close the air service valve (customer furnished) between the main air system and the check valve on the package.
2. Allow the unit to build up to full unloaded pressure and run unloaded for 1 to 2 minutes.
3. Wait a short period for the reservoir to blow down.
4. Press “STOP–RESET” button.

Stopping the unit at a pressure below full unloaded may cause oil carry–over and can damage the air/oil separator element. The oil reservoir will automatically blow down as the motor stops. Open the air service valve.

If the unit has the optional integrated dryer and will be off more than 8 hours, shut down the dryer.

SECTION 4 CONTROLS & INSTRUMENTATION

GENERAL – The Gardner Denver® Electra-Screw® compressor is supplied with a factory mounted starter and complete controls as standard equipment. The standard control system consists of constant run load/unload operation, or auto start/timed stop operation. Lead/Lag operation of two Electra-Screw compressors is also possible without additional equipment.

PROTECTIVE DEVICES – All compressors incorporate the following protective devices:

Motor Protection Devices – Overload relays are furnished for each motor in the voltage range specified. There are six (6) heaters, sized as indicated in the chart in the starter box. A trip of either relay is indicated by the “MOTOR OVERLOAD” LED located on the control keypad.

Separator Differential Pressure – The separator differential pressure is continually monitored by the microprocessor controller. At a differential of approxi-

mately 8 PSI, the “CHANGE SEPARATOR” LED located on the control keypad flashes indicating required maintenance. If the warning is ignored, and the separator differential continues to increase, the microprocessor controller will stop the unit and the LED will remain on steady. See “Control System Operation,” page 17, for further information on operation of the microprocessor controller.

High Discharge Temperature – The compressor is protected from high discharge temperature by two independent thermistor probes. One probe is located in the compressor discharge housing to sense compressor discharge air-oil mixture temperature. The second probe is located at the separator discharge and senses the temperature of the air at the oil separator.

The microprocessor controller will shut the compressor down if the temperature sensed at either location exceeds 225° F. See “HIGH AIR TEMPERATURE” LED, page 18.

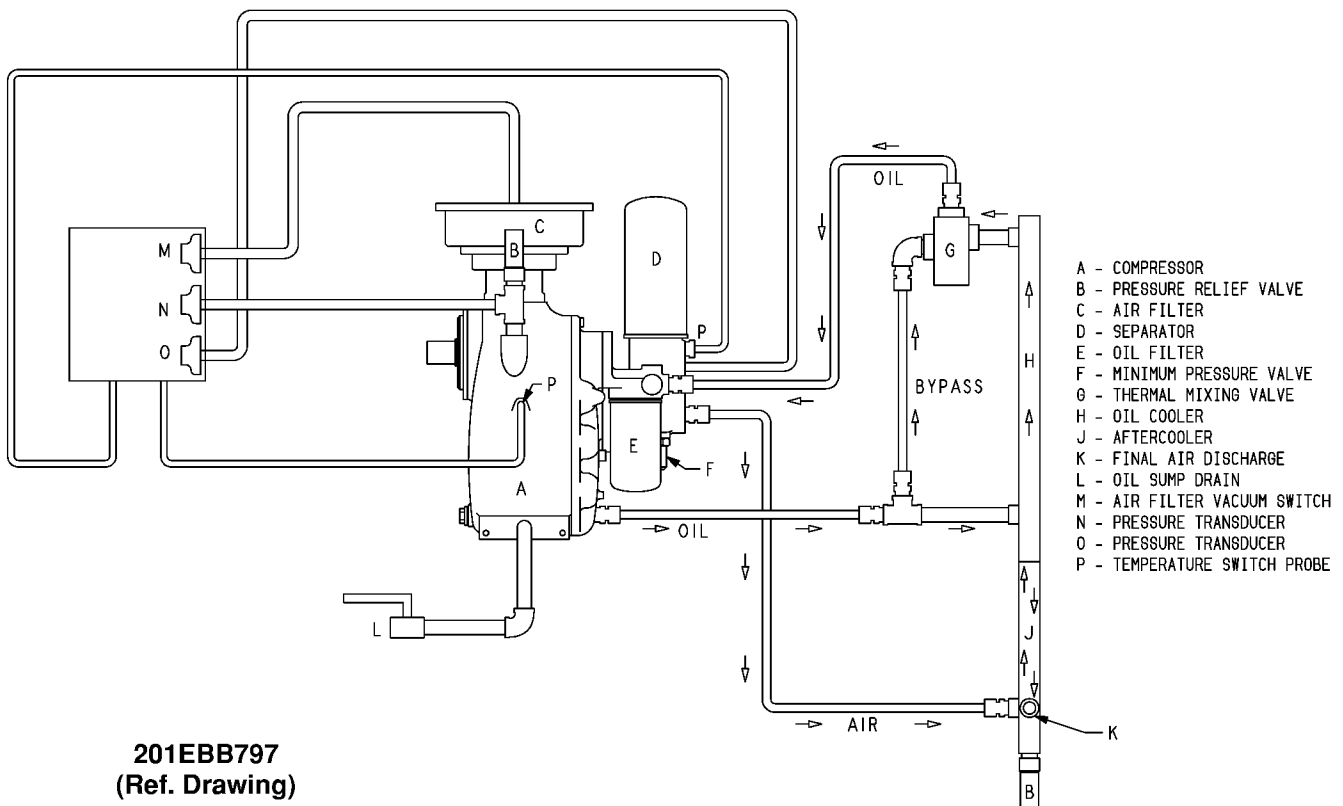


FIGURE 4-1 – CONTROL SCHEMATIC

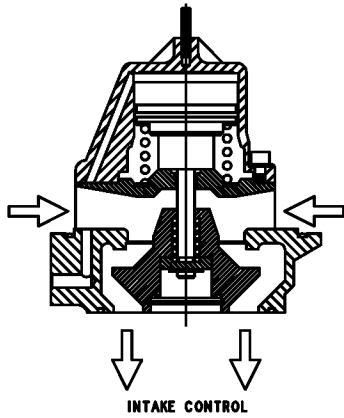


FIGURE 4-2 – INLET VALVE

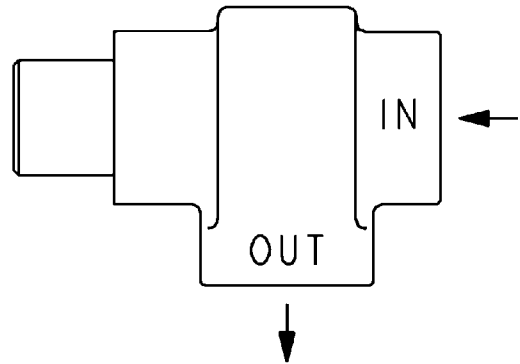


FIGURE 4-3 – MINIMUM PRESSURE/CHECK VALVE

CAUTION

Damage will occur to the machine if it is repeatedly restarted after high temperature stops operation. Find and correct the malfunction before resuming operation.

WARNING

Operation of the unit with improper relief valve setting can result in severe personal injury or machine damage.

Insure properly set valves are installed and maintained.

Relief Valve – A pressure relief valve(s) is (are) installed in the final discharge line and set at the factory to approximately 120% of the unit's full load operating pressure for protection against overpressure. Periodic checks should be made to insure its proper operation.

WARNING

When the relief valve opens, a stream of high velocity air is released, resulting in a high noise level and possible discharge of accumulated dirt or other debris. Always wear eye and ear protection and stand clear of the discharge port when testing the relief valve to prevent injury.

CAUTION

Never paint, lubricate or alter a relief valve. Do not plug vent or restrict discharge.

AIR CONTROL COMPONENTS – All units incorporate the following air control components. See FIGURE 4-1, page 15, for schematic tubing diagram.

Inlet Valve (FIGURE 4-2) – The inlet valve is a pilot-actuated valve that closes to unload the compressor. At shutdown the inlet valve closes to function as a check valve and prevent backflow of air. Air pressure is supplied to the cylinder by the Intake Controller to fully open the inlet valve.

Minimum Pressure/Check Valve (FIGURE 4-3) – An internal spring-loaded minimum pressure valve is used in the final discharge line to provide a positive pressure on the oil system even when the air service valve is fully open. The valve senses upstream pressure. If demand for air exceeds the compressor capacity, the valve throttles the flow to maintain a minimum pressure on the upstream (oil reservoir) side of the valve. When pressure rises above the minimum pressure (standard setting 62 to 67 PSIG) the valve reaches the full open position.

A check valve incorporated in the minimum pressure valve prevents backflow of air from the shop air line when the unit stops, unloads or is shut down.

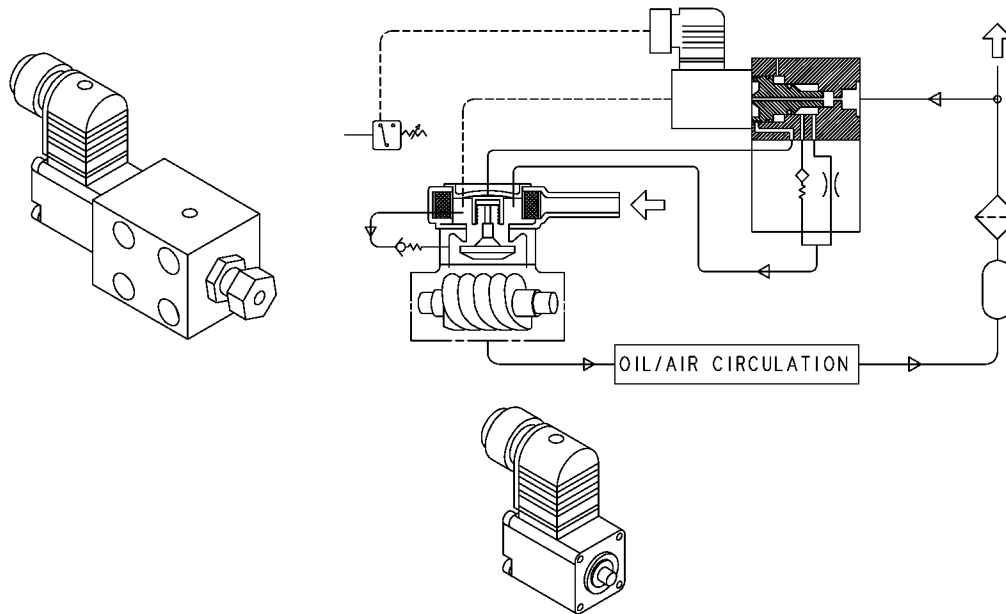


FIGURE 4-4 – INTAKE CONTROLLER

To readjust the minimum pressure:

1. Remove the locknut, located below the air/oil separator.
2. Turn the adjusting screw clockwise to increase the pressure, counterclockwise to decrease the pressure.
3. Retighten the locknut.

⚠ DANGER

Air/oil under pressure will cause severe personal injury or death. Shut down compressor, relieve system of all pressure, disconnect, tag and lockout power supply to the starter before removing valves, caps, plugs, fittings, bolts, and filters.

Intake Controller (FIGURE 4-4) – The intake controller is a solenoid operated control for the inlet valve. The electrical control unit is activated automatically by the electronic controller. When the unload pressure is reached the solenoid valve shuts off, the inlet valve is actuated pneumatically, the intake controller is closed and the compressor is blown down. When the discharge drops below load pressure, the solenoid valve is switched on. This closes the blowdown and feeds

the inlet valve cylinder, so inlet valve opening pressure required to overcome the spring force can be built up in the cylinder above the piston. This pressure is fully relieved via a pressure relief delay valve when the system is switched off. Only restart the system when it is blown down. If a restart is attempted with pressure in the reservoir, the temperature digital display will show reservoir pressure, and the control will prevent starting until the pressure drops below 5 psig.

STARTER/CONTROL BOX (FIGURE 1-2, Section 1, page 2) – The following control components are located on the combination starter/control box.

Hourmeter – A continuous reading (nonreset) type hourmeter displays the accumulated operating time of the unit and provides a convenient means for scheduling changes of oil and servicing of filters, separators and other devices.

Auto-Sentry S Controller With Keypad – Monitors and controls compressor operation.

Emergency Stop Pushbutton – Removes power from the microprocessor controller outputs to provide a positive means of stopping unit in an emergency situation.

CONTROL SYSTEM OPERATION – See FIGURE 4-7, page 22. The following are operations of the Auto-Sentry S Controller.

“STOP/RESET” Button With LED – This button is used to stop the compressor under ordinary conditions. It is also used to extinguish any fault LED’s that are illuminated. In addition, it is used in the procedure to adjust

operating pressure. See “Programming the Load–Unload Pressure Setpoints,” page 19. The LED is illuminated whenever the unit is stopped for any reason EXCEPT a normal stop in one of the “AUTO” modes. A flashing LED indicates that a reset is required.



CAUTION

Damage will occur to the machine if it is repeatedly restarted after any one of the shutdown modes stops operation of the unit. Find and correct the malfunction before resuming operation.

“CONSTANT RUN” Button With LED – This button is used to operate the unit in the constant run mode. In this mode, the compressor runs continuously, loading and unloading in response to air demand. It will continue to run until stopped, either manually or by a protective shutdown. The LED is illuminated at all times while running in this mode.

“AUTO LEAD” Button With LED – This button is used to operate the unit in “Auto–Start–Timed–Stop” mode, either by itself, or as the lead compressor in a Lead/Lag arrangement. Loading and unloading occurs as in the “CONSTANT RUN” mode, however, if the compressor runs unloaded for a period of 10 minutes, the unit is stopped. At this point, the compressor remains in the “AUTO LEAD” mode and will restart when the system pressure reaches the ‘load’ setpoint programmed into the controller. The LED will remain illuminated throughout the cycle.



WARNING

Automatic restarting or electrical shock can cause injury or death. Open, tag and lockout main disconnect and any other circuits before servicing the unit.

“AUTO LAG” Button With LED – This button is used to select the ‘lag’ unit in a lead–lag arrangement. Operation is identical to “AUTO LEAD” except that the start–load and unload setpoints are automatically 5 PSI lower than programmed.

NOTICE

Any mode may be selected at any time without stopping the compressor.

“HIGH AIR TEMPERATURE” LED – This LED is used to indicate an over temperature condition at either the compressor or oil separator discharge. At the time of a high temperature shutdown, the LED is illuminated and the temperature digital readout is locked on to the offending temperature. Illumination of the decimal point in the lower right hand corner of the digital readout indicates that the temperature displayed is at the oil separator. A non–illuminated decimal point indicates compressor discharge. Pressing “STOP/RESET” will extinguish the LED (if the temperature has lowered below 225° F) and revert the digital readout to displaying actual discharge temperature.

“MOTOR OVERLOAD” LED – This LED indicates that one of the motor overload relays has tripped. The overload relay itself must be reset before pressing “STOP/RESET” will extinguish the LED.

“CHANGE SEPARATOR” LED – This LED flashes when the differential pressure across the oil separator reaches approximately 8 PSI. At this point, schedule the separator element for service at the earliest opportunity. (See Section 5, pages 27 and 28, for separator maintenance.)

Should the condition be ignored and allowed to further deteriorate, the compressor will be shutdown and the LED illuminated steadily when the differential pressure reaches 15 PSI.



CAUTION

Machine damage will occur if compressor is repeatedly restarted after any one of the shutdown modes stops operation of the unit. Find and correct the malfunction before resuming operation.

“CHANGE AIR FILTER” LED – This LED is used to signal when the air filter requires servicing or changing. It is a reminder only and will not stop or impede the operation of the unit. Operating the compressor with the LED illuminated risks collapse of the filter and ingestion into the compressor.



CAUTION

Machine damage can occur with extended operation after “Change Air Filter” LED illuminates. Service air filter as soon as possible.

Pressure And Temperature Digital Readouts – These readouts normally indicate pressure after the minimum pressure check valve and temperature at the air end discharge. See “High Air Temperature LED”, page 18, for a description of readout action during a high temperature condition.

Alternately, these readouts can be selected to display oil reservoir pressure and separator air temperature. To obtain such display while the compressor is running, simply press the operating mode button that corresponds to the current operating mode of the unit. (For Example: If the unit is operating in “AUTO LEAD” mode, press the “AUTO LEAD” button.) This will cause the readout to display the alternate parameters. This alternate display mode is indicated by illuminated decimal points in the lower right hand corner of each display. After releasing the button, the display will revert to its normal mode in 5 seconds.

The digital readouts are also used to display error messages. These error messages correspond to various indications concerning condition of pressure and temperature sensors and EMERGENCY STOP condition.

DEFINITIONS OF ERROR MESSAGES – Refer to the chart in FIGURE 4–5 below for definitions. An error message will stop the compressor, if running, and prevent it from restarting. The failed sensor must be replaced to clear the error.

Any condition requiring the control panel to be reset will be indicated by a flashing “STOP/RESET” LED. If all readouts and LED’s are flashing, a power interruption

has occurred, requiring the control panel to be reset.

Programming The Load–Unload Pressure Setpoints – Programming of the Load and Unload Pressure setpoints can only be accomplished with the unit not running.

Step 1: Stop the compressor and remove all power from the unit by opening main disconnect.



WARNING

Electrical shock can cause injury or death. Open main disconnect and any other circuits, tag and lockout before working inside the control box.

Step 2: Turn the “Setup” switch located on the controller circuit board (inner side of control box panel) to the “+” position. Close control box panel and restore power.

NOTICE


This switch is provided to prevent unauthorized programming of the setpoints. If this level of security is not required, the “Setup” switch can be left in the “+” position, eliminating Steps 1 and 2.

Step 3: With the unit already in the STOP/RESET condition, press the “STOP/RESET” button a second time. This puts the controller in program mode. The displays will read as follows:


Pressure: the current unload setpoint (adj. 58–175 psig)

| Pressure Readout | | Temperature Readout | |
|------------------|--|---------------------|--|
| Error # | Meaning | Error # | Meaning |
| E01 | Failure of Final Discharge Pressure Sensor | E01 | Failure of Compressor Temperature Sensor |
| E02 | Failure of Oil Sump Pressure Sensor | E02 | Failure of Separator Temperature Sensor |
| E03 | Failure of Both Pressure Sensors | E03 | Failure of Both Temperature Sensors |
| E04 | EMERGENCY STOP | | |

 FIGURE 4–5 – DEFINITION OF ERROR MESSAGES


Temperature:  indicates that the pressure value is the “un-
load” value.

Step 4: Press the “AUTO LEAD” button to raise the unload setpoint. Press “AUTO LAG” to lower the unload setpoint. See FIGURE 4–6, page 21.

| |
|--|
|  WARNING |
| Operation at excessive discharge air pressure can cause personal injury or damage to equipment. Do not set unload pressure above the maximum stamped on the unit nameplate. |

Step 5: When the desired unload setpoint is displayed in the pressure readout, press the “STOP/RESET” button. This will enter the desired unload setpoint and advance the programming function to the load setpoint. The displays will now read:


Pressure: the current load setpoint (adj. 50–167 psig)

Temperature:  indicates that the pressure value is the “load” value.

Step 6: Raise or lower the load setpoint in the same manner as the unload setpoint in Step 4.

| |
|--|
| NOTICE |
| The load setpoint cannot be set within 8 PSI of the unload setpoint. See FIGURE 4–6, page 21. |

Step 7: When the desired load setpoint is displayed in the pressure readout, press the “STOP/RESET” button, entering the new load setpoint and completing the programming.

Step 8: The display now indicates: 

At this time, compressor rotation may be checked by pressing any of the three operat-


ing mode buttons. The correct rotation is counterclockwise. The starter will be momentarily energized giving a slight rotation that is short enough in duration to prevent reverse oil flow in the event that rotation is reversed. Press “Stop/Reset” to exit jog mode. See Note C, below.

Step 9: The displays will now read:

Pressure 
Temperature 

If this compressor is equipped with the expansion board for the remote control option this must be set to “yes”. The standard setting is “no”. This value is toggled by pressing either “Auto” button. Press the “Stop/Reset” button to continue to the next step.

Step 10: The display now indicates either

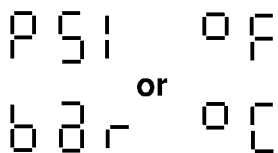

Pressing any mode key will toggle the display from one set of units to the other. PSI/°F causes the controller to display pressures in pounds per square inch and temperatures in degrees Fahrenheit. bar/°C causes the controller to display parameters in bars and degrees Centigrade. Press “Stop/Reset” when the desired units are visible in the display to continue.

Step 11: When display shows dashes (— —): (The Following steps may be skipped by waiting until the display resumes its normal numbers.)

- a) Press “Stop–Reset” – the pressure display now shows the current “zero” pressure for the final discharge transducer in the left window, and “P1” in the right window.
- b) Press “Stop–Reset” again – this will zero the circuit board on the final discharge pressure transducer and move the display to the next step. The left window will read the current “zero” pressure for the oil reservoir transducer and the right window will now read “P2.”
- c) Press “Stop–Reset” again – this will zero the circuit board on the oil reservoir pressure transducer and move display program back to the normal setup mode. The display

should read “0” pressure in the left window, and — current sump temperature in the right window.

Step 12: Move the circuit board slide switch back to the “set” position (right). You may now proceed with normal start up procedure.

| NOTICE | |
|---------------|---|
| A. | To readjust, the slide switch must be in the “+” position. |
| B. | If procedure is repeated, the transducer zero operation may be bypassed by not pressing “Stop–Reset” while the dashes (— —) are displayed. |
| C. | Transducer must be zeroed only while at zero “0” pressure, or invalid shutdowns may occur. |

LEAD-LAG OPERATION OF TWO COMPRESSORS – The Auto–Sentry S controller provides the capability of true lead–lag operation without the need to

purchase any additional equipment and without complicated interconnecting wiring.

Follow these steps to operate two compressors in a lead–lag arrangement:

Step 1: Program load and unload pressure setpoint on both units to the same value. For example: Compressor “A” load at 92 PSI; unload at 100 PSI. Compressor “B” load at 92 PSI; unload at 100 PSI. See page 19, this section, for complete information on programming the setpoints.

Step 2: Operate one compressor in the “Auto Lead” mode. This compressor will now be the “Lead” or “Base Load” compressor.

Step 3: Operate the second compressor in the “Auto Lag” mode. This compressor will now be the “lag” or “trim” compressor. It will automatically be brought on line, if required, by a large air demand. After the demand is satisfied, the lag unit will unload, time out and stop, ready to start again when needed.

Step 4: Periodically reverse the roles of the units by changing each unit’s mode of operation from “Auto Lead” to “Auto Lag” and vice versa. By using the hourmeters on the control panel to schedule the mode changes, the operating hours can be kept as close as possible, equalizing machine wear and minimizing maintenance costs.

| NAMEPLATE FULL LOAD OPERATING PRESSURE | CONTROL SYSTEM PRESSURE (PSI) | |
|---|----------------------------------|--------|
| | LOAD | UNLOAD |
| 100 | 92 | 100 |
| 125 | 117 | 125 |
| 150 | 142 | 150 |
| 175 | 167 | 175 |

| NOTICE | |
|---|--|
| Load setpoint cannot be set within 8 psi of the unload setpoint. | |
| Minimum operating pressure is 60 – 65 PSIG. | |

FIGURE 4–6 – MAXIMUM SETPOINTS FOR AUTO–SENTRY “S” CONTROLLER, PSIG


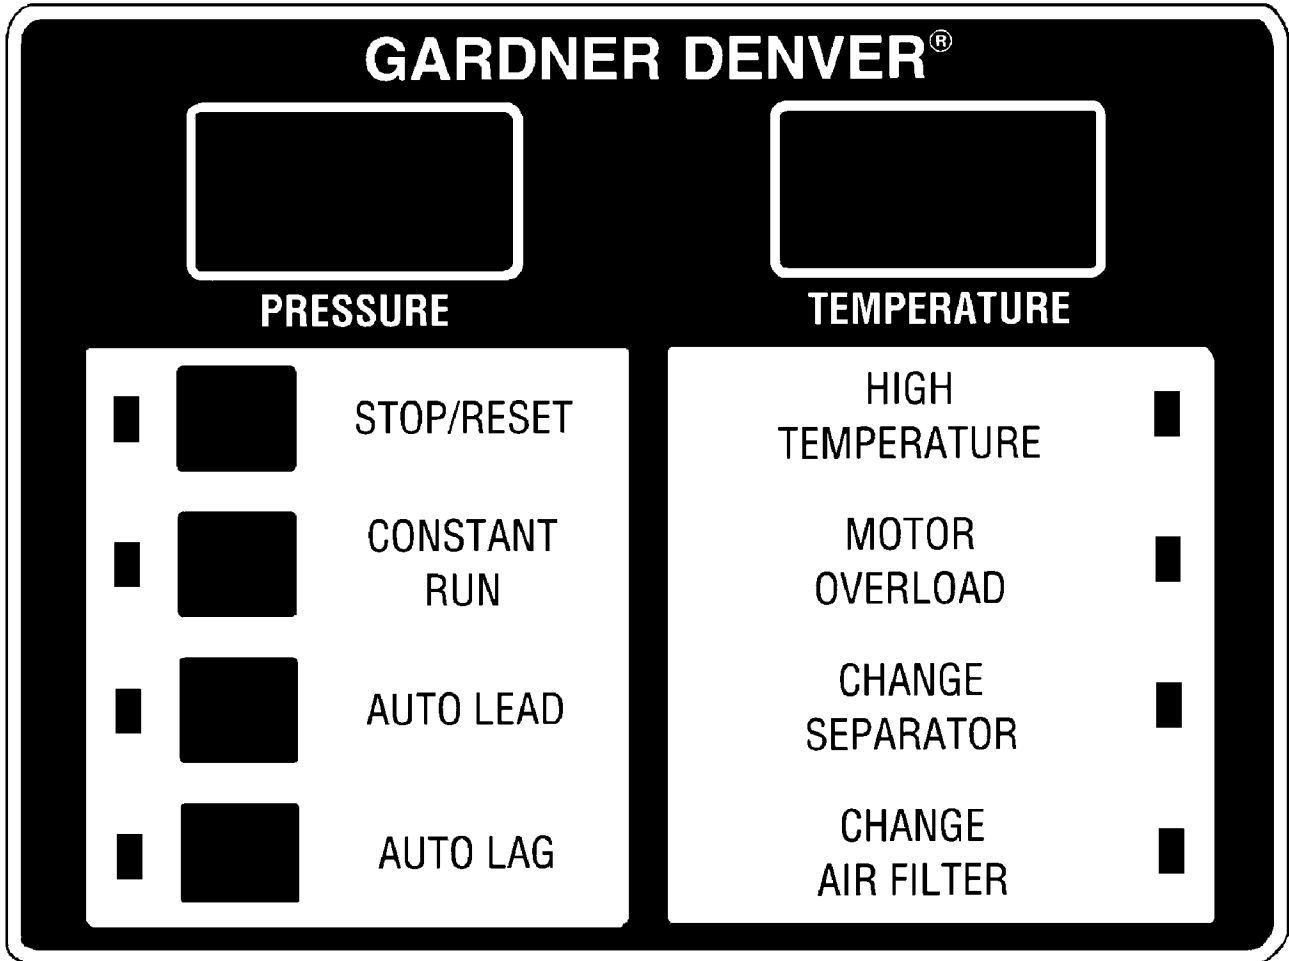


FIGURE 4-7 – AUTO SENTRY “S” SOLID STATE CONTROL TOUCH PAD

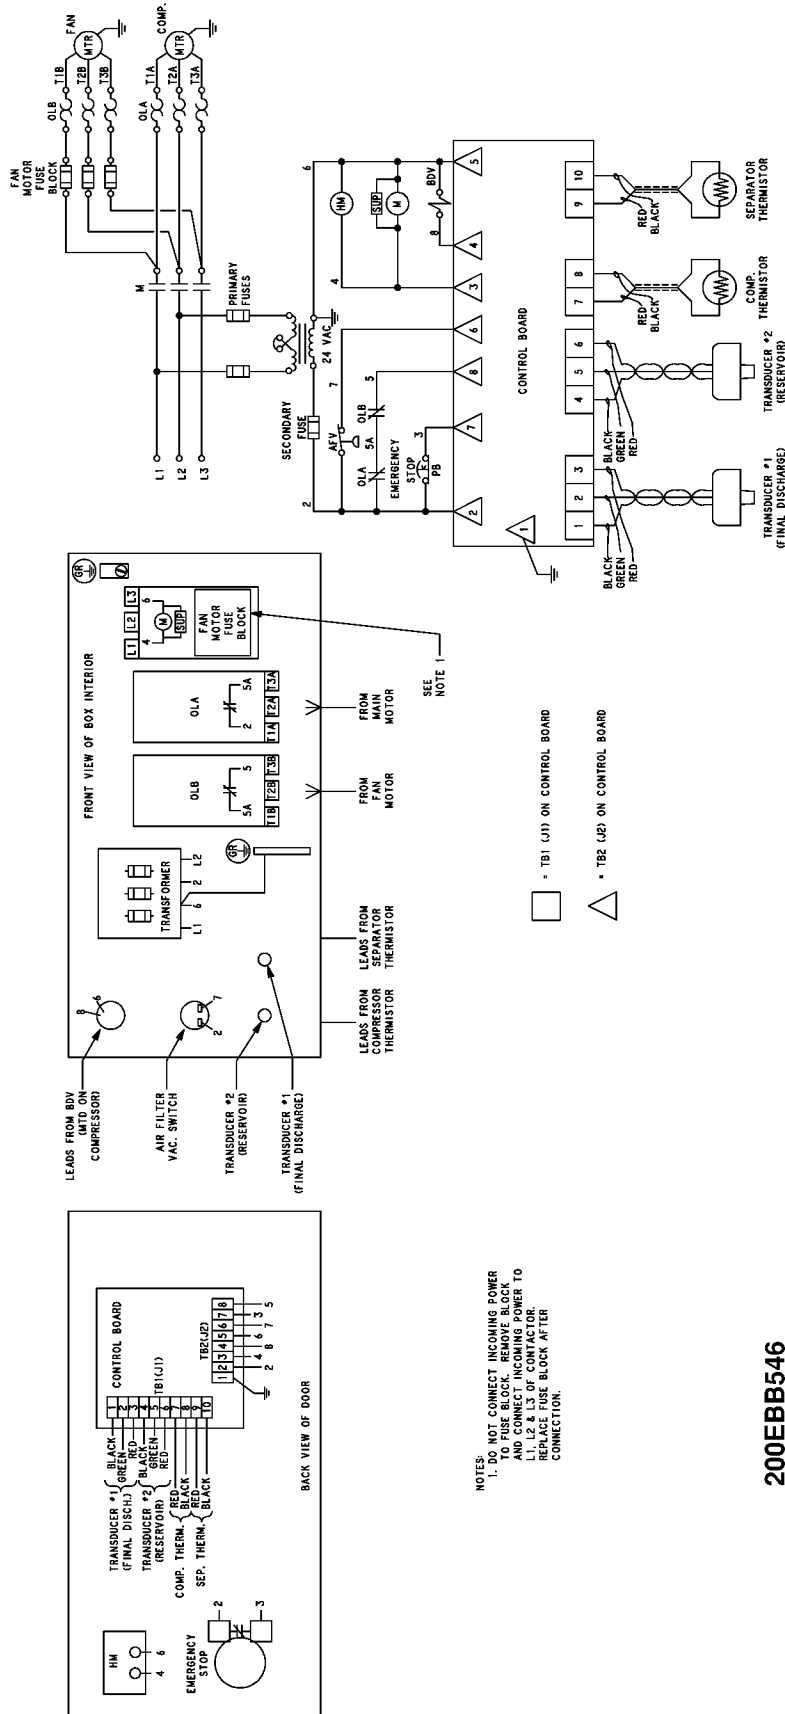

200EBB546
(Ref. Drawing)

FIGURE 4-8 - WIRING DIAGRAM

SECTION 5 LUBRICATION OIL COOLER, OIL FILTER & SEPARATOR

COMPRESSOR OIL SYSTEM (FIGURE 4–1, page 15) The compressor oil system cools the compressor, lubricates moving parts and seals internal clearances in the compression chamber.

Air pressure in the oil reservoir forces oil through the oil cooler, thermostatic mixing valve, oil filter and into the compressor main oil gallery.

The oil passes through internal passages for lubrication, cooling and sealing. The air–oil mixture is then discharged to the oil reservoir where a large part of the entrained oil drops out of the air stream; the air then passes through the final oil separator where most of the remaining oil is removed. The separated oil is returned to the compressor and the air passes to the final discharge line.

RECOMMENDED LUBRICANT – Gardner Denver® compressors are factory filled with AEON™ lubricants. These lubricants are formulated to the highest quality standards and are factory authorized, tested and approved for use in rotary screw compressors. AEON™ lubricants are available through your authorized Gardner Denver compressor distributor.

OIL SPECIFICATIONS – The recommended compressor lubricant is Gardner Denver® AEON™ 2000 Lubricating Coolant which can be used for year–round operation except as noted in the “High Temperature Operation” paragraph, page 25, or low temperature, see “Installation for Cold Weather,” Section 2, page 10. AEON™ 2000 Lubricating Coolant is a superior petroleum base lubricant formulated and containing additives for use in Gardner Denver® compressors.



CAUTION

Use of improper lubricants will cause damage to equipment. Do not mix different types of lubricants or use inferior lubricants. Check the decal on the oil reservoir for lubricating coolant specification.

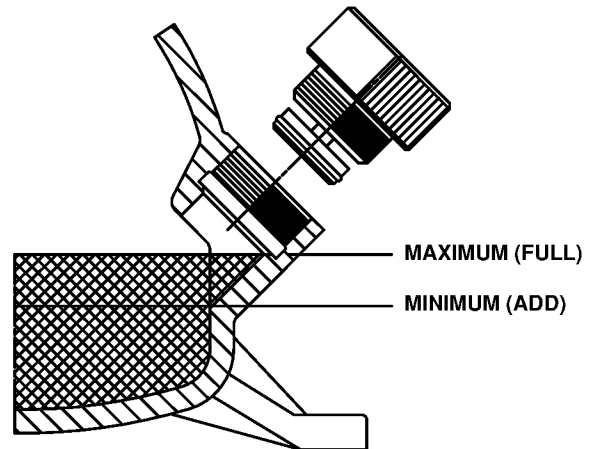


FIGURE 5–1 – OIL FILL

PROCEDURE FOR ADDING/CHECKING OIL LEVEL AND CHANGING THE OIL – Check the oil level before starting the unit and after every 100 hours of operation.

1. Be sure the unit is completely off and that no air pressure is in the oil reservoir.
2. Disconnect, tag and lockout the power supply to the starter.
3. Wipe away all dirt around the oil filler plug.
4. Remove the oil filler plug and add oil as required to return the oil level to the chamfer at the top of the filler neck (see FIGURE 5–1, above). The oil filler plug is provided with a lateral safety hole, from which oil or air will appear if the oil reservoir has not been completely blown down.
5. Install the oil filler plug, run the unit and check for leaks.

DO NOT OVERFILL. The quantity required to raise the oil level from “MINIMUM” to “MAXIMUM” is shown in FIGURE 5–1. Repeated addition of oil between oil changes may indicate excessive oil carry–over and should be investigated.

Use only clean containers and funnels so no dirt enters the reservoir. Provide for clean storage of oils. Changing the oil will be of little benefit if done in a careless manner.

 **DANGER**

Air/oil under pressure will cause severe personal injury or death. Shut down compressor, relieve system of all pressure, disconnect, tag and lockout power supply to the starter before removing valves, caps, plugs, fittings, bolts, and filters.

 **CAUTION**

Excessive oil carry-over can damage equipment. Never fill oil reservoir above the "FULL" level.

COLD AMBIENT OPERATION – See "Installation for Cold Weather Operation," and FIGURE 2-3, Section 2, pages 9 and 10.

HIGH TEMPERATURE OPERATION – If the discharge temperature is sustained between 200–210° F for a period of more than four (4) hours due to continuing high ambient air temperature, use Gardner Denver® AEON™ 9000 SP Lubricating Coolant which is a superior synthetic lubricant. Short periods of up to four (4) hours of sustained discharge temperatures up to 210° F do not require a change from the recommended year-round lubricant AEON™ 2000.

LUBRICANT UPGRADE PROCEDURE – Upgrading to a longer life lubricant is essentially a very worthwhile practice. Following are the primary steps to be completed when upgrading or changing the type of lubricant.

1. Thoroughly drain system:
 - Drain oil from air end and cooler while hot.
 - Break low point connections and drain oil from pipe runs.
 - Dump Oil from filter and reinstall used filter.

2. Fill system with a 50 percent charge of the new lubricant:
 - Start the machine and stay there to observe.
 - Allow the machine to run about five minutes at temperature, or until temperature stabilizes, then shut down.
3. Thoroughly drain machine.
4. Change to a new filter and separator.
5. Fill system with a full charge of the new lubricant.
6. Machine should then be run normally; however, total run time after the initial changeout should be 50 percent of normal anticipated service life of the new lubricant.
 - Drain all lubricant from system, change filter and separator, and replace with full charge of the new lubricant.
7. Subsequent lubricant changeouts should be at normal intervals. (See "Oil Change Interval" and chart, page 26.)

 **CAUTION**

Improper equipment maintenance with use of synthetic lubricants will damage equipment. Oil filter and oil separator change intervals remain the same as for AEON™ 2000 — See Maintenance Schedule, page 32.

 **DANGER**

Air/oil under pressure will cause severe personal injury or death. Shut down compressor, relieve system of all pressure, disconnect, tag and lockout power supply to the starter before removing valves, caps, plugs, fittings, bolts, and filters.

| | |
|---|-----------------|
| System Capacity: Reservoir Plus Oil Cooler and Piping | 1.0 U.S. Gallon |
| "ADD" Range to "FULL" Level | 1 U.S. Quart |

FIGURE 5-2 – APPROXIMATE OIL SYSTEM CAPACITIES

⚠ WARNING

High temperature operation can cause damage to equipment or personal injury. Do not repeatedly restart the unit after high temperature stops operation. Find and correct the malfunction before resuming operation.

⚠ WARNING

All materials used in Gardner Denver® compressor units are compatible with AEON™ 9000 SP Lubricating Coolant. Use caution when selecting downstream components such as air line lubricating bowls, gaskets and valve trim.

AEON™ 9000 SP Synthetic Lubricant is not compatible with low nitrile Buna N or acrylic paints. AEON™ 9000 SP is compatible with most air system downstream components.

Material Safety Data Sheets (MSDS) are available for all AEON™ lubricants from your authorized Gardner Denver® distributor or by calling (901) 363-6100.

MOISTURE IN THE OIL SYSTEM – In normal humidity and with normal operating temperatures and pressures, the thermal mixing valve controls the oil temperature and prevents moisture contamination of the oil. Unusual cooling of the oil reservoir, short loaded cycle in high humidity or malfunctions of the thermal valve

may result in moisture in the oil system which is detrimental to compressor lubrication and could cause oil carryover. If moisture is observed in the oil reservoir, drain the moisture and correct the condition causing the accumulation. See “Compressor Oil System Check,” page 28 and “Thermal Control (Thermostatic Mixing) Valve,” page 27.

OIL CHANGE INTERVAL – Recommended oil change intervals are based on oil temperature. FIGURE 5-3 shows how the change interval is affected by temperature. When operating conditions are severe (very dusty, high humidity, etc.), it will be necessary to change the oil more frequently. Operating conditions and the appearance of the drained oil must be surveyed and the oil change intervals planned accordingly by the user. Gardner Denver® offers a free oil analysis program with the AEON™ lubricants and we recommend a sample be sent in at 100 hours on a new unit.

DRAINING AND CLEANING OIL SYSTEM – Always drain the complete system. Draining when the oil is hot will help to prevent varnish deposits and carry away impurities.

To drain the system, use one of the following methods:

1. If the unit is not elevated high enough to use the oil reservoir drain line to drain oil, a small hand, electric or air operated pump should be used to drain reservoir through the oil filler opening or from the drain valve.
2. If the unit is elevated so that the oil reservoir drain can be used, empty the oil reservoir through the drain valve to a suitable container or sump.
3. If the drained oil and/or the oil filter element are contaminated with dirt, flush the entire system: reservoir, oil cooler, mixing valve and lines. Inspect the oil separator elements for dirt accumulation; replace if necessary. If a varnish deposit exists, contact the factory for recommendations for removal of the deposit and prevention of varnish.

Use only CLEAN containers and funnels so no dirt enters the reservoir. Provide for clean storage of oils.

| Discharge Temperature | AEON 2000 Change Interval | AEON 4000 Change Interval | AEON 9000 SP Change Interval |
|------------------------------|----------------------------------|----------------------------------|-------------------------------------|
| Up to 180° F | 2000 Hrs. | 6000 Hrs. | 8000 Hrs. |
| 180° to 190° F | 1500 Hrs. | 4500 Hrs. | 6000 Hrs. |
| 190° to 200° F | 1000 Hrs. | 3000 Hrs. | 4000 Hrs. |
| 200° F+ | 500 Hrs. | 1500 Hrs. | 2000 Hrs. |

FIGURE 5-3 – OIL CHANGE INTERVAL

Changing the oil will be of little benefit if done in a careless manner.

COMPRESSOR OIL FILTER (FIGURE 1-2, Section 1, page 2) – This replaceable element filter is a vital part in maintaining a trouble-free compressor, since it removes dirt and abrasives from the circulated oil. The filter is equipped with a relief valve that opens in the event the element becomes dirty enough to block the flow of oil. Use only the replacement element shown on the filter tag or refer to the parts list for the part number.

Use the following procedure to replace the filter element. Do not disturb the piping.

 **CAUTION**

Improper oil filter maintenance will cause damage to equipment. Replace filter element every 1000 hours of operation. More frequent replacement could be required depending on operating conditions. A filter element left in service too long may damage equipment.

1. Stop unit and be sure no air pressure is in the oil reservoir.
2. Remove the spin-on element.
3. Clean the gasket face of the filter body.
4. Coat the new element gasket with clean lubricant used in the unit.
5. Screw new element on filter body and tighten by hand. **DO NOT OVERTIGHTEN ELEMENT.**
6. Run the unit and check for leaks.

THERMAL CONTROL (THERMOSTATIC MIXING) VALVE (FIGURE 5-4) is installed in system as shown in FIGURE 4-1, Section 4, page 15. This valve is used to control temperature of the oil both air-cooled radiator and water-cooled heat exchanger type oil cooler systems. On start-up with unit cold, element is open to bypass, allowing oil to pass directly from the reservoir to compressor during warm-up. As oil warms, element gradually closes to the bypass allowing more of the oil from the cooler to mix with oil from the bypass.

After the unit is warmed up, the mixing valve maintains oil injection temperature into the compressor at a minimum of 170° F. This system provides proper com-

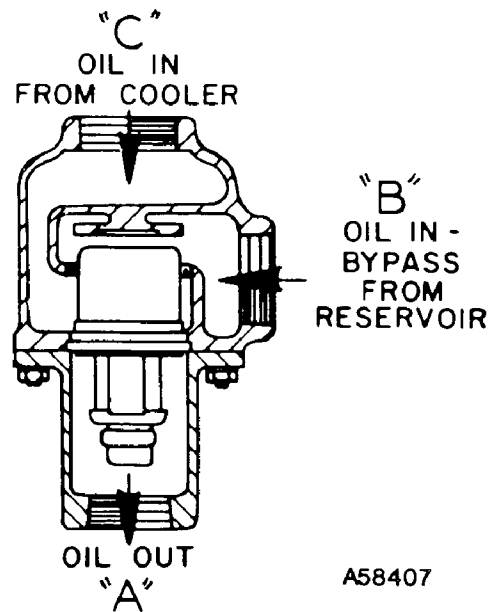


FIGURE 5-4 – THERMOSTATIC MIXING VALVE

pressor warm-up and prevents moisture contamination of the oil.

To check the element, heat in oil – it should be fully extended at 170° F. If the unit shuts down due to high air discharge temperature, the cause may be that the element is stuck open to the bypass, in which case bypass lines (FIGURE 4-1, Section 4, page 15) will be hot to touch and lines out of mixing valve much cooler. When flushing the oil system, remove the mixing valve and clean all parts thoroughly.

OIL RESERVOIR – The oil reservoir-separator, located in the compressor housing, combines multiple functions into one vessel. The lower half is the oil reservoir, providing oil storage capacity for the system and the top portion, a primary oil separation means. The reservoir also provides limited air storage for control and gauge actuation.

COMPRESSOR OIL SEPARATOR – The compressor oil separator located on top of the filter housing, screwed onto a fitting, features a renewable spin-on type separator element and provides the final removal of oil from the air flow.

Oil carry-over through the service lines may be caused by a faulty oil separator, overfilling of the oil reservoir, oil that foams, oil return line malfunction, or water condensate in the oil. If oil carryover occurs, inspect the separator only after it is determined that the oil level is not too high, the oil is not foaming excessively, the oil return tube from the bottom of the separator to the com-


pressor cylinder is not clogged or pinched off, the check valve in the oil return is functioning properly, and there is not water or an oil/water emulsion in the oil.

Oil carry-over malfunctions of the oil separator are usually due to using elements too long, heavy dirt or varnish deposits caused by inadequate air filter service, use of improper oil, or using oil too long for existing conditions. Excessive tilt angle of the unit will also hamper separation and cause oil carry-over.

Oil separator element life cannot be predicted; it will vary greatly depending on the conditions of operation, the quality of the oil used and the maintenance of the oil and air filters. The condition of the separator can be determined by pressure differential or by inspection.

Pressure Differential Gauging – The “CHANGE SEPARATOR” message will flash when the pressure differential across the oil separator reaches approximately 8 PSI. Replace the oil separator element at this time. If ignored, the unit will shut down and the display will indicate shutdown and the change separator LED will be on when the pressure differential reaches 15 PSI.


To measure the pressure differential, see “Pressure and Temperature Digital Readouts” in Section 4, page 19. Simply subtract the downstream reading from the upstream reading.

| |
|---|
|  CAUTION |
| Using an oil separator element at excessive pressure differential can cause damage to equipment. Replace the separator when the “Change Separator” advisory appears. |

| |
|---|
| NOTICE |
| A sudden drop of zero pressure differential or sudden heavy oil carryover may indicate a ruptured element. |

Inspection – After removal of separator element, shine a light inside the element to reveal areas of heavy dirt or varnish deposits or breaks (ruptures) in element media.

Removal Of Oil Separator For Inspection Or Replacement:

| |
|--|
|  DANGER |
| Air/oil under pressure will cause severe personal injury or death. Shut down compressor, relieve system of all pressure, disconnect, tag and lockout power supply to the starter before removing valves, caps, plugs, fittings, bolts, and filters. |

1. Be certain unit is off and all system pressure is relieved.
2. Disconnect, tag and lockout the power supply to the starter.
3. Remove spin-on element.
4. Clean the gasket seating surface of the head.
5. Inspect and/or replace the separator as necessary. Before reassembly, coat the separator element gasket with the same lubricant used in the unit.
6. Screw on until gasket makes contact. Hand tight- en 1/3 to 1/2 turn extra.
7. Run the unit and check for leaks.

Oil Scavenge Site Glass – During operation the performance of the oil separator can be monitored through the oil site glass in the scavenge line. The site glass shows the oil being returned to the air end. When the unit is started, “Full Oil” is shown, due to oil accumulation in the separator. After a few minutes, only a small amount of oil will be seen. This signifies that the air/oil separator is working properly.

COMPRESSOR OIL SYSTEM CHECK – The following readings are based on ambient temperature of 80° F with the system in good condition. The compressor should be at operating temperature at the time of the checks. One-half hour of loaded operation is usually sufficient to reach level-out operating temperatures.

Air and Oil Discharge Temperature – 170° to 200° F – Read at the gauge on the instrument panel or check with a thermometer at the discharge housing.

Compressor Oil Inlet Temperature – 165° to 175° F – Install a tee at oil filter outlet and check with a thermometer.

Oil Inlet Pressure – Check at the fitting in the line near the compressor oil inlet. With air receiver pressure at 100 psi, oil inlet pressure should be 65–75 psig.

Oil Cooler Oil Pressure Differential (Air-Cooled Radiator) – Check differential across the oil system by measuring oil inlet pressure as described above.

Oil Cooler Temperature Differential (Air-Cooled

Radiator) – The oil temperature differential depends on the temperature of the air at the oil cooler fan and cleanliness of the core faces. As ambient temperatures and core restrictions increase, the oil cooler outlet temperature will increase. The oil inlet temperature is approximately the same as the air discharge temperature – see the gauge on the instrument panel. The outlet oil temperature may be checked by installing a tee at the oil filter outlet.

SECTION 6 AIR FILTER

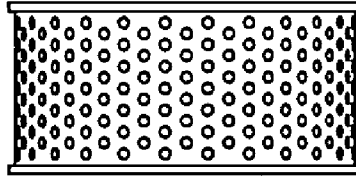


FIGURE 6-1 – STANDARD DUTY AIR FILTER

STANDARD DUTY AIR FILTER (FIGURE 6-1) – Service and replacement instructions are given in the following sections: Filter Element and Filter Element Life.

Filter Element – The element should be serviced when inspection indicates an accumulation of dirt on the outside of the element. Clean every 100 to 500 operating hours depending on dust conditions. Inspect every few days until experience determines the proper time interval for servicing.

To Service:

1. Remove element from filter housing.
2. Blow off excess dirt with air nozzle. Direct air blast parallel to element pleats at a slight upward angle. Do not point air blast directly at element.
3. Inspect for rupture by placing a bright light inside the element. The slightest rupture requires replacement of the element.

Filter Element Life – The element should be replaced after eight cleanings or if visual inspection indicates a rupture, crack or pin hole in the pleated media. Inspection should be done by placing a bright light inside the element.

WARNING

Do not oil this element. Never operate unit without element. Never use elements that are damaged or ruptured. Never use elements that won't seal. Keep spare elements on hand to reduce downtime. Store elements in a protected area free from damage, dirt and moisture. Handle filter parts with care.

SECTION 7 BELT DRIVE

Proper drive belt tension and alignment are provided at the factory, however, good practice dictates checking the drive alignment and tension after shipment and before initial start-up.

Sheaves should align straight across the front with a straight edge. The best tension is just enough tension to keep belts from “squealing” on start-up.

CAUTION

Excessive belt tension can damage the equipment. Tension the belts as shown in FIGURE 7-1.

Belts can be changed when necessary by the following instructions. First, disconnect, tag and lockout power to the starter. Then remove the wire guard. Then loosen, but do not remove, the four motor foot nuts.

Next, use the adjusting screws in the motor base to loosen belt tension. Remove the belts, and replace with new belts. Check for correct belt tension and re-attach the wire guard.


CAUTION

Interference between the fan and the orifice can damage equipment. Be certain the orifice has even clearance around the fan before starting the unit.

CHECKING BELT TENSION – Using a spring scale, apply a perpendicular force to each belt at the midpoint of the span and measure the deflection. Correct deflection force and deflection are shown in FIGURE 7-1. To tighten belts, merely increase the center distance.

NOTICE

When a new set of belts is installed on a drive, the initial deflection force should be 1/3 greater than shown in FIGURE 7-1. Recheck tension frequently during the first 24 hours of operation.

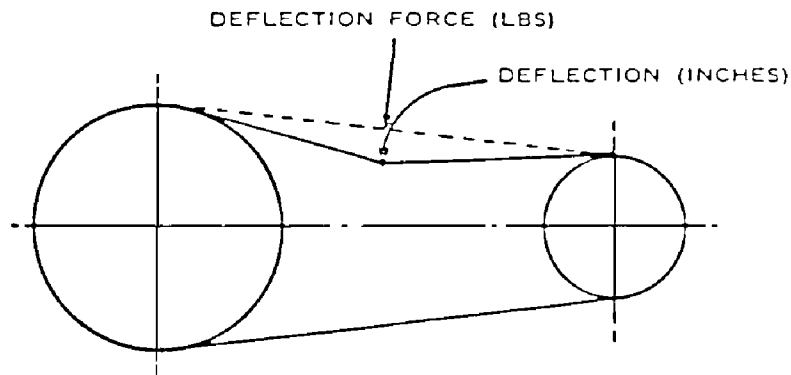

| Motor H.P. | No. Of Belts | Deflection Force Pounds (per belt) | Deflection In Inches |
|------------|--------------|------------------------------------|----------------------|
| 7.5 | 3 | 6 – 8.5 | 5/16 |
| 10 | 3 | 6 – 7 | 5/16 |
| 15 | 3 | 6 – 7 | 5/16 |

FIGURE 7-1 – BELT TENSION 3VX BELTS

SECTION 8 MAINTENANCE SCHEDULE

SERVICE CHECK LIST –

Air Filter – Operating conditions determine frequency of service. The “CHANGE AIR FILTER” display will flash to signal that the air filter requires servicing or changing. See “Air Filter,” Section 6, page 30.

Oil Separator – Operating conditions determine frequency of service. The “CHANGE SEPARATOR” display will flash to signal that oil separator element requires changing. See “Compressor Oil Separator” in Section 5, page 27.

Refer to “Compressor Oil Separator”, Section 5, page 27, for further details.

Motor Lubrication – Refer to Section 2, page 11, and Maintenance Schedule Chart below.

Every 8 Hours Operation

1. Observe if the unit loads and unloads properly.
2. Check discharge pressure and temperature.
3. Check Panel LED’s for advisories.

On All Startups or Every 100 Hours Operation

1. Check the reservoir oil level – add oil if required. See Section 5. If oil consumption is high, refer to “Excessive Oil Consumption”, Section 9, page 34.

Every 125 Hours Operation

1. Check for dirt accumulation on oil/aftercooler core faces and the cooling fan. If cleaning is required, clean the exterior fin surfaces of the cores by blowing compressed air carrying a nonflammable safety solvent in a direction opposite that of the cooling fan air flow. This cleaning operation will keep the exterior cooling surfaces clean and ensure effective heat dissipation.

Every 1000 Hours Operation

1. Change oil filter element.

Every 2000 Hours Operation

1. Change the compressor lubricant. UNDER ADVERSE CONDITIONS, CHANGE MORE FREQUENTLY (refer to “Oil Change Interval”, Section 5, page 26). Flush system if required.

Every Year

1. Check the relief valve for proper operation. See Section 4, page 16.

MAINTENANCE SCHEDULE (See detail notes above)

| Maintenance Action | If Panel LED is Lit | Every 8 Hours | Every 100 Hours** | Every 125 Hours | Every 1000 Hours | Every 2000* Hours | Every Year |
|--|---------------------|---------------|-------------------|-----------------|------------------|-------------------|------------|
| Change Air Filter | • | | | | | | |
| Change Oil Separator | • | | | | | | |
| Check Reservoir Oil Level | | | • | | | | |
| Check For Proper Load/Unload | | • | | | | | |
| Check Discharge Pressure/Temp | | • | | | | | |
| Check Dirt Accumulation on Cooler | | | | • | | | |
| Change Oil Filter Element | | | | | • | | |
| Change Compressor Lubricant (AEON™ 2000) | | | | | | • | |
| Check Relief Valve | | | | | | | • |

* See Oil Change Interval Chart, FIGURE 5–3, Section 5, Page 26, for specific lubricant life.

** Check oil before all start-ups and every 100 hours of uninterrupted operation.

SECTION 9 TROUBLE SHOOTING

| SYMPTOM | POSSIBLE CAUSE | REMEDY |
|--|---|---|
| Compressor fails to start. | <ol style="list-style-type: none"> 1. Wrong lead connections. 2. Blown fuses in control box. 3. Motor starter overload heaters tripped. 4. Pressure in reservoir. 5. Read error message on control panel. See Section 4. | <ol style="list-style-type: none"> 1. Change leads. 2. Replace fuse. 3. Reset and investigate cause of overload. 4. Inspect blowdown valve. 5. Replace switch. |
| Compressor starts but stops after a short time. | <ol style="list-style-type: none"> 1. High discharge temperature. 2. High discharge temperature switch malfunction. 3. Blown fuse in starter/control box. 4. Motor starter overload heaters trip. | <ol style="list-style-type: none"> 1. See "High Discharge Air Temperature," this section. 2. Replace switch. 3. Replace fuse (investigate if fuses continue to blow). 4. Reset and investigate cause of overload. |
| Compressor does not unload (or load). | <ol style="list-style-type: none"> 1. Improperly adjusted control. 2. Air leak in control lines. 3. Restricted control line. | <ol style="list-style-type: none"> 1. Refer to Section 4, page 19, and adjust control. 2. Determine source of leak and correct. 3. Clean control lines. |
| Compressor cycles from load to unload excessively. | <ol style="list-style-type: none"> 1. Insufficient receiver capacity. 2. Restriction in service piping. 3. Restriction in control tubing. 4. Plugged aftercooler. | <ol style="list-style-type: none"> 1. Increase receiver size. 2. Inspect and clean service piping. 3. Inspect and clean control tubing. 4. Inspect and clean aftercooler. |
| Compressor is low on delivery and pressure. | <ol style="list-style-type: none"> 1. Restricted air filter. 2. Sticking inlet valve. | <ol style="list-style-type: none"> 1. Clean or replace filter. 2. Inspect and clean inlet valve. |

| SYMPTOM | POSSIBLE CAUSE | REMEDY |
|---|---|--|
| Compressor is low on delivery and pressure (continued). | 3. Intake controller is incorrectly set. | 3. Adjust controller. See Section 4, page 17. |
| | 4. Minimum pressure valve stuck closed. | 4. Replace valve. |
| High discharge air temperature. | 1. Thermostatic mixing valve stuck open. | 1. Repair or replace valve. |
| | 2. Dirty or clogged cooler face. | 2. Clean cooler. |
| | 3. Insufficient cooling air flow. | 3. Provide unrestricted supply of cooling air. |
| | 4. Clogged oil filter or cooler (interior). | 4. Replace filter or clean cooler. |
| | 5. Low compressor oil. | 5. Add oil to proper level. |
| | 6. Fan motor fuses blown. | 6. Check wiring, replace fuses. |
| Excessive Oil Consumption | 1. Oil carryover through lines. | 1. See "Oil Carryover", in this section. |
| | 2. Oil leaks at all fittings and gaskets. | 2. Tighten or replace fittings or gasket. |
| Oil Carry-Over | 1. Overfilling the reservoir. | 1. Drain excess oil from system. |

 **DANGER**

Air/oil under pressure will cause severe personal injury or death. Shut down compressor, relieve system of all pressure, disconnect, tag and lockout power supply to the starter before removing valves, caps, plugs, fittings, bolts, and filters.

- | | |
|--|---|
| 2. Clogged, broken or loose oil return lines | 2. Tighten or replace faulty lines. |
| 3. Ruptured oil separator element. | 3. Replace element. |
| 4. Loose assembly. | 4. Tighten all fittings and gaskets. |
| 5. Foam caused by use of incorrect oil. | 5. Use Gardner Denver [®] AEON™ 2000, 4000 or 9000 SP Lubricating Coolant. |
| 6. Inoperative minimum pressure valve. | 6. Replace valve. |

| SYMPTOM | POSSIBLE CAUSE | REMEDY |
|---|--|---|
| Oil Carry-Over (Continued) | <ol style="list-style-type: none"> 7. Operation at elevated discharge temperatures. 8. Scavenge line check valve failure. 9. Water condensate in oil. | <ol style="list-style-type: none"> 7. Reduce temperature. See High Discharge Air Temperature, page 34, this section. 8. Replace check valve. 9. Check oil reservoir temperature and if low, change thermal mixing valve element to higher temperature. |
| "CHANGE SEPARATOR" light (Flashing or on steadily) <u>ON STARTUP</u> | <ol style="list-style-type: none"> 1. Separator differential is greater than 8 psid (.5 Bars). 2. Bad Transducer. 3. Misadjusted minimum pressure valve. 4. Sticky minimum pressure valve. 5. Defective minimum pressure valve. [Won't set at 65 psig (4.5 Bars)] | <ol style="list-style-type: none"> 1. Change Separator. 2. Verify readings with mechanical gauges. If defective, replace with 88H242. 3. Set minimum pressure valve at 65 psig (4.5 Bars). 4. Disassemble and clean. 5. Rebuild or replace. |
| "CHANGE SEPARATOR" light (Flashing or on steadily) <u>WHILE RUNNING</u> | <ol style="list-style-type: none"> 1. Separator differential is greater than 8 psid (.5 Bars). 2. Electrical noise creating false readings. 3. Oil reservoir is overfilling. 4. Defective transducer. 5. Plugged aftercooler, due to freezing or varnishing. | <ol style="list-style-type: none"> 1. Change Separator. 2. Make sure transducer wires are kept to a minimum length and are twisted. 3. Fill to proper level (see FIGURE 5-1, Section 5, page 24). 4. Verify readings with mechanical gauges. If defective, replace with 88H242. 5. Clean or replace aftercooler. |
| "MOTOR OVERLOAD" shutdown. | <ol style="list-style-type: none"> 1. Running compressor at a pressure over nameplate pressure. 2. Incoming voltage low or high. 3. Imbalanced voltage (check phase to phase). | <ol style="list-style-type: none"> 1. Lower pressure to nameplate. 2. Consult your power company. 3. If imbalance exceeds 5%, check incoming power. |


| SYMPTOM | POSSIBLE CAUSE | REMEDY |
|--|---|---|
| "MOTOR OVERLOAD" (Continued) | <ol style="list-style-type: none"> 4. Imbalanced amps. 5. Incorrect motor overload setting. | <ol style="list-style-type: none"> 4. Rotate 3 phase power leads. If the high reading stays on the same leg, the problem is with the motor. If the high reading moves with the lead, the problem is with the incoming power. 5. Set overload to motor name-plate amps. |
| "CHANGE AIR FILTER" light on. | <ol style="list-style-type: none"> 1. Dirty air filter. | <ol style="list-style-type: none"> 1. Clean or replace. |
| "CHANGE AIR FILTER" light on, and <u>WILL NOT RESET.</u> | <ol style="list-style-type: none"> 1. Loose connections. 2. Faulty vacuum switch. 2. Control board fault. | <ol style="list-style-type: none"> 1. Clean and tighten connections. 2. Measure the AC voltage between wire number 7 and wire number #6 at board. If the reading is zero, replace the vacuum switch. 2. Measure the AC voltage between wire number 7 and wire number #6 at board. If the reading is 24 volts, replace the control board. |
| "MOTOR OVERLOAD" shutdown. (<u>RELAY NOT TRIPPED</u>) | <ol style="list-style-type: none"> 1. Loose connections. 2. Control board fault. | <ol style="list-style-type: none"> 1. Measure the AC voltage between wire number 5 and wire number #6 at board. If the reading is zero, tighten the connections. 2. Measure the AC voltage between wire number 5 and wire number #6 at board. If the reading is 24 volts, replace the control board. |
| "EO4", Emergency Stop will not clear. | <ol style="list-style-type: none"> 1. Loose connections or faulty switch. 2. Contact block not properly installed. 3. Control board fault. | <ol style="list-style-type: none"> 1. Tighten connection or repair or replace switch. 2. Ensure contact block is fully snapped into left or right (not center) slot of switch operator. 3. Measure the AC voltage between wire number 3 and wire number #6 at board. If the reading is 24 volts, replace the control board. |

| SYMPTOM | POSSIBLE CAUSE | REMEDY |
|--|---|--|
| Erroneous Pressure Readings [135 – 150 psig constantly]. (9.3 – 10.3 Bars) | <ol style="list-style-type: none"> 1. Electrical noise creating false readings. 2. Loose connector. 3. Bad transducer. | <ol style="list-style-type: none"> 1. Make sure transducer wires are kept to a minimum length and are twisted. 2. Measure the DC voltage between the green and black wires of the corresponding transducer at the control board with zero pressure on the transducer. If .460 to .540 volts, replace the plug–gable connector that connects transducers to the board. 3. Measure the DC voltage between the green and black wires of the corresponding transducer at the control board with <u>zero</u> pressure on the transducer. If below .450 or over .550 volts, replace the transducer. |
| Oil leak at the bottom of the seal housing. | <ol style="list-style-type: none"> 1. Gasket leaking. 2. Plug leak. 3. Capscrew leaking. 4. Shaft seal leaking. | <ol style="list-style-type: none"> 1. Replace the gasket. 2. Repair. 3. Repair. 4. Change seal. |
| Fuse on board blows. | <ol style="list-style-type: none"> 1. Board damaged by high voltage. | <ol style="list-style-type: none"> 1. Remove all power from the unit by opening the main disconnect, replace fuse, energize main power. If fuse blows – replace board. |
| Fuse on transformer blows. | <ol style="list-style-type: none"> 1. Shorted coils on hour meter, starter coil, or blowdown valve. | <ol style="list-style-type: none"> 1. If fuse does not blow, check for shorted coils. |

NOTICE

Gardner Denver factory remanufactured replacement compressor air end units are available from your authorized distributor, on an exchange basis, for all rotary screw compressor units.

SECTION 10 PARTS LIST

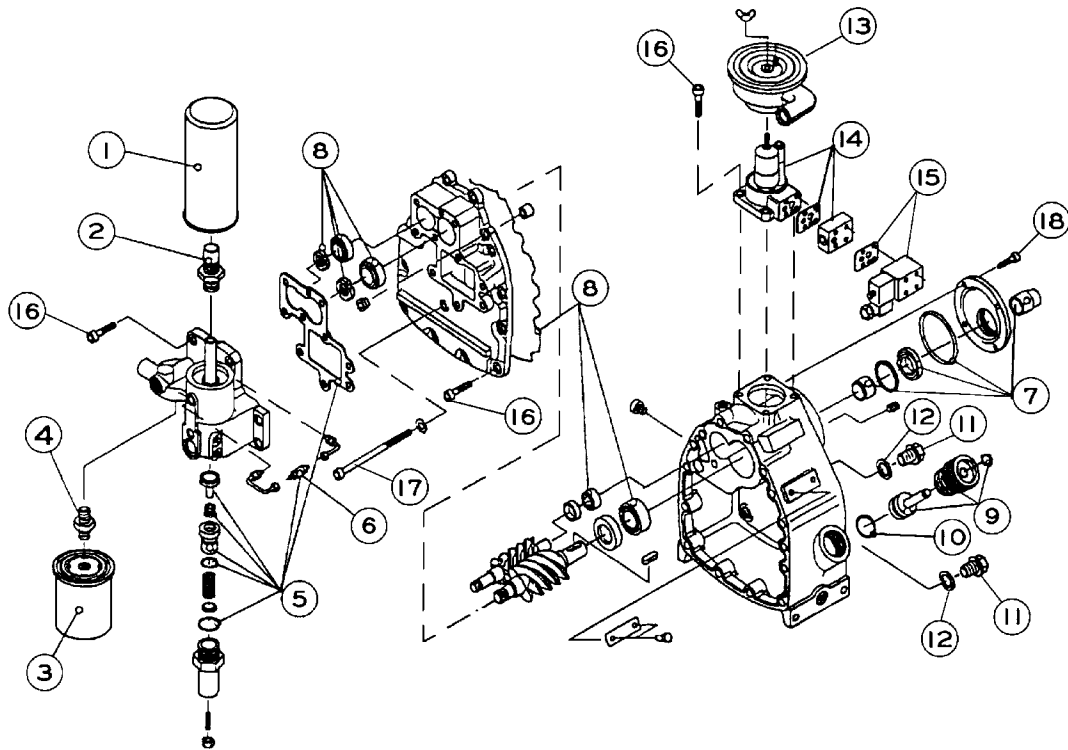


| Ref. No. | Name of Part | Qty. | Part No. |
|----------|---|------|----------------------------|
| 1 | SEPARATOR – AIR/OIL | 1 | Refer to page 42 |
| 2 | UNION (Separator To Housing) | 1 | Refer to page 42 |
| 3 | FILTER–OIL | 1 | Refer to page 42 |
| 4 | UNION (Filter To Housing) | 1 | Refer to page 42 |
| 5 | KIT–MAINTENANCE (Minimum Pressure Valve) | 1 | Refer to page 42 |
| 6 | GAUGE (Oil Scavenge) | 1 | 2116940 |
| 7 ** | KIT–SEAL | 1 | 200EBB6029 |
| 8 | KIT – BEARING (Includes 200EBB6029) | 1 | 200EBB6023 |
| 9 | CAP (Oil Filler) | 1 | 2116964 |
| 10 | O–RING | 1 | 2117004 |
| 11 | PLUG (Hex Screw) | 2 | 2116942 |
| 12 | WASHER | 2 | 2116941 |
| 13 | FILTER – AIR (Element Only) | 1 | Refer to page 40 |
| 14 | VALVE – INLET | 1 | 2116970 |
| * | INLET VALVE MAINTENANCE KIT (Includes Spring, Piston and Shaft Seal Rings) | 1 | Refer to page 39 |
| 15 | CONTROLLER – INTAKE | 1 | 2116967 – Refer to page 41 |
| 16 | SCREW–SoHd | 28 | 2117008 |
| 17 | SCREW–SoHd | 2 | 2116990 |
| 18 | BOLT | 6 | 2117013 |
| * | SOLENOID VALVE COIL (12V) | 1 | 2116935 |
| * | AIR END | 1 | 200EBB1095 |
| * | REMAN AIR END | 1 | 200EBB1095X |

* Not shown.

** Tools required to replace the Oil Seal are: Assembly Bushing – 2117745, Seal Puller – 2117746, Shaft Seal Assembly Tool – 2117747 and Wear Sleeve Installation Tool – 2117748.


INLET VALVE

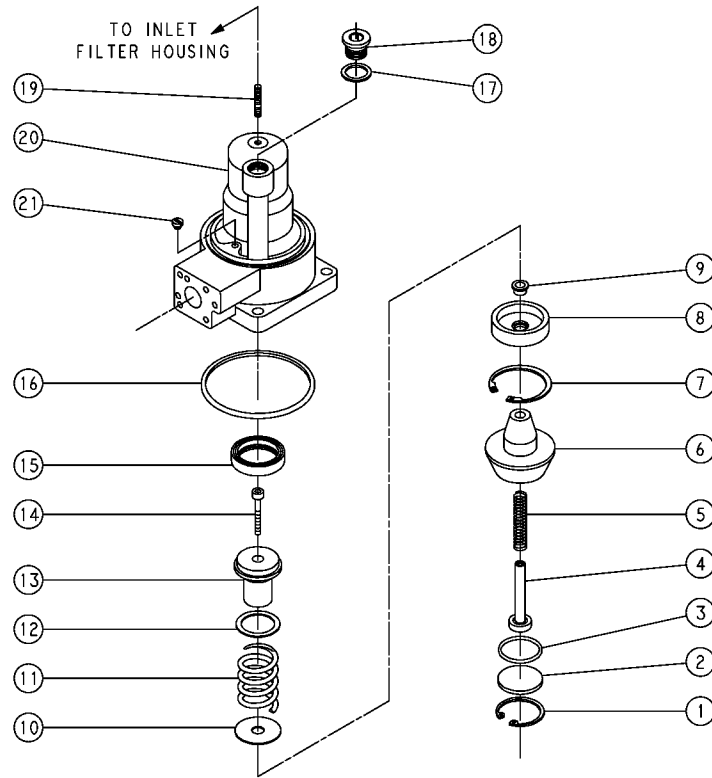

208EBB810
(Ref. Drawing)

| Ref. No. | Name of Part | Qty. | Part No. |
|----------|--|------|----------|
| 1 | SNAP RING | 1 | 2117021 |
| 2 | DISK (CHECK VALVE) | 1 | 2116982 |
| 3 | O-RING | 1 | * |
| 4 | SCREW (SPL) | 1 | 2116992 |
| 5 | SPRING | 1 | * |
| 6 | VALVE-INLET | 1 | 2116993 |
| 7 | SNAP RING | 1 | 2116980 |
| 8 | RETAINER | 1 | 2116978 |
| 9 | BUSHING | 1 | * |
| 10 | RING-WEAR | 1 | 2117033 |
| 11 | SPRING | 1 | 2117029 |
| 12 | RING-WEAR | 1 | 2117032 |
| 13 | PISTON | 1 | 2116991 |
| 14 | SCREW-SO HD | 1 | 2116995 |
| 15 | RING PACKING | 1 | * |
| 16 | O-RING | 1 | * |
| 17 | RING GASKET | 1 | 2117009 |
| 18 | PLUG | 1 | 2116979 |
| 19 | STUD | 1 | 2116981 |
| 20 | HOUSING-INLET VALVE | 1 | 2117003 |
| 21 | PLUG-ORIFICE | 1 | 2116989 |
| * | KIT-VALVE (INTAKE MAINT.) - Includes Ref. Nos. 3, 5, 9, 15, 16 and (1) 2116984 Gasket, not shown) | 1 | 2116966 |


AIR FILTER

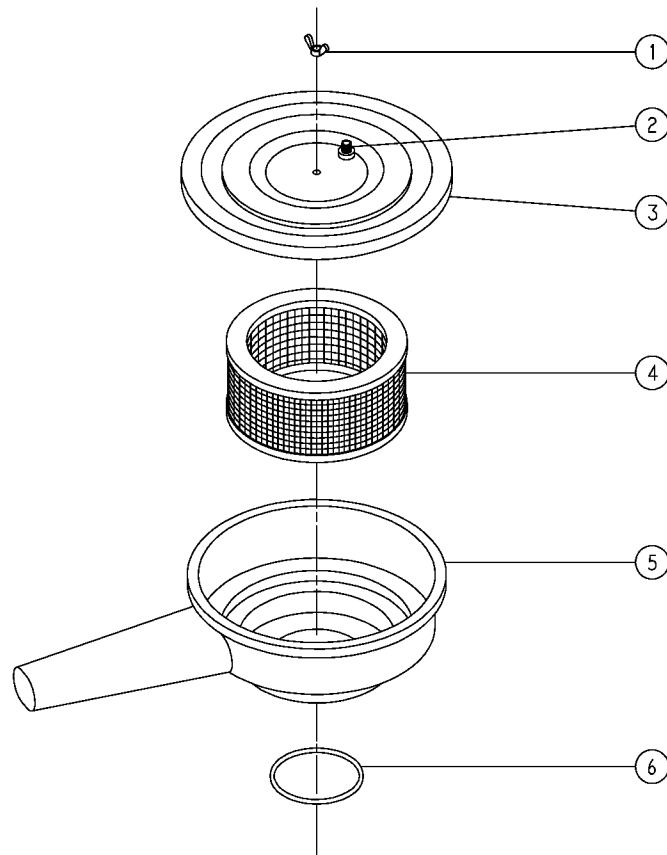

209EBB810
(Ref. Drawing)

| Ref. No. | Name of Part | Qty. | Part No. |
|----------|--------------------------|------|-----------|
| 1 | WING NUT | 1 | 2117034 |
| 2 | CLOSE NIPPLE | 1 | 2116987 |
| 3 | COVER | 1 | 2117028 |
| 4 | AIR FILTER ELEMENT | 1 | 200EBB059 |
| 5 | HOUSING | 1 | 2117027 |
| 6 | O-RING | 1 | 2116955 |

INTAKE VALVE CONTROLLER

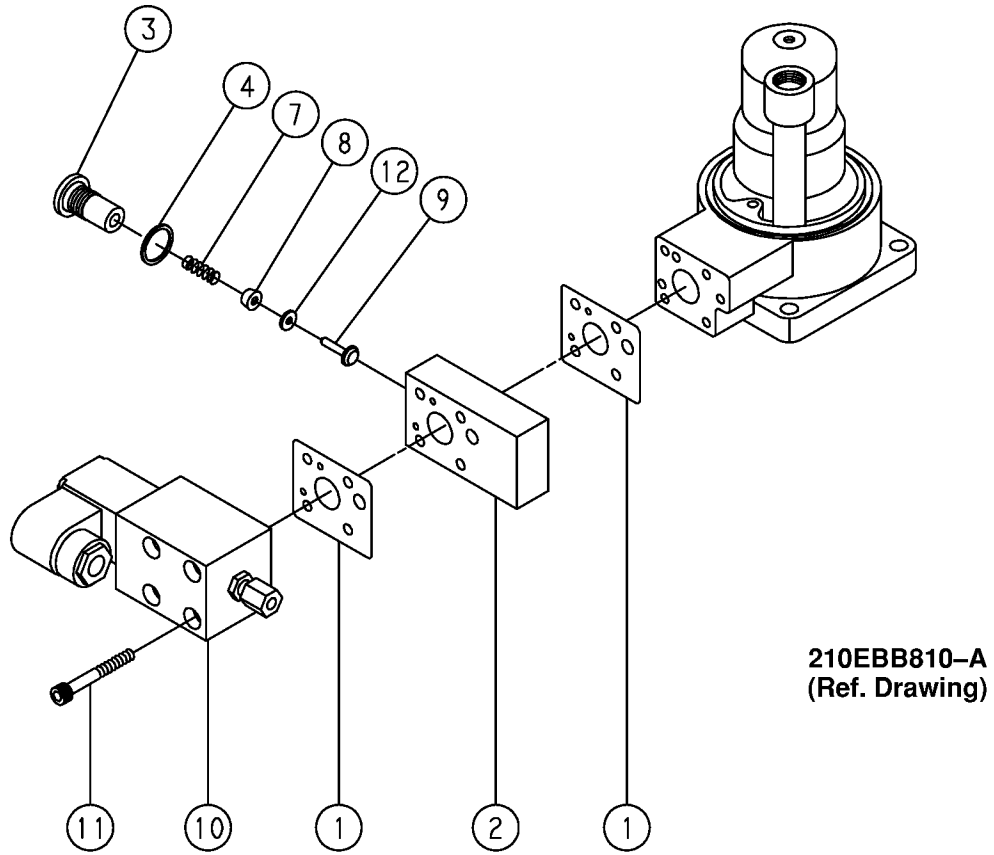


| Ref. No. | Name of Part | Qty. | Part No. |
|----------|---------------------------|------|----------|
| 1 | GASKET | 2 | * |
| 2 | HOUSING | 1 | * |
| 3 | GUIDE (PLUG) | 1 | * |
| 4 | GASKET (RING) | 1 | * |
| 7 | SPRING | 1 | * |
| 8 | BUSHING | 1 | * |
| 9 | PISTON | 1 | * |
| 10 | CONTROLLER (INTAKE) | 1 | 2116967 |
| 11 | SCREW—So Hd CAP | 4 | 2116976 |
| 12 | SEAL | 1 | * |

* KIT—VALVE (INTAKE) Includes Two (2) of Ref. No. 1, and
 One (1) Each of Ref. Nos. 2, 3, 4, 7, 8, 9 and 12

200EBB6017


MINIMUM PRESSURE/CHECK VALVE

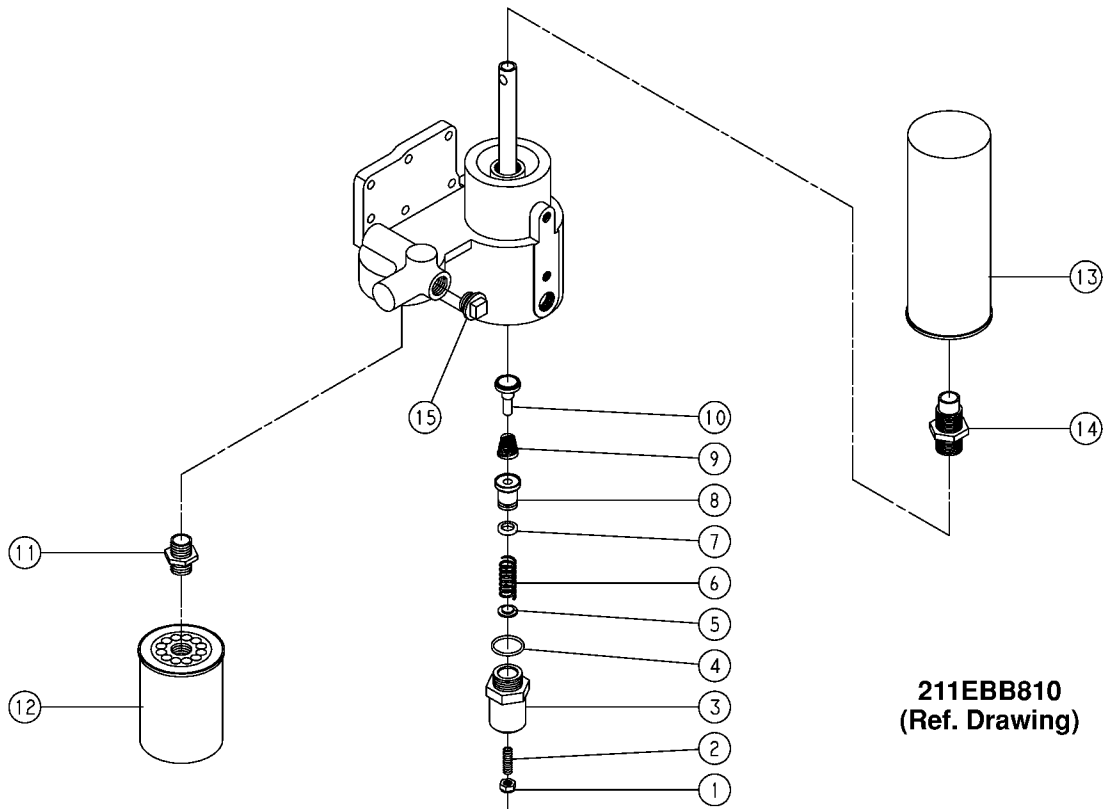

| Ref. No. | Name of Part | Qty. | Part No. |
|--|---------------------------|------|-----------|
| 1 | NUT (Lock) | 1 | 2117006 |
| 2 | SCREW-SET | 1 | 2117019 |
| 3 | HOUSING-VALVE | 1 | 2116957 |
| 4 | O-RING | 1 | * |
| 5 | GUIDE (SPRING) | 1 | 2116946 |
| 6 | SPRING | 1 | 2116947 |
| 7 | O-RING | 1 | * |
| 8 | PISTON-CONTROL | 1 | * |
| 9 | SPRING-VALVE | 1 | * |
| 10 | PLATE-VALVE | 1 | * |
| 11 | UNION (STRAIGHT) | 1 | 2116945 |
| 12 | FILTER-OIL | 1 | 200EBB369 |
| 13 | SEPARATOR - AIR/OIL | 1 | 200EBB035 |
| 14 | UNION (STRAIGHT) | 1 | 2116952 |
| 15 | HOUSING (SEPARATOR) | 1 | 2116965 |
| * KIT-MAINT. (Min. Press. Valve) Includes Ref. Nos. 4, 7, 8, 9, 10, ... (1) 2116988 Gasket & (1) 2116940 Oil Scavenge Gauge (Not shown) | | 1 | 2116968 |

PIPING AND MOUNTING GROUP


213EBB810-B
(Ref. Drawing)

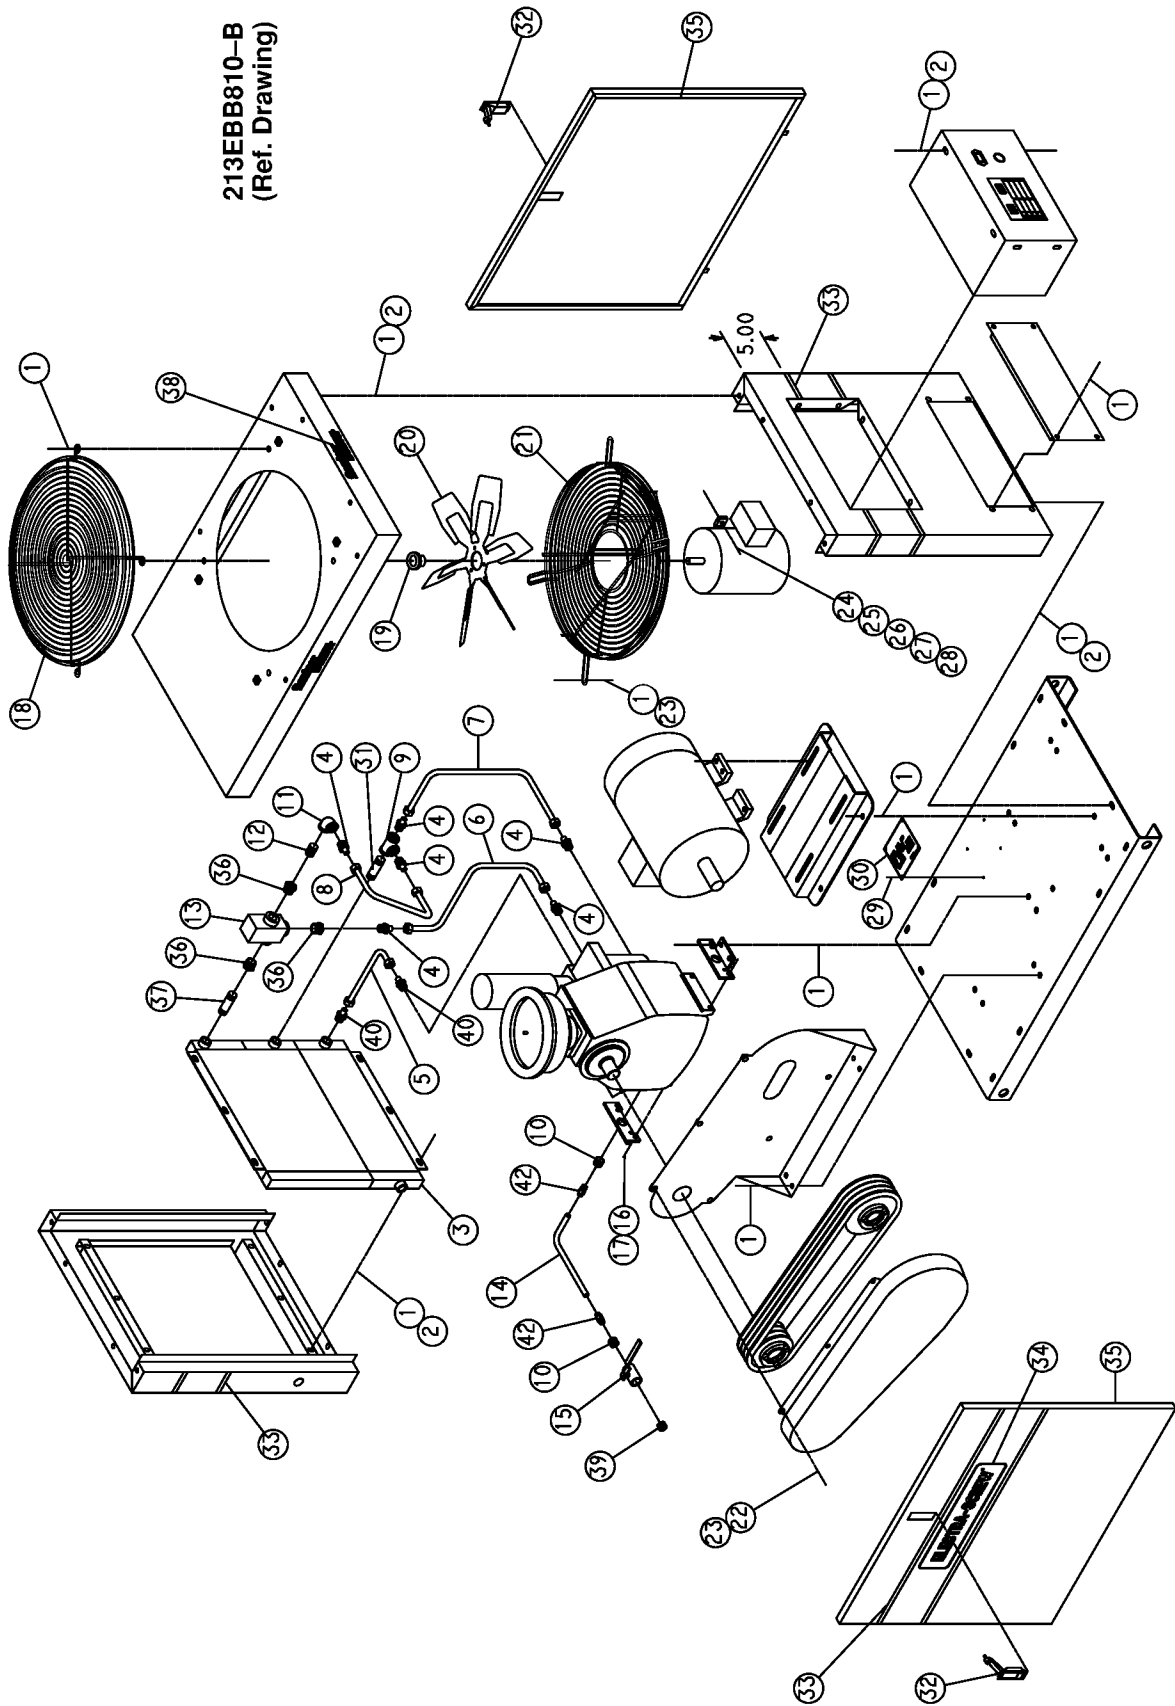

PIPING AND MOUNTING GROUP

| Ref. No. | Name of Part | Qty. | Part No. | Ref. No. | Name of Part | Qty. | Part No. |
|----------|--------------------------|------|-----------|----------|------------------------|------|-----------|
| 1 | SCREW-FLANGED | 54 | 75LM51 | 22 | SCREW-FLANGED | 6 | 75K48 |
| 2 | NUT-FLANGED | 30 | 50AW5 | 23 | WASHER-PLAIN | 10 | 95A5 |
| 3 | COOLER-OIL/AIR RAD | 1 | 200EBB201 | 24 | SCREW-HEX CAP | 4 | 75A35 |
| 4 | CONNECTOR-TUBE | 6 | 86H139 | 25 | RETAINER | 4 | 2014731 |
| 5 | TUBE-WITH FITTING | 1 | 301EBB863 | 26 | WASHER-PLAIN | 4 | 95A2 |
| 6 | TUBE-WITH FITTING | 1 | 202EBB863 | 27 | WASHER-LOCK | 4 | 95B2 |
| 7 | TUBE-WITH FITTING | 1 | 201EBB863 | 28 | NUT-HEX | 4 | 50B2 |
| 8 | TUBE-WITH FITTING | 1 | 203EBB863 | 29 | RIVET | 4 | 70E13 |
| 9 | TEE-PIPE | 1 | 64G6G | 30 | PLATE-NAME | 1 | 208EAQ496 |
| 10 | BUSHING-PIPE | 2 | 64R12 | 31 | NIPPLE-PIPE | 1 | 63F22G |
| 11 | ELBOW-PIPE | 1 | 64C4G | | | | |
| 12 | NIPPLE-PIPE | 1 | 63F21G | 32 | LATCH | 2 | 31D58 |
| 13 | VALVE-THERMAL | 1 | 90AR934 | 33 | DECAL | 3 | 203ESO077 |
| 14 | TUBE | 1 | 85K5 | 34 | DECAL | 2 | 214ECM077 |
| 15 | VALVE-BALL | 1 | 90AR360 | 35 | SEAL | 14 | 32E12 |
| 16 | SCREW | 4 | 655MD030 | 36 | BUSHING PIPE | 3 | 64E5G |
| 17 | LOCKWASHER | 4 | 95B4 | 37 | NIPPLE-PIPE | 1 | 63F22G |
| 18 | GUARD-FAN | 1 | 200ECM393 | 38 | DECAL | 4 | 200EBB077 |
| 19 | BUSHING-SHEAVE | 1 | 22G27 | 39 | PLUG-PIPE | 1 | 64B2 |
| 20 | FAN | 1 | 200EBB701 | 40 | CONNECTOR-TUBE | 2 | 88H144 |
| 21 | GUARD-FAN | 1 | 200EBB393 | 42 | CONNECTOR (TUBE) | 2 | 86E9 |


MOUNTING GROUP

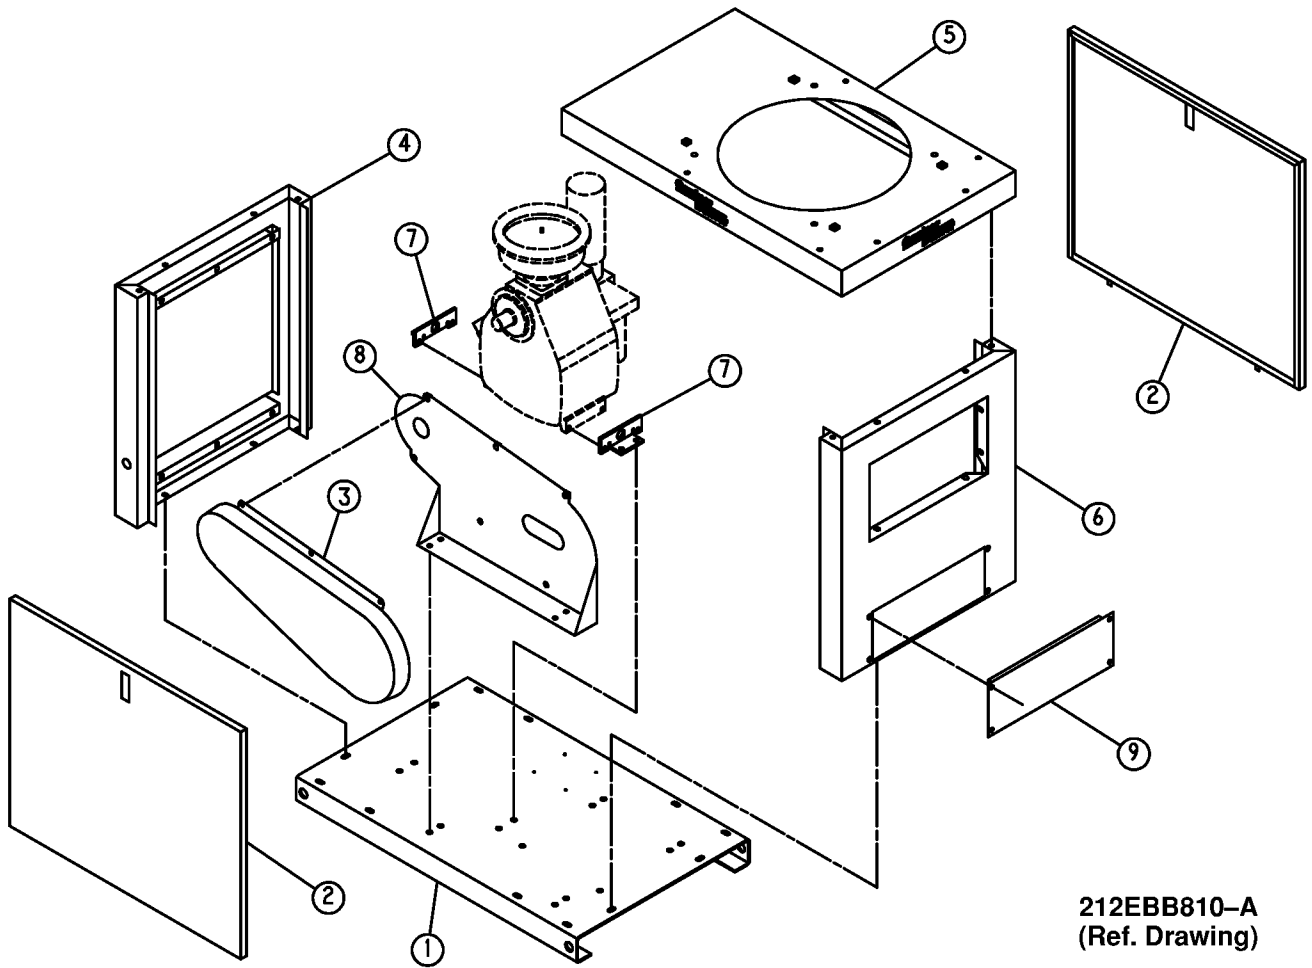

212EBB810-A
(Ref. Drawing)

| Ref. No. | Name of Part | Qty. | Part No. |
|----------|------------------------|------|-----------|
| 1 | BASE | 1 | 200EBB285 |
| 2 | PANEL | 2 | 201EBB216 |
| 3 | GUARD-DRIVE | 1 | 201EBB120 |
| 4 | FRAME | 1 | 202EBB314 |
| 5 | HOOD | 1 | 200EBB053 |
| 6 | FRAME | 1 | 203EBB314 |
| 7 | BRACKET (FORMED) | 2 | 200EBB142 |
| 8 | BRACE | 1 | 200EBB326 |
| 9 | PLATE-INSPECTION | 1 | 300EBB052 |
| 10 | PANEL | 2 | 300EBB216 |
| 11 | FRAME | 1 | 301EBB314 |
| 12 | BAFFLE | 1 | 300EBB840 |
| 13 | FRAME | 1 | 300EBB314 |
| 14 | HOOD | 1 | 300EBB053 |


QUIET ENCLOSURE

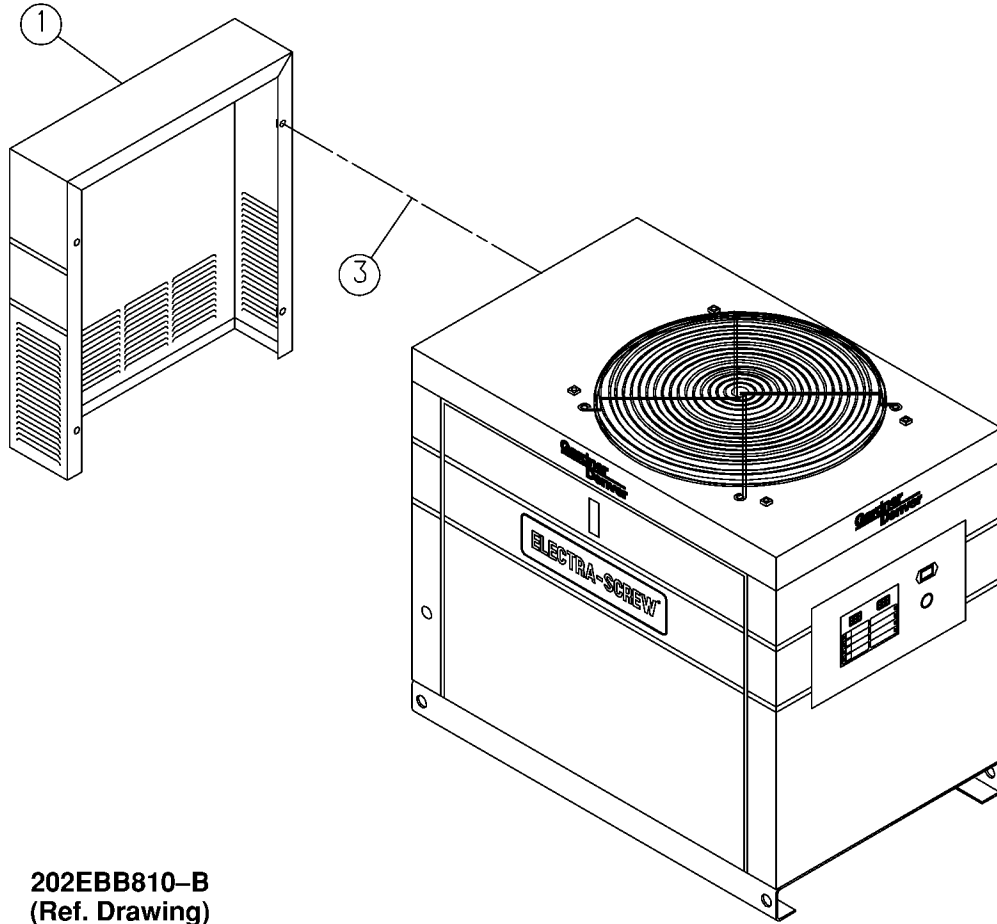

202EBB810-B
(Ref. Drawing)


| Ref. No. | Name of Part | Qty. | Part No. 203EBB4017 |
|----------|---------------------|------|------------------------|
| 1 | BAFFLE | 1 | 202EBB840 |
| 3 | SCREW-FLANGED | 4 | 75LM51 |

AIR RECEIVER WITHOUT CONDENSATE DRAIN

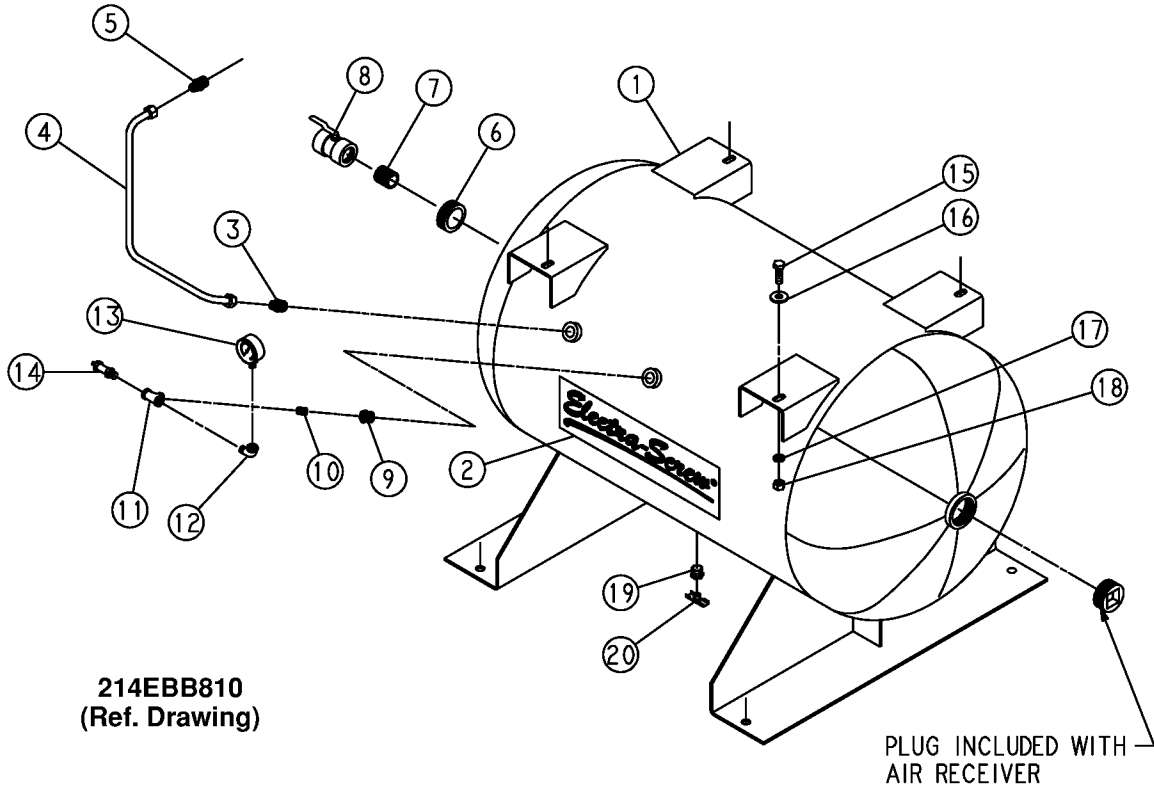


| Ref. No. | Name of Part | Qty. | 80 Gallon | 120 Gallon |
|----------|-----------------------------|------|-----------|------------|
| 1 | RECEIVER-AIR | 1 | 200EBB645 | 201EBB645 |
| 2 | DECAL | 2 | 212EBE077 | 212EBE077 |
| 3 | CONNECTOR-TUBE | 1 | 86H139 | 86H139 |
| 4 | TUBE-W/FIT | 1 | 204EBB863 | 204EBB863 |
| 5 | CONNECTOR-TUBE | 1 | 86H139 | 86H139 |
| 6 | BUSHING-PIPE | 1 | 64E11 | 64E11 |
| 7 | NIPPLE | 1 | 63H1G | 63H1G |
| 8 | VALVE-BALL | 1 | 90AR362 | 90AR362 |
| 9 | BUSHING-PIPE | 1 | 64E2G | 64E2G |
| 10 | NIPPLE | 1 | 63D1G | 63D1G |
| 11 | TEE-PIPE | 1 | 64G3G | 64G3G |
| 12 | ELBOW | 1 | 64D2G | 64D2G |
| 13 | GAUGE-AIR PRESSURE | 1 | 27A114 | 27A114 |
| 14 | VALVE-PRESSURE RELIEF | 1 | 90AR657 | 90AR657 |
| 15 | SCREW | 4 | 655ED060 | 655ED060 |
| 16 | WASHER | 8 | 95A3 | 95A3 |
| 17 | LOCKWASHER | 4 | 95B3 | 95B3 |
| 18 | NUT | 4 | 50B3 | 50B3 |
| 19 | BUSHING-PIPE | 1 | 64E2G | 64E2G |
| 20 | COCK | 1 | 90C12 | 90C12 |

AIR RECEIVER WITH CONDENSATE DRAIN

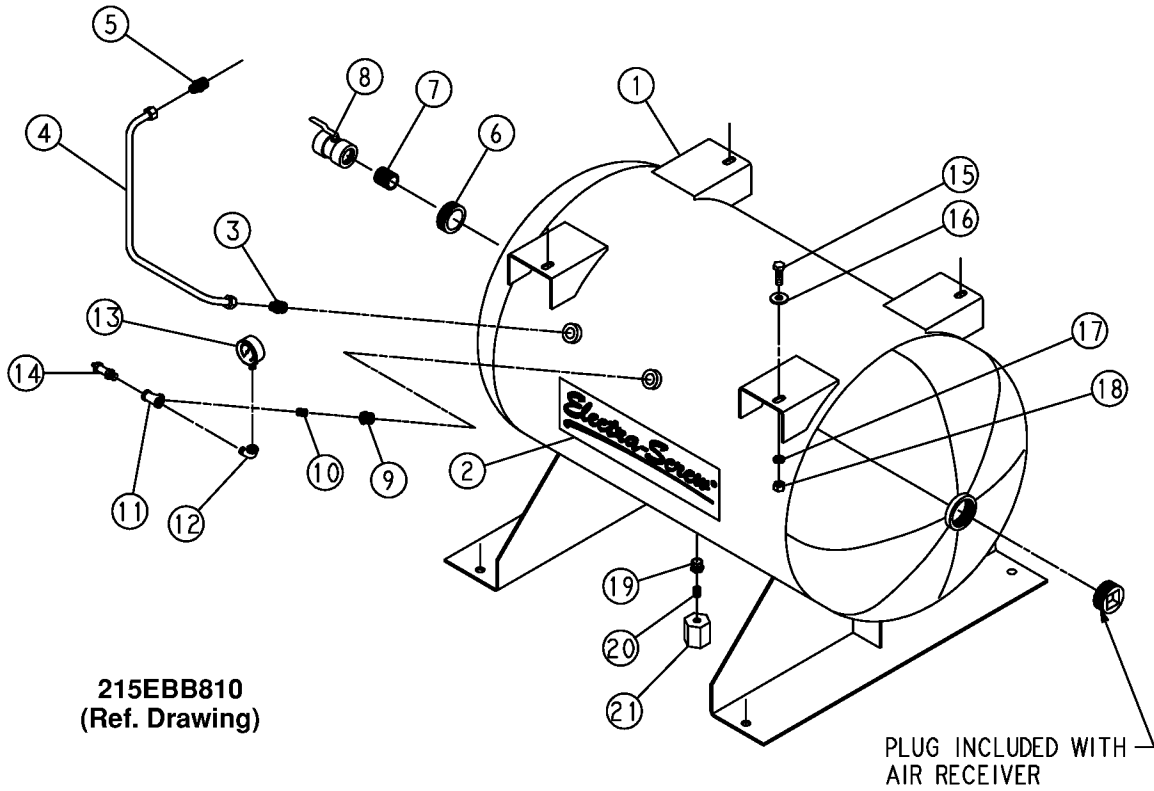

| Ref. No. | Name of Part | Qty. | 80 Gallon | 120 Gallon |
|----------|-----------------------------|------|-----------|------------|
| 1 | RECEIVER-AIR | 1 | 200EBB645 | 201EBB645 |
| 2 | DECAL | 2 | 212EBE077 | 212EBE077 |
| 3 | CONNECTOR-TUBE | 1 | 86H139 | 86H139 |
| 4 | TUBE-WITH FITTING | 1 | 204EBB863 | 204EBB863 |
| 5 | CONNECTOR-TUBE | 1 | 86H139 | 86H139 |
| 6 | BUSHING-PIPE | 1 | 64E11 | 64E11 |
| 7 | NIPPLE | 1 | 63H1G | 63H1G |
| 8 | VALVE-BALL | 1 | 90AR362 | 90AR362 |
| 9 | BUSHING-PIPE | 1 | 64E2G | 64E2G |
| 10 | NIPPLE | 1 | 63D1G | 63D1G |
| 11 | TEE-PIPE | 1 | 64G3G | 64G3G |
| 12 | ELBOW | 1 | 64D2G | 64D2G |
| 13 | GAUGE-AIR PRESSURE | 1 | 27A114 | 27A114 |
| 14 | VALVE-PRESSURE RELIEF | 1 | 90AR657 | 90AR657 |
| 15 | SCREW | 4 | 655ED060 | 655ED060 |
| 16 | WASHER | 8 | 95A3 | 95A3 |
| 17 | LOCKWASHER | 4 | 95B3 | 95B3 |
| 18 | NUT | 4 | 50B3 | 50B3 |
| 19 | BUSHING-PIPE | 1 | 64E2G | 64E2G |
| 20 | NIPPLE | 1 | 63F21G | 63F21G |
| 21 | VALVE-DUMP | 1 | 90AR319 | 90AR319 |

DRIVE GROUP

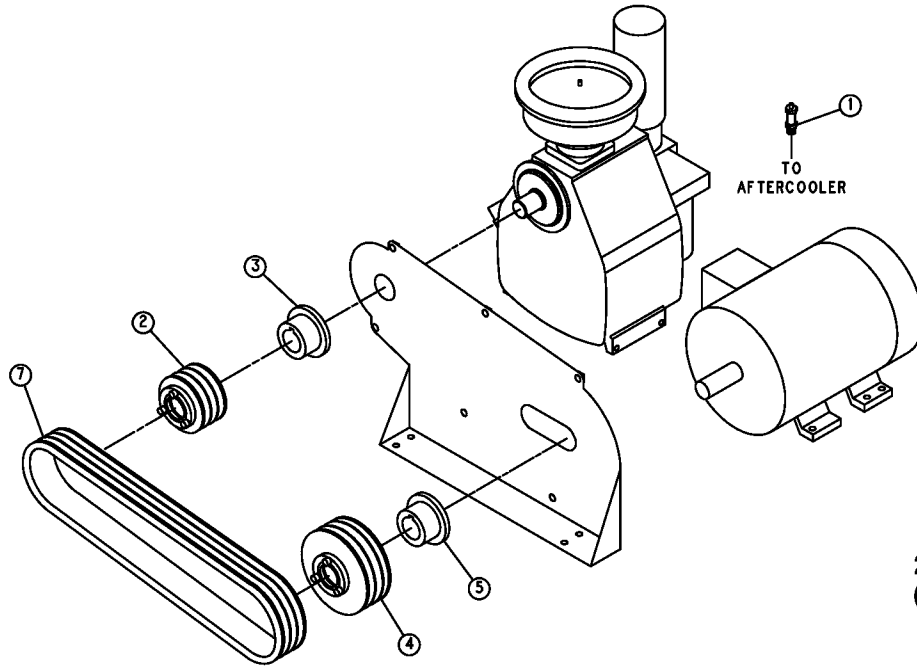


204EBB810-B
(Ref. Drawing)

| REF. NO. | NAME OF PART | QTY. | 100 PSI | 125 PSI | 150 PSI | 175 PSI |
|----------|---------------------------------|------|------------|------------|------------|------------|
| | 7.5 HP DRIVE GROUP | | 209EBB4004 | 200EBB4004 | 201EBB4004 | 202EBB4004 |
| 1 | VALVE-PRESSURE RELIEF ... | 1 | 90AR661 | 90AR662 | 90AR663 | 90AR657 |
| 2 | SHEAVE | 1 | 73M23V33 | 73M23V36 | 73M23V41 | 73M23V41 |
| 3 | BUSHING-HUB | 1 | 22J4 | 22J4 | 22J4 | 22J4 |
| 4 | SHEAVE | 1 | 75M23V69 | 73M23V69 | 73M23V69 | 73M23V60 |
| 5 | BUSHING-HUB | 1 | 22F22SDS | 22F22SDS | 22F22SDS | 22F22SH |
| 7 | BELT | 1 | 13AG5002 | 13AG5002 | 13AG5302 | 13AG5002 |

| REF. NO. | NAME OF PART | QTY. | 100 PSI | 125 PSI | 150 PSI | 175 PSI |
|----------|--------------------------------|------|------------|------------|------------|------------|
| | 10 HP DRIVE GROUP | | 210EBB4004 | 203EBB4004 | 204EBB4004 | 205EBB4004 |
| 1 | VALVE-PRESSURE RELIEF ... | 1 | 90AR661 | 90AR662 | 90AR663 | 90AR657 |
| 2 | SHEAVE | 1 | 73M23V47 | 73M23V50 | 73M23V41 | 73M23V41 |
| 3 | BUSHING-HUB | 1 | 22J4 | 22J6 | 22J4 | 22J4 |
| 4 | SHEAVE | 1 | 73M23V69 | 73M23V65 | 73M23V50 | 73M23V45 |
| 5 | BUSHING-HUB | 1 | 22F22SDS | 22F22SDS | 22F22SH | 22F22SH |
| 7 | BELT | 1 | 13AG5302 | 13AG5002 | 13AG4752 | 13AG4752 |

| REF. NO. | NAME OF PART | QTY. | 100 PSI | 125 PSI | 150 PSI | 175 PSI |
|----------|--------------------------------|------|------------|------------|------------|------------|
| | 15 HP DRIVE GROUP | | 211EBB4004 | 206EBB4004 | 207EBB4004 | 208EBB4004 |
| 1 | VALVE-PRESSURE RELIEF ... | 1 | 90AR661 | 90AR662 | 90AR663 | 90AR657 |
| 2 | SHEAVE | 1 | 73M33V33 | 73M33V36 | 73M33V41 | 73M33V41 |
| 3 | BUSHING-HUB | 1 | 22J4 | 22J4 | 22J4 | 22J4 |
| 4 | SHEAVE | 1 | 73M33V69 | 73M33V69 | 73M33V69 | 73M33V60 |
| 5 | BUSHING-HUB | 1 | 22F22SDS | 22F22SDS | 22F22SDS | 22F22SDS |
| 7 | BELT | 1 | 13AG5003 | 13AG5003 | 13AG5303 | 13AG5003 |


CONTROL TUBING

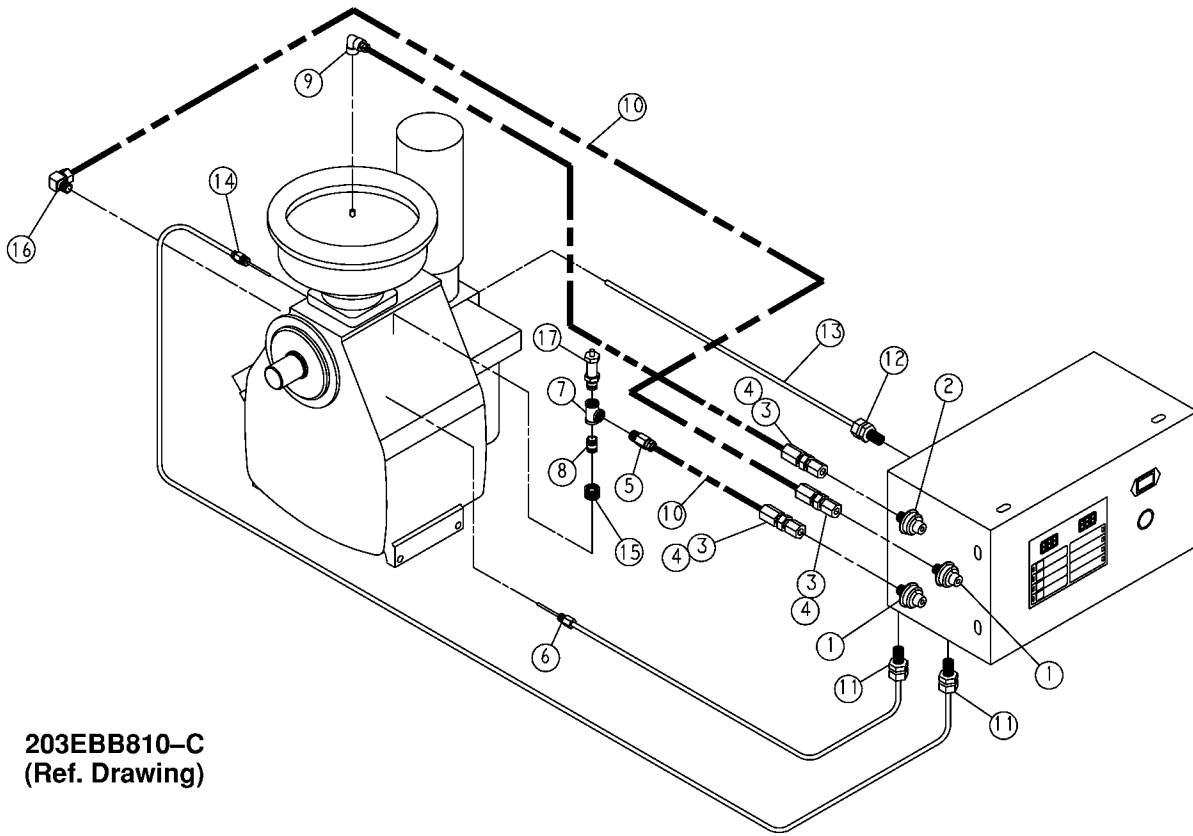

203EBB810-C
(Ref. Drawing)

| Ref. No. | Name of Part | Qty. | Part No. |
|----------|----------------------------------|------|----------|
| 1 | TRANSDUCER-PRESSURE | 2 | 88H242 |
| 2 | SWITCH-VACUUM | 1 | 88H195 |
| 3 | CONNECTOR-TUBE | 3 | 86N287 |
| 4 | O-RING | 3 | 24A383 |
| 5 | CONNECTOR-TUBE | 1 | 86E4 |
| 6 | THERMISTOR PROBE (1/8 NPT) | 1 | 21D293 |
| 7 | TEE-PIPE | 1 | 64G3G |
| 8 | NIPPLE | 1 | 63D1G |
| 9 | ELBOW-TUBE | 1 | 86E78 |
| 10 | TUBE | 10 | 85K3 |
| 11 | FITTING-CABLE | 2 | 24CA2865 |
| 12 | FITTING-ELECTRICAL | 1 | 24CA615 |
| 13 | WIRE | 5 | 97J68 |
| 14 | THERMISTOR PROBE (1/8 NPT) | 1 | 21D293 |
| 15 | BUSHING-PIPE | 1 | 64R12 |
| 16 | ELBOW-TUBE | 1 | 86E60 |
| 17 | VALVE-PRESSURE RELIEF | 1 | 90AR735 |

ELECTRICAL GROUP

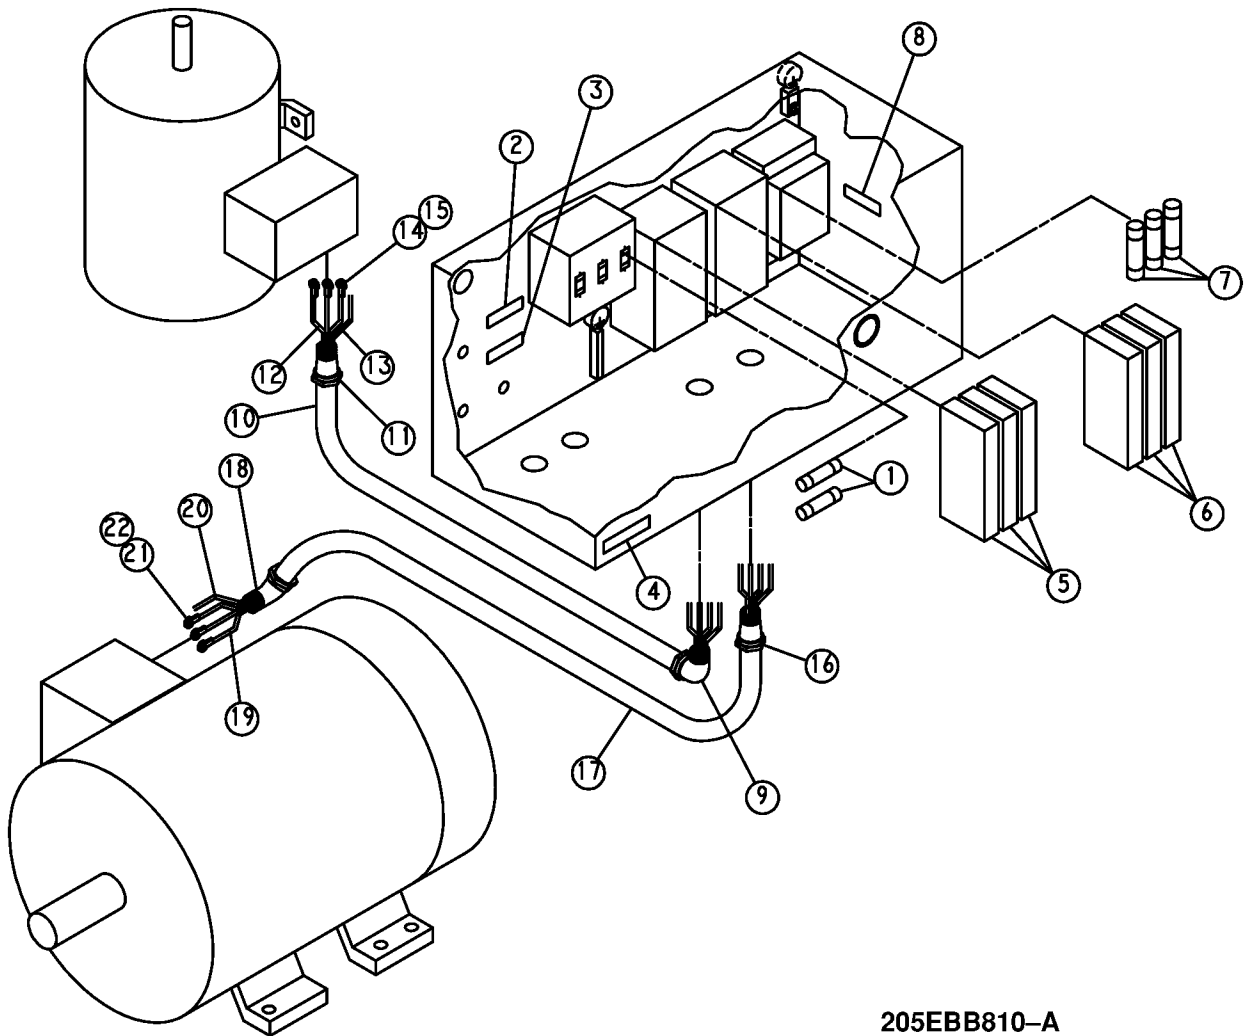

205EBB810-A
(Ref. Drawing)

For Parts List, Refer to Pages 52 thru 54.

ELECTRICAL GROUP – 7.5 HP
(Refer to Illustration, Page 51, This Section)

| Ref. No. | Name of Part | Qty. | 200 Volt Part No. | 230 Volt Part No. | 460 Volt Part No. | 575 Volt Part No. |
|-------------|-----------------------------|------|----------------------|----------------------|----------------------|----------------------|
| | ELECTRICAL GROUP | | 200EBB4007 | 201EBB4007 | 202EBB4007 | 203EBB4007 |
| 1 | FUSE, Primary | 2 | 24CA3722 | 24CA2779 | 24CA2897 | 24CA3718 |
| 2 | DECAL, Primary Fuse | 1 | 294AUX077 | 258AUX077 | 272AUX077 | 290AUX077 |
| 3 | DECAL, Secondary Fuse | 1 | 298AUX077 | 297AUX077 | 297AUX077 | 297AUX077 |
| 4 | MARKER–VOLTAGE | 1 | 69F50 | 69F51 | 69F52 | 69F60 |
| 5 | HEATER–OVERLOAD, Fan | 3 | See Page 57 | See Page 57 | See Page 57 | See Page 57 |
| 6 | HEATER–OVERLOAD, Main | 3 | See Page 57 | See Page 57 | See Page 57 | See Page 57 |
| 7 | FUSE, Fan Motor | 3 | 24CA4091 | 24CA4090 | 24CA4088 | 24CA4088 |
| 8 | DECAL, Fan Motor Fuse | 1 | 309AUX077 | 308AUX077 | 306AUX077 | 306AUX077 |
| 9 | FITTING–CONDUIT, Fan | 1 | 24A380 | 24A380 | 24A380 | 24A380 |
| 10 | CONDUIT, Fan | 2 | 24A402 | 24A402 | 24A402 | 24A402 |
| 11 | FITTING–CONDUIT, Fan | 1 | 24A378 | 24A378 | 24A378 | 24A378 |
| 12 | WIRE–LINE, Fan | 7 | 97H2A | 97H2A | 97H2A | 97H2A |
| 13 | WIRE–GROUND, Fan | 3 | 97H2G | 97H2G | 97H2G | 97H2G |
| 14 | LUG–TERMINAL | 6 | 24A488 | 24A488 | 24A488 | 24A488 |
| 15 | MISC. ELECTRICAL PARTS | 1 | --- | AUX68367 | AUX68367 | AUX68367 |
| 16 | FITTING–CONDUIT, Main | 1 | 24A384 | 24A384 | 24A378 | 24A378 |
| 17 | CONDUIT, Main | 3 | 24A443 | 24A443 | 24A402 | 24A402 |
| 18 | FITTING–CONDUIT, Main | 1 | 24A385 | 24A385 | 24A379 | 24A379 |
| 19 | WIRE–LINE, Main | 10 | 2009801 | 2009801 | 2009319 | 97H2A |
| 20 | WIRE–GROUND, Main | 4 | 2009989 | 2009989 | 2009988 | 97H2G |
| 21 | LUG–TERMINAL | 6 | 2009530 | 2009530 | 24CA1864 | 24CA1864 |
| 22 | MISC. ELECTRICAL PARTS | 1 | AUX68369 | AUX68369 | AUX68369 | AUX68369 |
| * | CONTROL BOX | 1 | 203EBB466 | 202EBB466 | 202EBB466 | 202EBB466 |

* Not shown.

ELECTRICAL GROUP – 10 HP
(Refer to Illustration, Page 51, This Section)

| Ref. No. | Name of Part | Qty. | 200 Volt Part No. | 230 Volt Part No. | 460 Volt Part No. | 575 Volt Part No. |
|-------------|-----------------------------|------|----------------------|----------------------|----------------------|----------------------|
| | ELECTRICAL GROUP | | 204EBB4007 | 205EBB4007 | 206EBB4007 | 207EBB4007 |
| 1 | FUSE, Primary | 2 | 24CA3722 | 24CA2781 | 24CA2897 | 24CA3718 |
| 2 | DECAL, Primary Fuse | 1 | 294AUX077 | 260AUX077 | 272AUX077 | 290AUX077 |
| 3 | DECAL, Secondary Fuse | 1 | 298AUX077 | 298AUX077 | 297AUX077 | 297AUX077 |
| 4 | MARKER–VOLTAGE | 1 | 69F50 | 69F51 | 69F52 | 69F60 |
| 5 | HEATER–OVERLOAD, Fan | 3 | See Page 57 | See Page 57 | See Page 57 | See Page 57 |
| 6 | HEATER–OVERLOAD, Main | 3 | See Page 57 | See Page 57 | See Page 57 | See Page 57 |
| 7 | FUSE, Fan Motor | 3 | 24CA4091 | 24CA4090 | 24CA4088 | 24CA4088 |
| 8 | DECAL, Fan Motor Fuse | 1 | 309AUX077 | 308AUX077 | 306AUX077 | 306AUX077 |
| 9 | FITTING–CONDUIT, Fan | 1 | 24A380 | 24A380 | 24A380 | 24A380 |
| 10 | CONDUIT, Fan | 2 | 24A402 | 24A402 | 24A402 | 24A402 |
| 11 | FITTING–CONDUIT, Fan | 1 | 24A378 | 24A378 | 24A378 | 24A378 |
| 12 | WIRE–LINE, Fan | 7 | 97H2A | 97H2A | 97H2A | 97H2A |
| 13 | WIRE–GROUND, Fan | 3 | 97H2G | 97H2G | 97H2G | 97H2G |
| 14 | LUG–TERMINAL | 6 | 24A488 | 24A488 | 24A488 | 24A488 |
| 15 | MISC. ELECTRICAL PARTS | 1 | AUX68367 | AUX68367 | AUX68367 | AUX68367 |
| 16 | FITTING–CONDUIT, Main | 1 | 24A384 | 24A384 | 24A380 | 24A378 |
| 17 | CONDUIT, Main | 3 | 24A443 | 24A443 | 24CA402 | 24CA402 |
| 18 | FITTING–CONDUIT, Main | 1 | 24A385 | 24A385 | 24A379 | 24A379 |
| 19 | WIRE–LINE, Main | 10 | 2009801 | 2009801 | 2009800 | 2009319 |
| 20 | WIRE– GROUND, Main | 4 | 97J39 | 97J39 | 2009989 | 2009988 |
| 21 | LUG–TERMINAL | 6 | 2009530 | 2009530 | 24CA1864 | 24CA1864 |
| 22 | MISC. ELECTRICAL PARTS | 1 | AUX68370 | AUX68370 | AUX68369 | AUX68369 |
| * | CONTROL BOX | 1 | 203EBB466 | 203EBB466 | 202EBB466 | 202EBB466 |

* Not shown.

ELECTRICAL GROUP – 15 HP
(Refer to Illustration, Page 51, This Section)

| Ref. No. | Name of Part | Qty. | 200 Volt Part No. | 230 Volt Part No. | 460 Volt Part No. | 575 Volt Part No. |
|-------------|-----------------------------|------|----------------------|----------------------|----------------------|----------------------|
| | ELECTRICAL GROUP | | 208EBB4007 | 209EBB4007 | 210EBB4007 | 211EBB4007 |
| 1 | FUSE, Primary | 2 | 24CA3722 | 24CA2781 | 24CA2897 | 24CA3718 |
| 2 | DECAL, Primary Fuse | 1 | 294AUX077 | 260AUX077 | 272AUX077 | 290AUX077 |
| 3 | DECAL, Secondary Fuse | 1 | 298AUX077 | 298AUX077 | 297AUX077 | 297AUX077 |
| 4 | MARKER–VOLTAGE | 1 | 69F50 | 69F51 | 69F52 | 69F60 |
| 5 | HEATER–OVERLOAD, Fan | 3 | See Page 57 | See Page 57 | See Page 57 | See Page 57 |
| 6 | HEATER–OVERLOAD, Main | 3 | See Page 57 | See Page 57 | See Page 57 | See Page 57 |
| 7 | FUSE, Fan Motor | 3 | 24CA4091 | 24CA4090 | 24CA4088 | 24CA4088 |
| 8 | DECAL, Fan Motor Fuse | 1 | 309AUX077 | 308AUX077 | 306AUX077 | 306AUX077 |
| 9 | FITTING–CONDUIT, Fan | 1 | 24A380 | 24A380 | 24A380 | 24A380 |
| 10 | CONDUIT, Fan | 2 | 24A402 | 24A402 | 24A402 | 24A402 |
| 11 | FITTING–CONDUIT, Fan | 1 | 24A378 | 24A378 | 24A378 | 24A378 |
| 12 | WIRE–LINE, Fan | 7 | 97H2A | 97H2A | 97H2A | 97H2A |
| 13 | WIRE–GROUND, Fan | 3 | 97H2G | 97H2G | 97H2G | 97H2G |
| 14 | LUG–TERMINAL | 6 | 24A488 | 24A488 | 24A488 | 24A488 |
| 15 | MISC. ELECTRICAL PARTS | 1 | AUX68367 | AUX68367 | AUX68367 | AUX68367 |
| 16 | FITTING–CONDUIT, Main | 1 | 2009323 | 2009323 | 24A384 | 24A378 |
| 17 | CONDUIT, Main | 3 | 2009314 | 2009314 | 24A443 | 24A402 |
| 18 | FITTING–CONDUIT, Main | 1 | 2009324 | 2009324 | 24A385 | 24A379 |
| 19 | WIRE–LINE, Main | 10 | 2009408 | 2009406 | 2009801 | 2009800 |
| 20 | WIRE– GROUND, Main | 4 | 97J39 | 97J39 | 2009989 | 2009989 |
| 21 | LUG–TERMINAL | 6 | 24CA1444 | 24A306 | 2009530 | 24CA1864 |
| 22 | MISC. ELECTRICAL PARTS | 1 | AUX68370 | AUX68370 | AUX68369 | AUX68369 |
| * | CONTROL BOX | 1 | 203EBB466 | 203EBB466 | 202EBB466 | 202EBB466 |

* Not shown.

CONTROLLER ASSEMBLY

| Name of Part | Qty | Part No. | Part No. |
|--------------------------------|-----|------------|------------|
| ASSEMBLED PANEL – NEMA 1 | 1 | 202EBB466 | 203EBB466 |
| BOX–CONTROL | 1 | 201EBB179 | 201EBB179 |
| CONTROLLER | 1 | 200EBE1173 | 200EBE1173 |
| KEYPAD ASM | 1 | 200EBE375 | 200EBE375 |
| PLUG–CONNECTOR | 1 | 24CA3306 | 24CA3306 |
| PLUG–CONNECTOR | 1 | 24CA3400 | 24CA3400 |
| FUSE | 1 | 24CA3725 | 24CA3726 |
| TRANSFORMER | 1 | 2116694 | 2116695 |
| HOURMETER | 1 | 24CA2895 | 24CA2895 |
| OPERATOR | 1 | 24CA2907 | 24CA2907 |
| CONTACT BLOCK | 1 | 24CA2908 | 24CA2908 |
| CONTACTOR | 1 | 24CA2906 | 24CA3863 |
| STARTER COIL | 1 | 2116394 | 2116395 |
| RELAY | 1 | 24CA4086 | 24CA4086 |
| ADAPTOR | 1 | 24CA2502 | 24CA2502 |
| RELAY | 1 | 24CA4086 | 24CA4087 |
| ADAPTOR | 1 | 24CA2502 | 24CA2612 |
| FUSE HOLDER | 1 | 24CA4098 | 24CA4098 |

**MOTOR GROUP
(MAIN DRIVE MOTORS)
(F1 CONDUIT BOX MOUNTING)
(60 HZ – ODP)**

| DESCRIPTION | 7.5 HP PART # (1800 RPM) | 10 HP PART # (3600 RPM) | 15 HP PART NO. (3600 RPM) |
|-----------------|--------------------------------|-------------------------------|---------------------------------|
| MOTOR, 200V | 24AW6 | | |
| MOTOR, 230/460V | 24AW22 | | |
| MOTOR, 575V | 24AW41 | | |
| MOTOR, 200V | | 24CA674 | |
| MOTOR, 230/460V | | 24CA678 | |
| MOTOR, 575V | | 24CA681 | |
| MOTOR, 200V | | | 24CA675 |
| MOTOR, 230/460V | | | 24CA679 |
| MOTOR, 575V | | | 24CA682 |
| BASE | 24AZ34 | 24AZ34 | 24AZ35 |

**MOTOR GROUP
FAN MOTORS
(60 HZ – TEFC)**

| DESCRIPTION | 7.5 HP PART # (1200 RPM) | 10 HP PART # (1200 RPM) | 15 HP PART NO. (1800 RPM) |
|-----------------|--------------------------------|-------------------------------|---------------------------------|
| MOTOR, 200V | | | 24CA2180 |
| MOTOR, 230/460V | | | 24CA2182 |
| MOTOR, 575V | | | 24CA2184 |
| MOTOR, 200V | 24CA4177 | 24CA4177 | |
| MOTOR, 230/460V | 24CA2464 | 24CA2464 | |
| MOTOR, 575V | 24CA4178 | 24CA4178 | |

OVERLOAD RELAY HEATER CONVERSION LISTING

Refer to Motor Nameplate “Amperage” and Decal in Control Panel for Selection of Overload Relay Heater Packs.

**CUTLER-HAMMER
PART NUMBER**

**GARDNER DENVER
PART NUMBER**

| | |
|--------------|----------|
| H2002B | 24CA4101 |
| H2003B | 24CA4102 |
| H2004B | 24CA4103 |
| H2005B | 24CA4104 |
| H2006B | 24CA4105 |
| H2007B | 24CA4106 |
| H2008B | 24CA4107 |
| H2009B | 24CA4108 |
| H2010B | 24CA4109 |
| H2011B | 24CA4110 |
| H2012B | 24CA4111 |
| H2013B | 24CA4112 |
| H2014B | 24CA4113 |
| H2015B | 24CA4114 |
| H2016B | 24CA4115 |
| H2017B | 24CA4116 |
| H2018 | 24CA2924 |
| H2019 | 24CA2925 |
| H2020 | 24CA2926 |
| H2021 | 24CA2927 |
| H2022 | 24CA2893 |
| H2023 | 24CA2894 |
| H2024 | 24CA2928 |

IDENTIFICATION AND INSTRUCTION GROUP

| NAME OF PART | QTY. | PART NO. |
|--|------|-----------|
| * DECAL, WARNING – SEE WIRING DIAGRAM | 1 | 222EAQ077 |
| * DECAL, WARNING – ELECTRICAL SHOCK | 1 | 216EAQ077 |
| DECAL, PARTS LIST / SERVICE MANUAL NUMBER | 1 | 204EDE077 |
| DECAL, L1 | 1 | 236AUX077 |
| DECAL, L2 | 1 | 237AUX077 |
| DECAL, L3 | 1 | 238AUX077 |
| TAG-INSTRUCTION, WARNING – INCORRECT MOTOR ROTATION | 1 | 201EAQ304 |
| DECAL, WARNING – HOT OIL UNDER PRESSURE | 1 | 204EBE077 |
| DECAL, WARNING – AUTO RESTART, ELECTRIC SHOCK, etc. | 1 | 227EAQ077 |
| * DECAL, WARNING – HOT OIL UNDER PRESSURE | 1 | 212EAQ077 |
| DECAL, LUBRICANT AEON 2000 | 1 | 253EAQ077 |
| * DECAL, DANGER – DO NOT MODIFY | 1 | 218EAQ077 |
| * DECAL, WARNING – ROTATING MACHINERY | 1 | 211EAQ077 |
| * DECAL, WARNING – AUTO RESTART | 1 | 207EAQ077 |
| * DECAL, DANGER – DO NOT BREATHE | 1 | 206EAQ077 |
| DECAL, IDENTIFICATION & INSTRUCTION | 1 | 201EJB077 |
| DECAL, NOTICE – USE GARDNER DENVER PARTS | 1 | 214EAQ077 |
| DECAL, AUTO SENTRY S | 1 | 206EJB077 |
| DECAL, NAMEPLATE | 1 | 69F64 |
| DECAL, QUALITY WITHOUT QUESTION | 1 | 251EAQ077 |
| DECAL, CAUTION – USE FLOORPLATE | 1 | 221EAQ077 |
| DECAL, OIL SEPARATOR | 1 | 201EBB077 |
| DECAL, INSTALLATION – OIL FILTER ELEMENT | 1 | 202EBB077 |

* Refer to pages 6 and 7 for Decal information regarding Safety related items.

REPAIR PARTS

Your Gardner Denver rotary screw compressor is designed and manufactured for many years of reliable operation. All components are engineered to exacting specifications, which will function together as a system to provide maximum efficiency. To insure the continuing integrity of compressor operation, use only original quality genuine Gardner Denver replacement parts and accessories.

| Name of Part | Qty | Part No. |
|--|-----|-------------|
| ROUTINE MAINTENANCE KIT, Standard Air Filter | | 200EBB6013 |
| ELEMENT, Air Filter | 2 | 200EBB059 |
| ELEMENT, Oil Filter | 3 | 200EBB369 |
| OIL SEPARATOR ELEMENT | 1 | 200EBB035 |
| MAINTENANCE KIT (Minimum Pressure/Check Valve) | 1 | 2116968 |
| KIT-VALVE (Intake Maintenance) | 1 | 2116966 |
| KIT, BEARING (Includes Oil Seal Kit) | 1 | 200EBB6023 |
| KIT, OIL SEAL | 1 | 200EBB6029 |
| KIT-VALVE (Intake Regulator) | 1 | 200EBB6017 |
| TOOLS FOR OIL SEAL | | |
| ASSEMBLY BUSHING | | 2117745 |
| SEAL PULLER | | 2117746 |
| SHAFT SEAL ASSEMBLY TOOL | | 2117747 |
| WEAR SLEEVE INSTALLATION TOOL | | 2117748 |
| ELECTRICAL CONTROL KIT | | 201EBB6013 |
| THERMISTOR PROBE (1/8 NPT) | 2 | 21D293 |
| THERMISTOR PROBE (1/4 NPT) | 2 | 21D264 |
| SWITCH-VACUUM | 1 | 88H195 |
| TRANSDUCER | 2 | 88H242 |
| LUBRICANT (AEON 2000) | | |
| 5-GALLON PAIL | 1 | 28G36 |
| 55-GALLON DRUM | 1 | 28G37 |
| THERMAL MIXING VALVE ELEMENTS | | |
| 150° F | | 2116924 |
| 170° F (Standard) | | 2116925 |
| 180° F | | 2116926 |
| NEW AIR END | | 200EBB1095 |
| REMANUFACTURED AIR END | | 200EBB1095X |
| OPTIONAL ACCESSORIES (Available from your Authorized GD Distributor) | | |
| ELIMINATOR® WATER/OIL SEPARATOR | | 200EAQ035 |
| MOISTURE SEPARATOR/TRAP (7.5/10 HP) | | 7000352 |
| MOISTURE SEPARATOR/TRAP (15 HP) | | 7000354 |

SECTION 11

OPTIONAL INTEGRATED DRYER

SERVICE INSTRUCTIONS AND PARTS LIST

INSTALLATION – There should be at least 12 inches (305 mm) clearance on all sides of the dryer. The condenser fins and surfaces should be regularly cleaned with compressed air. The grill can be easily removed to access the condenser coil. Ambient temperatures should never be above 110° F (43° C) or below 40° F (4° C).

Before start-up, the refrigerant suction pressure needs to be read. This indicates the refrigerant pressure and during shutdown corresponds with ambient temperature. See FIGURE 11-2.

At start-up, you will want to start the dryer prior to starting the air compressor. **DO NOT START WITH A LOAD ON THE DRYER.** After pushing the start button, the “MOTOR RUN” indicating light will illuminate. The dryer is designed to run continuously and must not be cycled with the air compressor. The fan on the air cooled unit will cycle in accordance with head pressure.

The refrigerant suction pressure gauge reading after start-up and while operating under rated load will be (R-22) 57–65 psig.

OPERATING INSTRUCTIONS – The EBB integrated dryer is electrically isolated from the EBB air compressor and will not cause a shutdown of an operating air compressor if a fault condition should occur in the dryer.

The dryer unit requires a separate power source rated at 120 VAC/60 Hz. Refer to the manufacturer’s nameplate, on the dryer, for the minimum supply circuit conductor ampacity and maximum rating of the branch-circuit short-circuit and ground-fault protective device. The dryer control circuit is internally fused for 2 ampere protection. Additionally, the dryer compressor motor is provided with internal thermal overload protection.

Externally mounted controls for the EBB integrated dryer consist of a “START” pushbutton, “STOP” push-

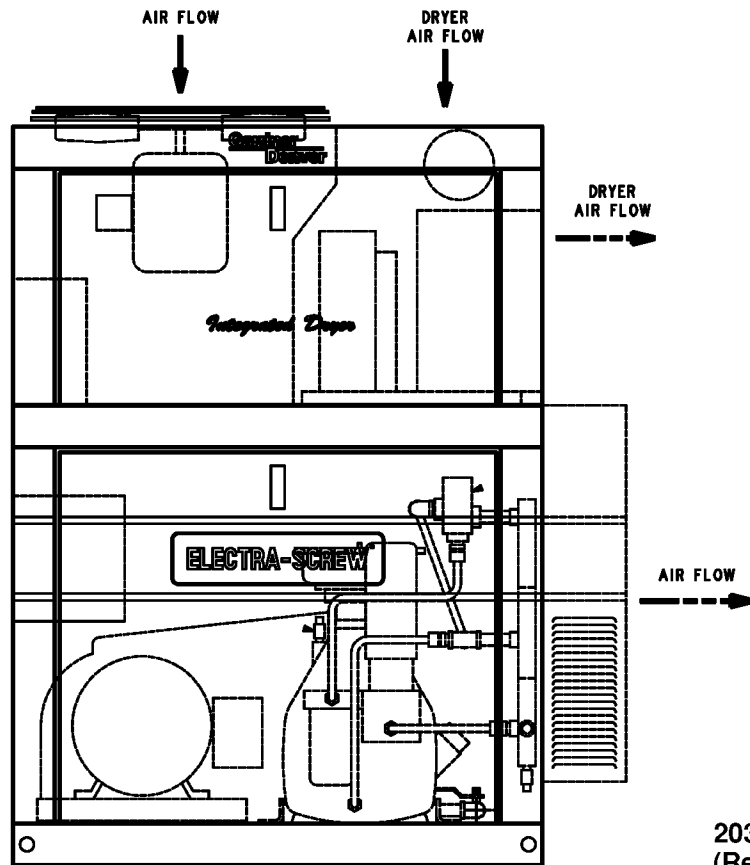


FIGURE 11-1 – COMPRESSOR WITH INTEGRATED DRYER

| TEMPERATURE-PRESSURE CHART (R-22) | | | | |
|-----------------------------------|------------------|--|------------------|------------------|
| Temperature F | Pressure psig | | Temperature F | Pressure psig |
| 28 | 52.4 | | 65 | 111.2 |
| 30 | 54.9 | | 70 | 121.4 |
| 32 | 57.5 | | 75 | 132.2 |
| 34 | 60.1 | | 80 | 143.6 |
| 36 | 62.8 | | 85 | 155.7 |
| 38 | 65.6 | | 90 | 168.4 |
| 40 | 68.5 | | 95 | 181.8 |
| 45 | 76.0 | | 100 | 195.9 |
| 50 | 84.0 | | 105 | 210.8 |
| 55 | 92.6 | | 110 | 226.4 |
| 60 | 101.6 | | | |

FIGURE 11-2 – TEMPERATURE-PRESSURE CHART (R-22)

button, “MOTOR RUN” indicator and an “ALARM” indicator light.


The compressor fan motor is directly controlled by pressure switch S2 when the dryer is in the “MOTOR RUN” mode. Pressure switch S2 will close to activate the fan motor when the dryer compressor discharge pressure reaches 195 PSI. The fan motor will continue to operate until the dryer compressor discharge pressure decreases to 150 PSI causing pressure switch S2 to open.

The “ALARM” circuit in the EBB integrated dryer is controlled by pressure switch S1 which will open if the dryer compressor discharge pressure reaches 375 PSI. This condition will cause the dryer unit to shutdown and the “ALARM” indicator to be lit. The unit cannot be restarted until the dryer compressor discharge pressure decreases below 300 PSI causing pressure switch S1 to close and the “ALARM” indicator to be extinguished. Refer to the troubleshooting guide in the event of an “ALARM” condition.

The EBB integrated dryer must be manually restarted in the event of a power failure.

The noncycling operation of the refrigerated dryer is controlled by two modulating valves. The hot gas bypass valve is used in conjunction with the capillary tube. This valve automatically opens and closes depending on the amount of cooling required, thus maintaining the design pressure dew point. The hot gas by-pass is preset at the factory. The suction pressure gauge

should indicate 65 psig for R-22. If adjustment is necessary, refer to FIGURE 11-3.

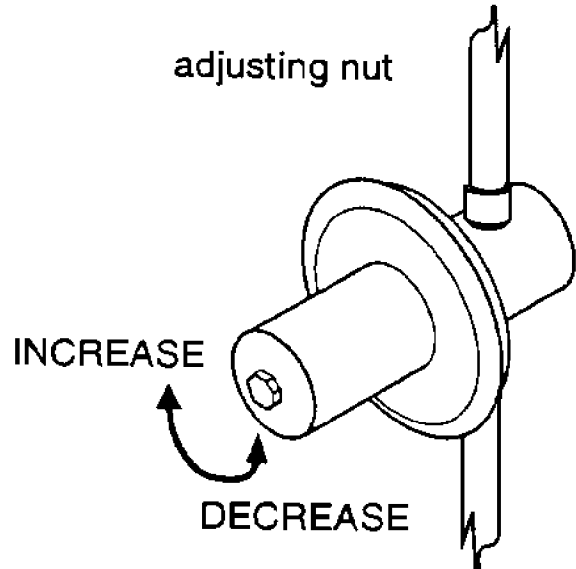

Increasing the suction pressure will raise the evaporator temperature.

Decreasing the suction pressure will lower the evaporator temperature.

FIGURE 11-3 – ADJUSTING NUT FOR SUCTION PRESSURE

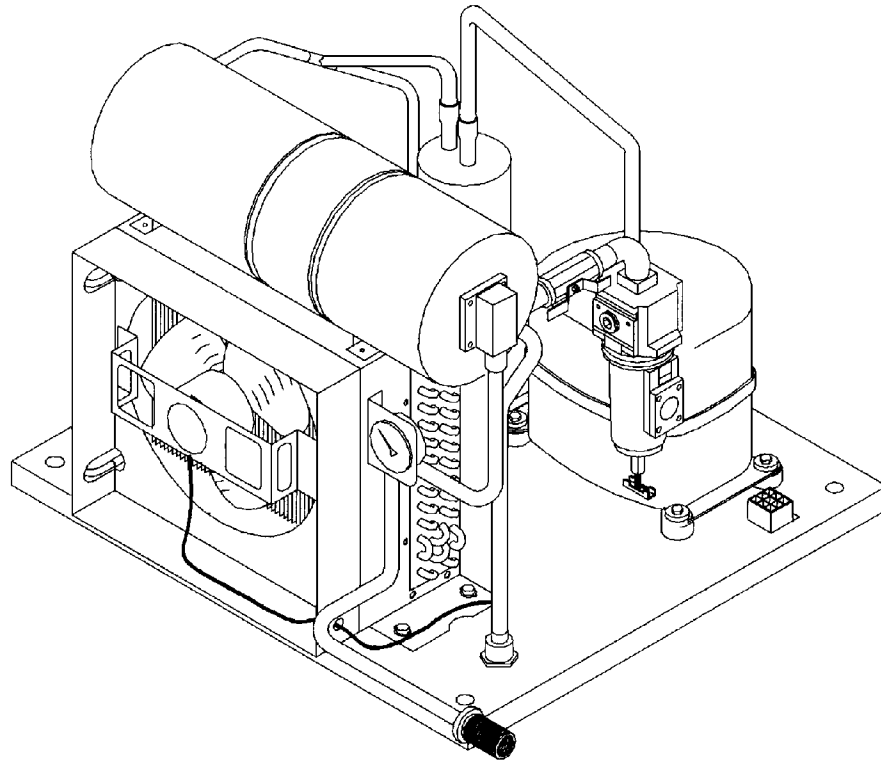


FIGURE 11-4 – REFRIGERATED DRYER

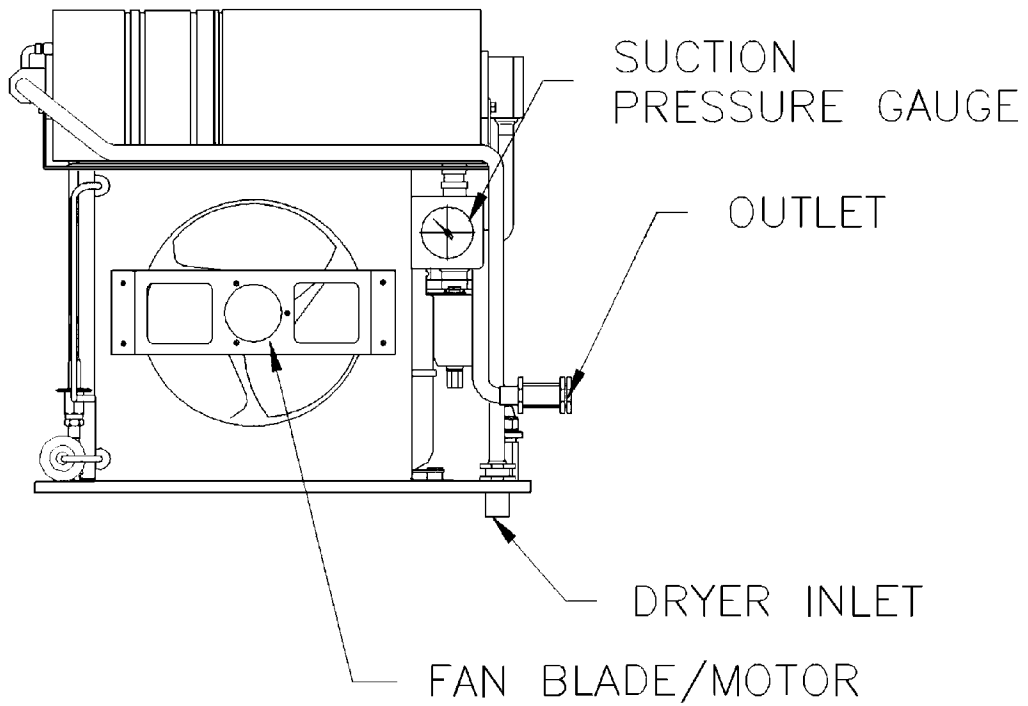


FIGURE 11-5 – SUCTION PRESSURE GAUGE, DRYER INLET AND OUTLET

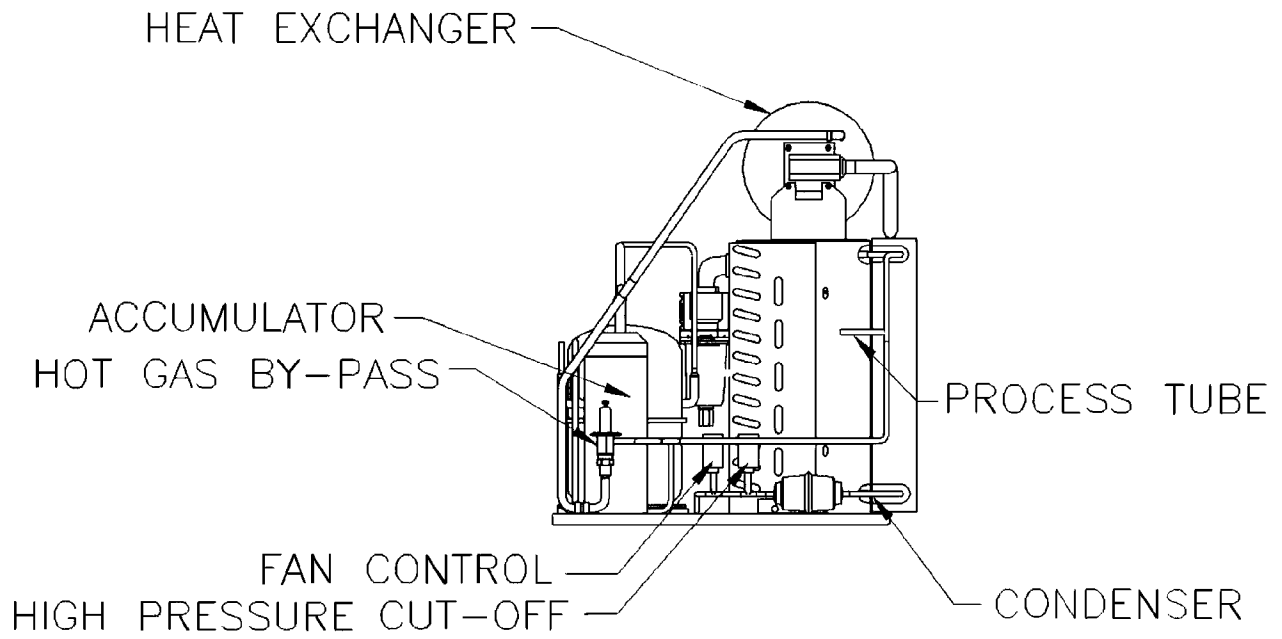


FIGURE 11-6 - CONDENSER, HEAT EXCHANGER, HOT GAS BYPASS

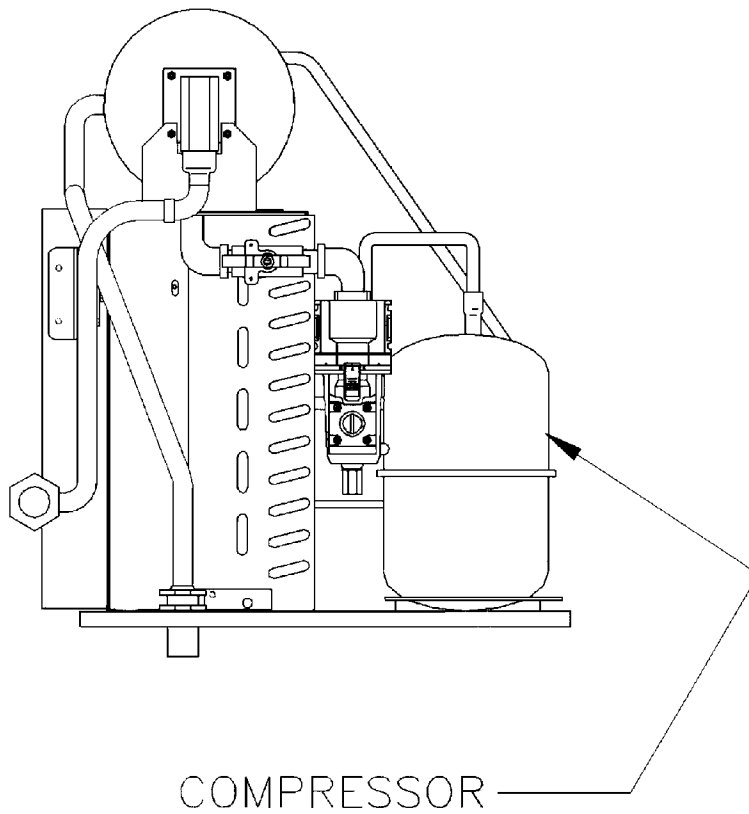


FIGURE 11-7 - COMPRESSOR (REFRIGERATED DRYER)

TROUBLE SHOOTING GUIDE FOR OPTIONAL INTEGRATED DRYER

| SYMPTOM | POSSIBLE CAUSE | REMEDY |
|--|--|---|
| Dryer not running Motor Run light is on | 1. Low voltage to the dryer. | 1. Verify proper line voltage to unit |
| | 2. Contactor not pulling in. | 2. Check all safeties, verify control voltage, check coil continuity. |
| | 3. Compressor overload open | 3. Verify that compressor is not grounded or shorted phase to phase, verify proper refrigerant charge in unit, verify proper ambient temperature conditions (40 to 110 F.). |
| | 4. Defective compressor start components. | 4. Verify that capacitors and voltage relays are functioning properly. |
| | 5. Compressor windings open. | 5. Verify that overload is functioning properly by checking continuity, read windings for continuity. |
| Dryer not running Motor Run light is off. | 1. Switch not turned on. | 1. Check switch. |
| | 2. No power. | 2. Verify proper line voltage to unit. |
| | 3. Circuit breaker or fuse. | 3. Check circuit breakers and fuses. Ascertain cause of fuse failure before trying to restart. |
| | 4. Improperly wired. | 4. Check wiring against wiring diagram. |
| | 5. Defective Start or Stop switch. | 5. Check switches for continuity. |
| High discharge pressure (above 335 psig) | 1. Fan not operating. | 1. Check fan motor. Check fan cycling control for proper operation. |
| | 2. Dirty or blocked condensor. | 2. Maintain clearances around the unit as specified in the manual. Inspect condensor for dirt and debris. |
| | 3. High ambient conditions. | 3. Verify ambient conditions as specified in the manual. |
| | 4. Excessive air load exceeding the capacity of the dryer. | 4. Verify proper flow and load at dryer inlet. |

| SYMPTOM | POSSIBLE CAUSE | REMEDY |
|---|---|--|
| High suction pressure (62 to 72 psig normal) | <ol style="list-style-type: none"> 1. Excessive air load exceeding the capacity of the dryer. 2. Hot gas by-pass valve setting too high. 3. High ambient condition. | <ol style="list-style-type: none"> 1. Verify proper flow and load at dryer inlet. 2. Follow instructions in manual checking and setting hot gas by-pass valve. 3. Verify ambient conditions as specified in the manual. |
| Low suction pressure (62 to 72 psig normal) | <ol style="list-style-type: none"> 1. Low or no air load. 2. Fan not cycling at low load. 3. Hot gas by-pass valve setting too low. 4. Refrigerant leak. 5. Low ambient temperature and fan not cycling. | <ol style="list-style-type: none"> 1. Verify proper flow and load at dryer inlet. 2. Check fan operation. Verify proper operation of fan cycling control. 3. Follow instructions in manual for checking and setting hot gas by-pass valve. 4. Check unit for leaks using soap bubbles or electronic leak detector. Repair leak. 5. Check fan operation. Verify proper operation of fan cycling control. |
| Moisture in air system downstream. | <ol style="list-style-type: none"> 1. Dryer overloaded (air flow). 2. Separator drains not functioning. 3. By-pass valve open. 4. Refrigeration system not operating. | <ol style="list-style-type: none"> 1. Verify proper flow and load at dryer inlet. 2. Inspect automatic drain and verify proper operation. Follow instructions in maintenance manual. 3. Close by-pass. 4. See "Dryer not running, Motor light is on" and "Dryer not running, Motor light is off," page 64. |
| High pressure drop in dryer air circuit. | <ol style="list-style-type: none"> 1. Dryer overloaded (air flow). 2. Heat exchanger clogged. 3. Frozen evaporator coil. | <ol style="list-style-type: none"> 1. Verify proper flow and load at dryer inlet. 2. Clean exchanger to remove debris and restart unit. 3. Verify proper load and hot gas by-pass valve settings. Follow instructions in manual to check and set hot gas by-pass valve. |

SYMPTOM**POSSIBLE CAUSE****REMEDY**

Alarm light on
(Refrigerant
compressor OFF)

1. Air inlet temperature too high.

1. Verify proper load and temperature
at dryer inlet.


2. Refrigerant shortage.

2. Check for leaks using soap bubbles
or electronic leak detector. If
leaks are detected repair
immediately using industry
approved standards.

3. Blocked condensor.

3. Clean condensor or remove
obstruction and restart unit.


INTEGRATED DRYER ASSEMBLY AND PIPING

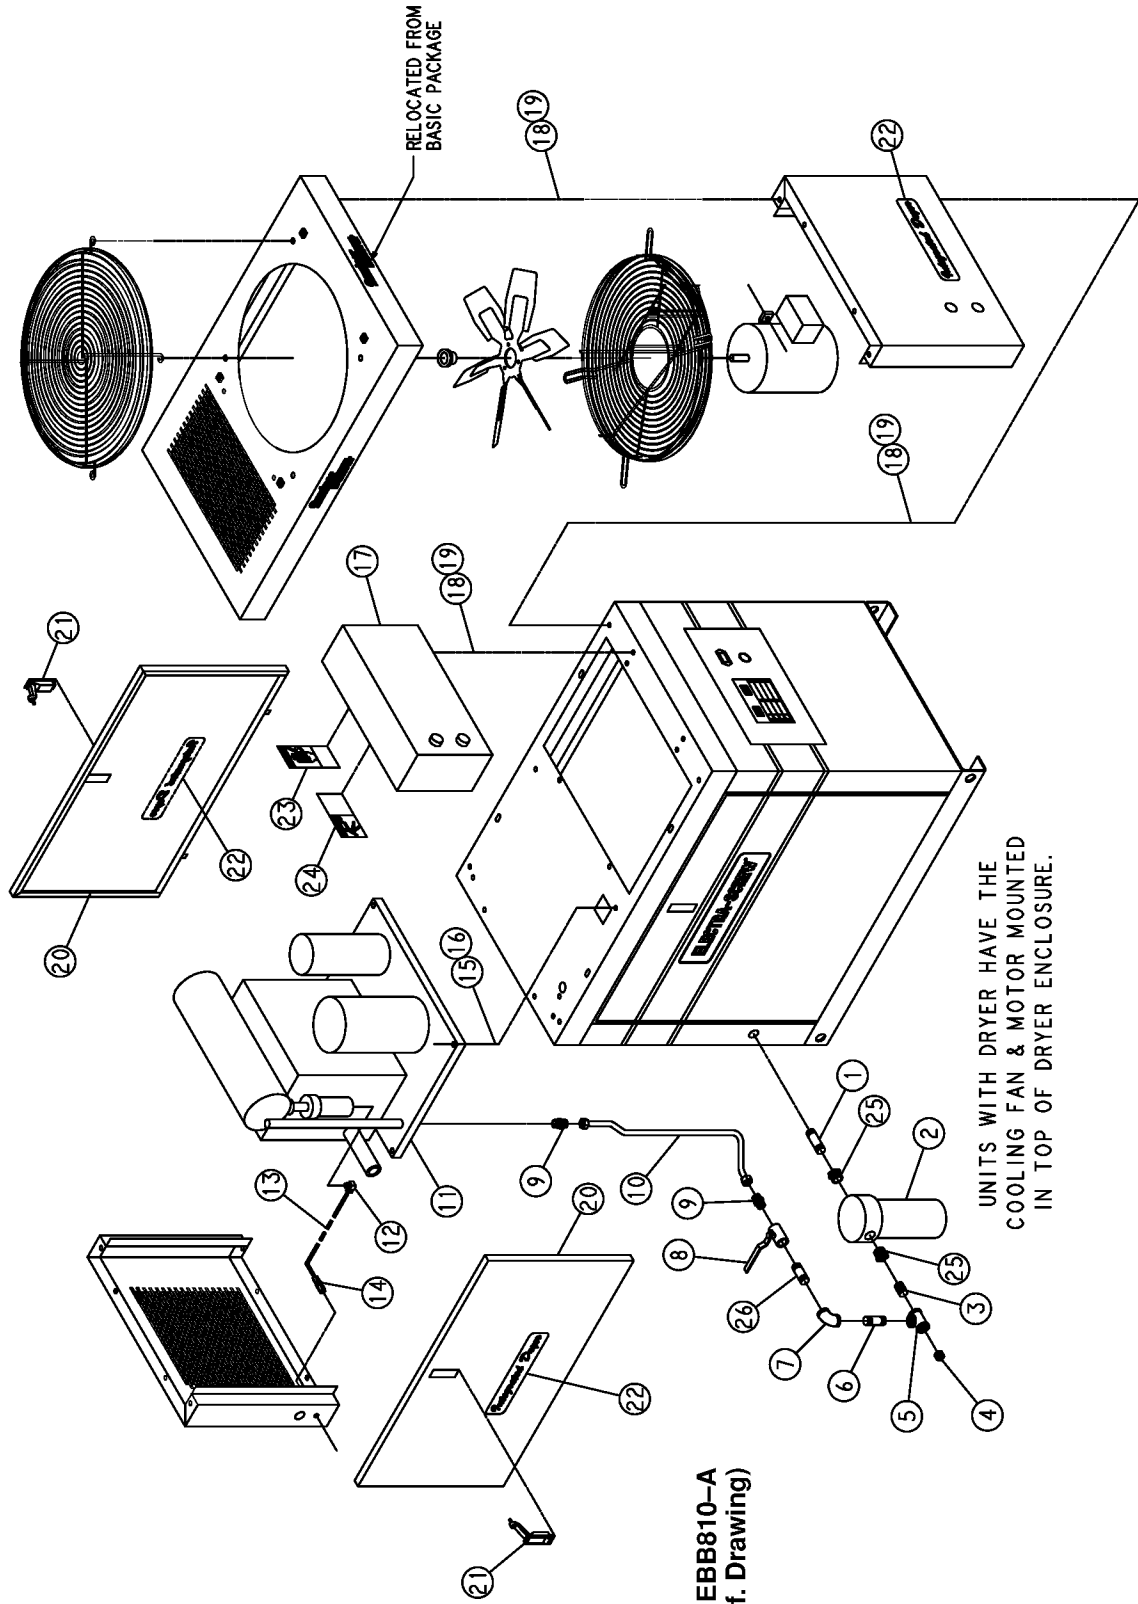

INTEGRATED DRYER ASSEMBLY AND PIPING

| Ref. No. | Name of Part | Qty. | Part No. |
|-----------------|---------------------------|-------------|-----------------|
| 1 | NIPPLE-PIPE | 1 | 63G3G |
| 2 | SEPARATOR-MOISTURE | 1 | 7000354 |
| 3 | NIPPLE-PIPE | 1 | 63F21G |
| 4 | PLUG | 1 | 64B2 |
| 5 | TEE-PIPE | 1 | 64G6G |
| 6 | NIPPLE-PIPE | 1 | 63F2G |
| 7 | ELBOW-PIPE | 1 | 64C4G |
| 8 | VALVE-BALL | 1 | 90AR360 |
| 9 | CONNECTOR-TUBE | 2 | 86H144 |
| 10 | TUBE-W/FIT | 1 | 302EBB863 |
| 11 | DRYER-AIR | 1 | 300EBB463 |
| 12 | ELBOW-TUBE | 1 | 86E78 |
| 13 | TUBE | 2 | 85K3 |
| 14 | CONNECTOR-TUBE | 1 | 86N287 |
| 15 | SCREW-FLANGED | 4 | 75LM98 |
| 16 | NUT-FLANGED | 4 | 50AW5 |
| 17 | STARTER-CONTROL BOX | 1 | 300EBB466 |
| 18 | SCREW-FLANGED | 22 | 75LM51 |
| 19 | NUT-FLANGED | 22 | 50AW5 |
| 20 | SEAL | 11 | 32E12 |
| 21 | LATCH | 2 | 31D58 |
| 22 | DECAL | 3 | 300EBB077 |
| 23 | DECAL | 1 | 213EAQ077 |
| 24 | DECAL | 1 | 216EAQ077 |
| 25 | BUSHING-PIPE | 2 | 64E5G |
| 26 | NIPPLE | 1 | 63F22G |

INTEGRATED DRYER MOUNTING GROUP

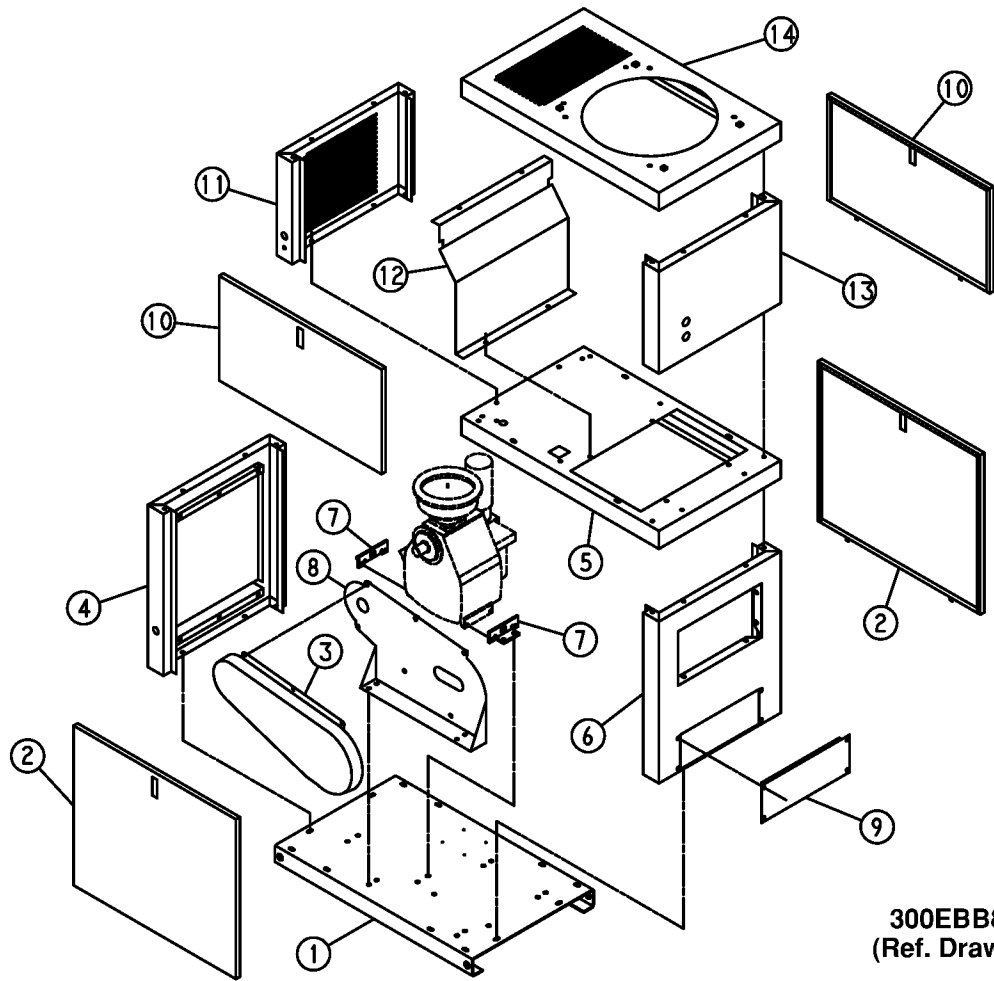


300EBB810
(Ref. Drawing)

| Ref. No. | Name of Part | Qty. | Part No. |
|----------|------------------------|------|-----------|
| 1 | BASE | 1 | 200EBB285 |
| 2 | PANEL | 2 | 201EBB216 |
| 3 | GUARD-DRIVE | 1 | 201EBB120 |
| 4 | FRAME | 1 | 202EBB314 |
| 5 | HOOD | 1 | 301EBB053 |
| 6 | FRAME | 1 | 203EBB314 |
| 7 | BRACKET (FORMED) | 2 | 200EBB142 |
| 8 | BRACE | 1 | 200EBB326 |
| 9 | PLATE-INSPECTION | 1 | 300EBB052 |
| 10 | PANEL | 2 | 300EBB216 |
| 11 | FRAME | 1 | 301EBB314 |
| 12 | BAFFLE | 1 | 300EBB840 |
| 13 | FRAME | 1 | 300EBB314 |
| 14 | HOOD | 1 | 300EBB053 |


**STARTER CONTROL BOX
FULL VOLTAGE – NEMA 1 – 120 VOLT**

| Ref. No. | Name of Part | Qty. | Part No. |
|-------------|-------------------------|------|-----------|
| 1 | CONTROL BOX | 1 | 300EBB179 |
| 2 | BLOCK | 1 | 24CA4460 |
| 3 | PUSHBUTTON SWITCH | 1 | 24CA4459 |
| 4 | SWITCH | 1 | 24CA2886 |
| 5 | CONTACTOR | 1 | 24CA4453 |
| 6 | CONTACT | 1 | 24CA4461 |
| 7 | RELAY | 1 | 24CA2167 |
| 8 | SOCKET | 1 | 24CA2168 |
| 9 | RELAY | 1 | 24CA2169 |
| 10 | RELAY | 1 | 24CA4455 |
| 11 | SOCKET | 1 | 24CA4456 |
| 12 | SPRING | 1 | 24CA4457 |
| 13 | RELAY | 1 | 24CA4454 |
| 14 | CAPACITOR | 1 | 24CA4463 |
| 15 | CAPACITOR | 1 | 24CA4463 |
| 16 | HOLDER | 1 | 24CA4458 |


REFRIGERATION COMPONENTS

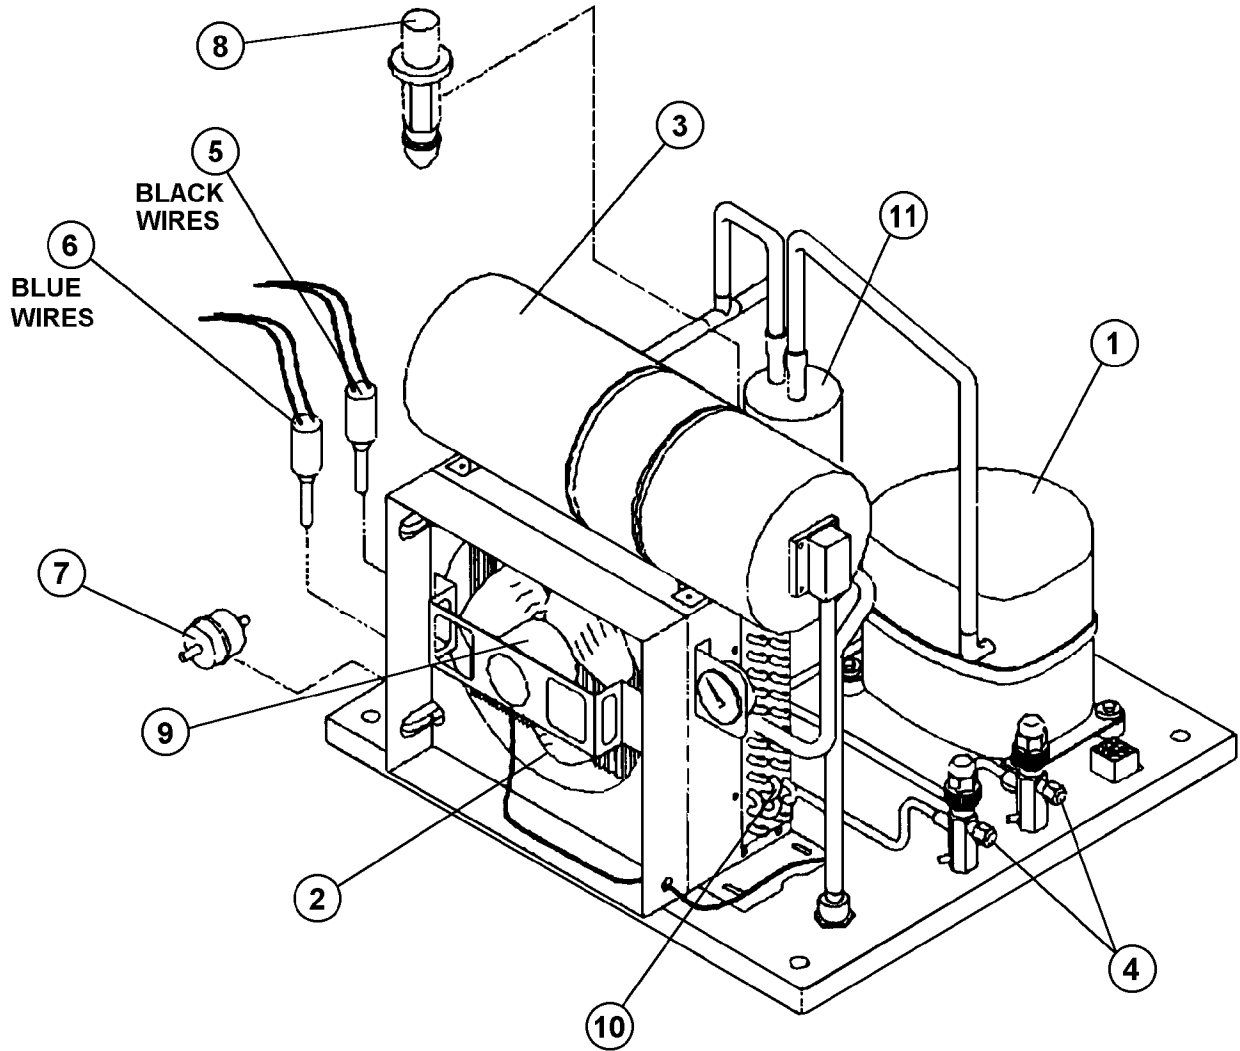

| Ref. No. | Name of Part | Qty. | Part No. |
|----------|---------------------------------|------|----------|
| 1 | COMPRESSOR | 1 | 7000510 |
| 2 | FAN BLADE | 1 | 7000542 |
| 3 | HEAT EXCHANGER | 1 | 7003099 |
| 4 | REFRIGERANT SERVICE VALVE | 1 | 7000591 |
| 5 | FAN CYCLE CONTROL | 1 | 7000654 |
| 6 | HIGH PRESSURE CONTROL | 1 | 7000653 |
| 7 | FILTER / DRYER | 1 | 7000599 |
| 8 | HOT GAS VALVE | 1 | 7000553 |
| 9 | FAN MOTOR | 1 | 7000532 |
| 10 | CONDENSER | 1 | 7000529 |
| 11 | ACCUMULATOR | 1 | 7000608 |

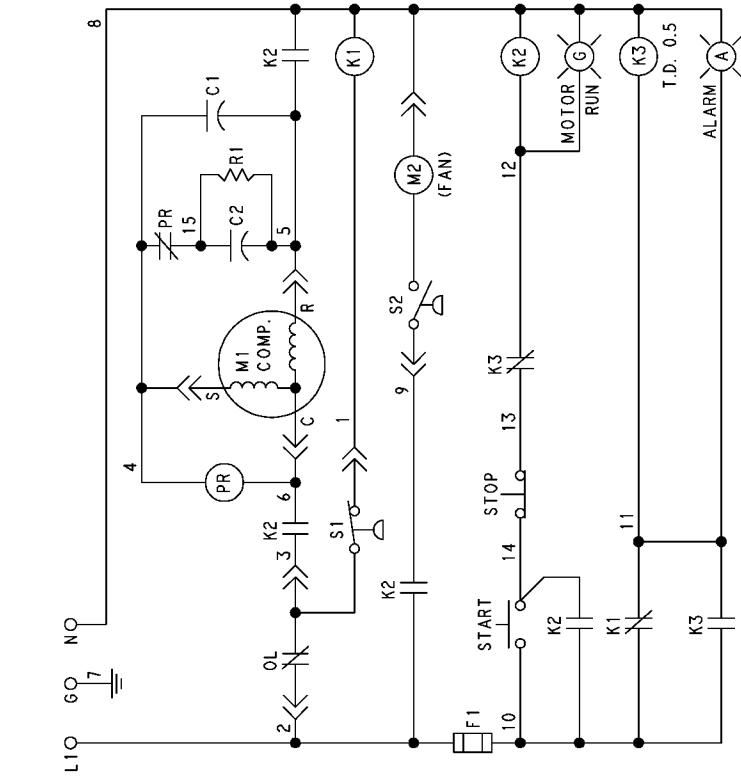

300EBB541-B
(Ref. Drawing)

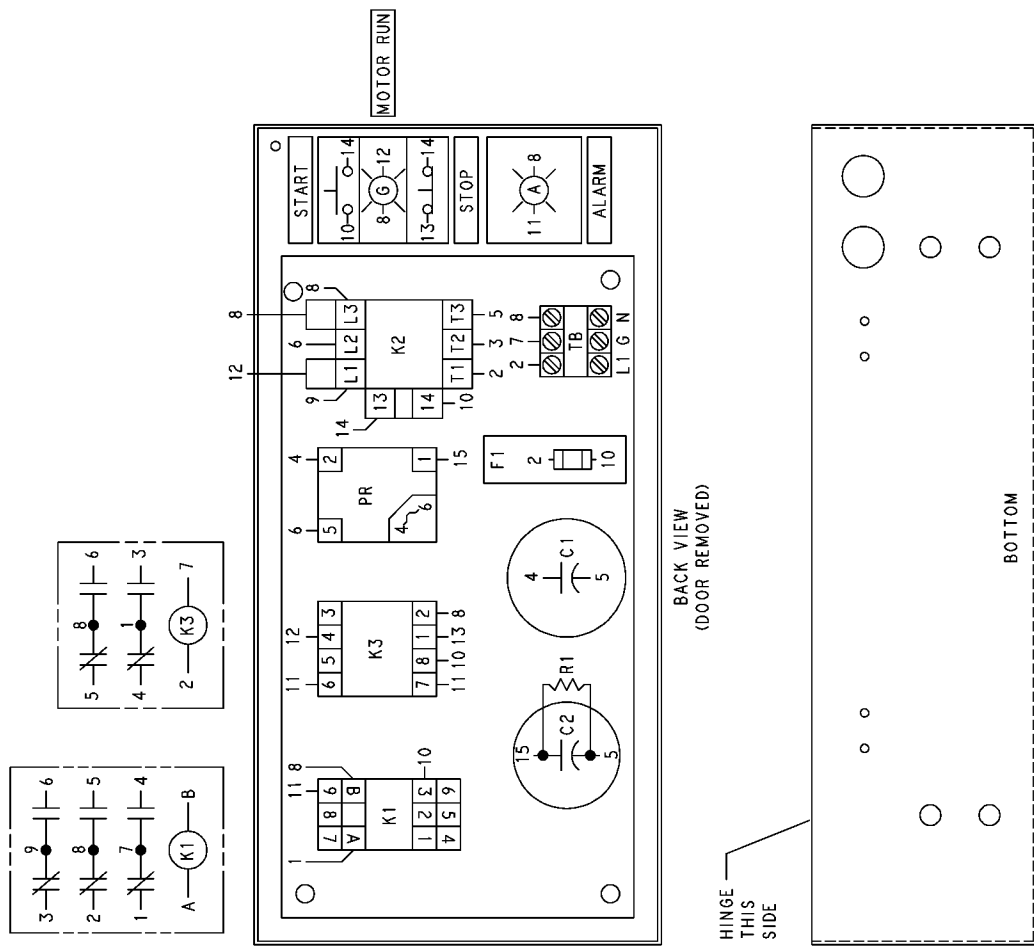

GENERAL PROVISIONS AND LIMITATIONS

Gardner Denver (the "Company") warrants to each original retail purchaser ("Purchaser") of its new products from the Company or its authorized distributor that such products are, at the time of delivery to the Purchaser, made with good material and workmanship. No warranty is made with respect to:

1. Any product which has been repaired or altered in such a way, in the Company's judgment, as to affect the product adversely.
2. Any product which has, in the Company's judgment been subject to negligence, accident, improper storage, or improper installation or application.
3. Any product which has not been operated or maintained in accordance with the recommendations of the Company.
4. Components or accessories manufactured, warranted and serviced by others.
5. Any reconditioned or prior owned product.

Claims for items described in (4) above should be submitted directly to the manufacturer.

WARRANTY PERIOD

The Company's obligation under this warranty is limited to repairing or, at its option, replacing, during normal business hours at an authorized service facility of the Company, and part which in its judgment proved not to be as warranted within the applicable Warranty Period as follows.

AIRENDS

Airends, consisting of all parts within and including the cylinder and gear housing, are warranted for 24 months from date of initial use or 27 months from date of shipment to the purchaser, whichever occurs first.

Any disassembly or partial disassembly of the airend, or failure to return the "unopened" airend per Company instructions, will be cause for denial of warranty.

MAJOR PACKAGE COMPONENTS

The drive motor, air or water cooled coolers and the auto Sentry ES+, RS2000 or VS2000 Controller are warranted for 24 months from date of initial use or 27 months from date of shipment to the first purchaser, whichever occurs first.

OTHER COMPONENTS

All other components are warranted for 12 months from date of initial use or 15 months from date of shipment to first purchaser, whichever occurs first.

LABOR TRANSPORTATION AND INSPECTION

The Company will provide labor, by Company representative or authorized service personnel, for repair or replacement of any product or part thereof which in the Company's judgment is proved not to be as warranted. Labor shall be limited to the amount specified in the Company's labor rate schedule.

Labor costs in excess of the Company rate schedule amounts or labor provided by unauthorized service personnel is not provided for by this warranty.

All costs of transportation of product, labor or parts claimed not to be as warranted and, of repaired or replacement parts to or from such service facilities shall be borne by the Purchaser. The Company may require the return of any part claimed not to be as warranted to one of its facilities as designated by Company, transportation prepaid by Purchaser, to establish a claim under this warranty.

Replacement parts provided under the terms of the warranty are warranted for the remainder of the Warranty Period of the product upon which installed to the same extent as if such parts were original components.

DISCLAIMER

THE FOREGOING WARRANTY IS EXCLUSIVE AND IT IS EXPRESSLY AGREED THAT, EXCEPT AS TO TITLE, THE COMPANY MAKES NO OTHER WARRANTIES, EXPRESSED, IMPLIED OR STATUTORY, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY.

THE REMEDY PROVIDED UNDER THIS WARRANTY SHALL BE THE SOLE, EXCLUSIVE AND ONLY REMEDY AVAILABLE TO PURCHASER AND IN NO CASE SHALL THE COMPANY BE SUBJECT TO ANY OTHER OBLIGATIONS OR LIABILITIES. UNDER NO CIRCUMSTANCES SHALL THE COMPANY BE LIABLE FOR SPECIAL, INDIRECT, INCIDENTAL OR CONSEQUENTIAL DAMAGES, EXPENSES, LOSSES OR DELAYS HOWSOEVER CAUSED.

No statement, representation, agreement, or understanding, oral or written, made by any agent, distributor, representative, or employee of the Company which is not contained in this Warranty will be binding upon the Company unless made in writing and executed by an officer of the Company.

This warranty shall not be effective as to any claim which is not presented within 30 days after the date upon which the product is claimed not to have been as warranted. Any action for breach of this warranty must be commenced within one year after the date upon which the cause of action occurred.

Any adjustment made pursuant to this warranty shall not be construed as an admission by the Company that any product was not as warranted.

Gardner

Denver

For additional information contact your local representative or
Gardner Denver, Customer Service Department,
1800 Gardner Expressway, Quincy, Illinois 62301
Telephone: (800) 682-9868 FAX: (217) 224-7814



Sales and Service in all major cities.

For parts information, contact Gardner Denver,
Master Distribution Center, Memphis, TN
Telephone: (800) 245-4946 FAX: (901) 542-6159

Specifications subject to change without notice.
Copyright 1999 Gardner Denver, Inc. Litho in U.S.A.

<http://www.gardnerdenver.com> mktg@gardnerdenver.com