



**INDUSTRIAL AIR  
COMPRESSOR  
LS16T  
100-200HP/ 75-149KW  
SUPERVISOR II**

**OPERATOR'S  
MANUAL AND  
PARTS LIST**

**KEEP FOR  
FUTURE  
REFERENCE**

Part Number 02250142-464  
©Sullair Corporation

# AIR CARE SEMINAR TRAINING

Sullair Air Care Seminars are 3-day courses that provide hands-on instruction in the proper operation, maintenance and service of Sullair equipment. Individual seminars on Industrial compressors and compressor electrical systems are presented at regular intervals throughout the year at a dedicated training facility at Sullair's corporate headquarters in Michigan City, Indiana.

Instruction includes discussion of the function and installation of Sullair service parts, troubleshooting of the most common problems, and actual equipment operation. The seminars are recommended for maintenance and service personnel.

For detailed course outlines, schedule and cost information contact:

Sullair Corporate Training Department  
1-888-SULLAIR or 219-879-5451 (ext. 5363)  
[www.sullair.com/training.shtm](http://www.sullair.com/training.shtm)

- Or Write -

Sullair Corporation  
3700 E. Michigan Blvd.  
Michigan City, IN 46360  
Attn: Service Training Department

# TABLE OF CONTENTS



**OPERATOR IS REQUIRED TO READ  
ENTIRE INSTRUCTION MANUAL**

## Section 1 SAFETY

### PAGE

1	1.1 GENERAL
1	1.2 PERSONAL PROTECTIVE EQUIPMENT
1	1.3 PRESSURE RELEASE
2	1.4 FIRE AND EXPLOSION
2	1.5 MOVING PARTS
2	1.6 HOT SURFACES, SHARP EDGES AND SHARP CORNERS
2	1.7 TOXIC AND IRRITATING SUBSTANCES
3	1.8 ELECTRICAL SHOCK
3	1.9 LIFTING
4	1.10 ENTRAPMENT

## Section 2 DESCRIPTION

5	2.1 INTRODUCTION
5	2.2 DESCRIPTION OF COMPONENTS
5	2.3 SULLAIR COMPRESSOR UNIT, FUNCTIONAL DESCRIPTION
6	2.4 COMPRESSOR COOLING AND LUBRICATION SYSTEM, FUNCTIONAL DESCRIPTION
7	2.5 COMPRESSOR DISCHARGE SYSTEM, FUNCTIONAL DESCRIPTION
7	2.6 CONTROL SYSTEM, FUNCTIONAL DESCRIPTION
22	2.7 AIR INLET SYSTEM, FUNCTIONAL DESCRIPTION
22	2.8 SUPERVISOR II PANEL BASIC INTRODUCTION
22	2.9 KEYPAD
23	2.10 STATUS DISPLAYS
24	2.11 LAMP INDICATORS

## Section 3 SPECIFICATIONS

27	3.1 SPECIFICATIONS- LS16T
27	3.2 LUBRICATION GUIDE- STANDARD COMPRESSORS
28	3.3 APPLICATION GUIDE

# TABLE OF CONTENTS

## Section 4 INSTALLATION

31	4.1 MOUNTING OF COMPRESSOR
31	4.2 VENTILATION AND COOLING
31	4.3 SERVICE AIR PIPING
31	4.4 COUPLING ALIGNMENT CHECK
31	4.5 FLUID LEVEL CHECK
32	4.6 ELECTRICAL PREPARATION
32	4.7 MOTOR ROTATION DIRECTION CHECK

## Section 5 OPERATION

33	5.1 GENERAL
33	5.2 PURPOSE OF CONTROLS
34	5.3 PARAMETERS SETUP
35	5.4 OPERATING THE COMPRESSOR
36	5.5 SUPERVISOR II OUTPUT RELAYS
37	5.6 INITIAL START-UP PROCEDURE
37	5.7 SUBSEQUENT START-UP PROCEDURE
37	5.8 SHUTDOWN PROCEDURE

## Section 6 MAINTENANCE

39	6.1 MAINTENANCE INTRODUCTION
39	6.2 DAILY OPERATION
39	6.3 MAINTENANCE AFTER INITIAL 50 HOURS OF OPERATION
39	6.4 MAINTENANCE AS REQUIRED BY LUBRICATION GUIDE (SECTION 3)
39	6.5 FLUID CHANGE
39	6.6 SEPARATOR MAINTENANCE
39	6.7 PARTS REPLACEMENT AND ADJUSTMENT PROCEDURES
39	FLUID FILTER MAINTENANCE
40	AIR FILTER MAINTENANCE
41	AIR/OIL SEPARATOR ELEMENTS REPLACEMENT
42	OIL RETURN/SIGHT GLASS MAINTENANCE
42	DIFFERENTIAL PRESSURE REGULATOR ADJUSTMENT
42	DRIVE COUPLING INSTALLATION AND ALIGNMENT

## Section 7 TROUBLESHOOTING

45	7.1 TROUBLESHOOTING
45	7.2 TROUBLESHOOTING GUIDE

# TABLE OF CONTENTS

## Section 8 ILLUSTRATIONS AND PARTS LIST

49	8.1 PROCEDURE FOR ORDERING PARTS
49	8.2 RECOMMENDED SPARE PARTS LIST
52	8.3 MOTOR, FRAME, COMPRESSOR AND PARTS- 100-125HP
54	8.4 MOTOR, FRAME, COMPRESSOR AND PARTS- 150-200HP
56	8.5 AIR INLET SYSTEM
56	8.6 FLUID COOLING SYSTEM- 100-125HP AIR-COOLED
60	8.7 FLUID COOLING SYSTEM- 150-200HP AIR-COOLED
62	8.8 AIR PIPING SYSTEM- 100-125HP AIR-COOLED
66	8.9 AIR PIPING SYSTEM- 150-200HP AIR-COOLED
70	8.10 FLUID PIPING SYSTEM- 100-125HP AIR-COOLED
72	8.11 FLUID PIPING SYSTEM- 150-200HP AIR-COOLED
74	8.12 DISCHARGE SYSTEM
80	8.13 CONTROL/START SYSTEM
84	8.14 CONTROL PANEL
86	8.15 ENCLOSURE 100-125HP
88	8.16 ENCLOSURE 150-200HP
90	8.17 DECAL GROUP
96	8.18 DECAL LOCATIONS- OPEN AIR-COOLED
98	8.19 ENCLOSURE DECALS
100	8.20 DECAL LOCATIONS- CONTROL BOX
102	8.21 WIRING DIAGRAM- LS16T AIR-COOLED SUPERVISOR II DELUXE
103	8.22 WIRING DIAGRAM- LS16T AIR-COOLED SSRV/ VFD COOLING FAN



# Section 1 SAFETY

## 1.1 GENERAL

Sullair Corporation and its subsidiaries design and manufacture all of their products so they can be operated safely. However, the responsibility for safe operation rests with those who use and maintain these products. The following safety precautions are offered as a guide which, if conscientiously followed, will minimize the possibility of accidents throughout the useful life of this equipment.

The compressor should be operated only by those who have been trained and delegated to do so, and who have read and understood this Operator's Manual. Failure to follow the instructions, procedures and safety precautions in this manual may result in accidents and injuries.

**NEVER** start the compressor unless it is safe to do so. **DO NOT** attempt to operate the compressor with a known unsafe condition. Tag the compressor and render it inoperative by disconnecting and locking out all power at source or otherwise disabling its prime mover so others who may not know of the unsafe condition cannot attempt to operate it until the condition is corrected.

Install, use and operate the compressor only in full compliance with all pertinent OSHA regulations and/or any applicable Federal, State, and Local codes, standards and regulations.

**DO NOT** modify the compressor and/or controls in any way except with written factory approval.

While not specifically applicable to all types of compressors with all types of prime movers, most of the precautionary statements contained herein are applicable to most compressors and the concepts behind these statements are generally applicable to all compressors.

## 1.2 PERSONAL PROTECTIVE EQUIPMENT

Prior to installing or operating the compressor, owners, employers and users should become familiar with, and comply with, all applicable OSHA regulations and/or any applicable Federal, State and Local codes, standards, and regulations relative to personal protective equipment, such as eye and face protective equipment, respiratory protective equipment, equipment intended to protect the extremities, protective clothing, protective shields and barriers and electrical protective equipment, as well as noise exposure administrative and/or engineering controls and/or personal hearing protective equipment.

## 1.3 PRESSURE RELEASE

**A.** Install an appropriate flow-limiting valve between

the service air outlet and the shut-off (throttle) valve, either at the compressor or at any other point along the air line, when an air hose exceeding 13mm inside diameter is to be connected to the shut-off (throttle) valve, to reduce pressure in case of hose failure, per OSHA Standard 29 CFR 1926.302(b)(7) and/or any applicable Federal, State and Local codes, standards and regulations.

**B.** When the hose is to be used to supply a manifold, install an additional appropriate flow-limiting valve between the manifold and each air hose exceeding 13mm inside diameter that is to be connected to the manifold to reduce pressure in case of hose failure.

**C.** Provide an appropriate flow-limiting valve at the beginning of each additional 23m of hose in runs of air hose exceeding 13mm inside diameter to reduce pressure in case of hose failure.

**D.** Flow-limiting valves are listed by pipe size and flow-rated. Select appropriate valves accordingly, in accordance with their manufacturer's recommendations.

**E. DO NOT** use air tools that are rated below the maximum rating of the compressor. Select air tools, air hoses, pipes, valves, filters and other fittings accordingly. **DO NOT** exceed manufacturer's rated safe operating pressures for these items.

**F.** Secure all hose connections by wire, chain or other suitable retaining device to prevent tools or hose ends from being accidentally disconnected and expelled.

**G.** Open fluid filler cap only when compressor is not running and is not pressurized. Shut down the compressor and bleed the sump (receiver) to zero internal pressure before removing the cap.

**H.** Vent all internal pressure prior to opening any line, fitting, hose, valve, drain plug, connection or other component, such as filters and line oilers, and before attempting to refill optional air line anti-icer systems with antifreeze compound.

**I.** Keep personnel out of line with and away from the discharge opening of hoses or tools or other points of compressed air discharge.

**J.** Use air at pressures less than 2.1 bar for cleaning purposes, and then only with effective chip guarding and personal protective equipment per OSHA Standard 29 CFR 1910.242 (b) and/or any applicable Federal, State, and Local codes, standards and regulations.

**K. DO NOT** engage in horseplay with air hoses as

# Section 1

## SAFETY

death or serious injury may result.

### 1.4 FIRE AND EXPLOSION

**A.** Clean up spills of lubricant or other combustible substances immediately, if such spills occur.

**B.** Shut off the compressor and allow it to cool. Then keep sparks, flames and other sources of ignition away and **DO NOT** permit smoking in the vicinity when checking or adding lubricant or when refilling air line anti-icer systems with antifreeze compound.

**C. DO NOT** permit fluids, including air line anti-icer system antifreeze compound or fluid film, to accumulate on, under or around acoustical material, or on any external surfaces of the air compressor. Wipe down using an aqueous industrial cleaner or steam clean as required. If necessary, remove acoustical material, clean all surfaces and then replace acoustical material. Any acoustical material with a protective covering that has been torn or punctured should be replaced immediately to prevent accumulation of liquids or fluid film within the material. **DO NOT** use flammable solvents for cleaning purposes.

**D.** Disconnect and lock out all power at source prior to attempting any repairs or cleaning of the compressor or of the inside of the enclosure, if any.

**E.** Keep electrical wiring, including all terminals and pressure connectors in good condition. Replace any wiring that has cracked, cut, abraded or otherwise degraded insulation, or terminals that are worn, discolored or corroded. Keep all terminals and pressure connectors clean and tight.

**F.** Keep grounded and/or conductive objects such as tools away from exposed live electrical parts such as terminals to avoid arcing which might serve as a source of ignition.

**G.** Remove any acoustical material or other material that may be damaged by heat or that may support combustion and is in close proximity, prior to attempting weld repairs.

**H.** Keep suitable fully charged Class BC or ABC fire extinguisher or extinguishers nearby when servicing and operating the compressor.

**I.** Keep oily rags, trash, leaves, litter or other combustibles out of and away from the compressor.

**J. DO NOT** operate the compressor without proper flow of cooling air or water or with inadequate flow of lubricant or with degraded lubricant.

**K. DO NOT** attempt to operate the compressor in any classification of hazardous

environment unless the compressor has been specially designed and manufactured for that duty.

### 1.5 MOVING PARTS

**A.** Keep hands, arms and other parts of the body and also clothing away from couplings, fans and other moving parts.

**B. DO NOT** attempt to operate the compressor with the fan, coupling or other guards removed.

**C.** Wear snug-fitting clothing and confine long hair when working around this compressor, especially when exposed to hot or moving parts.

**D.** Keep access doors, if any, closed except when making repairs or adjustments.

**E.** Make sure all personnel are out of and/or clear of the compressor prior to attempting to start or operate it.

**F.** Disconnect and lock out all power at source and verify at the compressor that all circuits are de-energized to minimize the possibility of accidental start-up, or operation, prior to attempting repairs or adjustments. This is especially important when compressors are remotely controlled.

**G.** Keep hands, feet, floors, controls and walking surfaces clean and free of fluid, water or other liquids to minimize the possibility of slips and falls.

### 1.6 HOT SURFACES, SHARP EDGES AND SHARP CORNERS

**A.** Avoid bodily contact with hot fluid, hot coolant, hot surfaces and sharp edges and corners.

**B.** Keep all parts of the body away from all points of air discharge.

**C.** Wear personal protective equipment including gloves and head covering when working in, on or around the compressor.

**D.** Keep a first aid kit handy. Seek medical assistance promptly in case of injury. **DO NOT** ignore small cuts and burns as they may lead to infection.

### 1.7 TOXIC AND IRRITATING SUBSTANCES

**A. DO NOT** use air from this compressor for respiration (breathing) except in full compliance with OSHA Standards 29 CFR 1910 and/or any applicable Federal, State or Local codes or regulations.



Death or serious injury can result from inhaling compressed air without using proper safety equipment. See OSHA standards and/or any applicable Federal, State, and Local codes, standards and regulations on safety equipment.

# Section 1 SAFETY

**B. DO NOT** use air line anti-icer systems in air lines supplying respirators or other breathing air utilization equipment and **DO NOT** discharge air from these systems into unventilated or other confined areas.

**C.** Operate the compressor only in open or adequately ventilated areas.

**D.** Locate the compressor or provide a remote inlet so that it is not likely to ingest exhaust fumes or other toxic, noxious or corrosive fumes or substances.

**E.** Coolants and lubricants used in this compressor are typical of the industry. Care should be taken to avoid accidental ingestion and/or skin contact. In the event of ingestion, seek medical treatment promptly. Wash with soap and water in the event of skin contact. Consult Material Safety Data Sheet for information pertaining to fluid of fill.

**F.** Wear goggles or a full face shield when adding antifreeze compound to air line anti-icer systems.

**G.** If air line anti-icer system antifreeze compound enters the eyes or if fumes irritate the eyes, they should be washed with large quantities of clean water for fifteen minutes. A physician, preferably an eye specialist, should be contacted immediately.

**H. DO NOT** store air line anti-icer system antifreeze compound in confined areas.

**I.** The antifreeze compound used in air line antifreeze systems contains methanol and is toxic, harmful or fatal if swallowed. Avoid contact with the skin or eyes and avoid breathing the fumes. If swallowed, induce vomiting by administering a tablespoon of salt, in each glass of clean, warm water until vomit is clear, then administer two teaspoons of baking soda in a glass of clean water. Have patient lay down and cover eyes to exclude light. Call a physician immediately.

## 1.8 ELECTRICAL SHOCK

**A.** This compressor should be installed and maintained in full compliance with all applicable Federal, State and Local codes, standards and regulations, including those of the National Electrical Code, and also including those relative to equipment grounding conductors, and only by personnel that are trained, qualified and delegated to do so.

**B.** Keep all parts of the body and any hand-held tools or other conductive objects away from exposed live parts of electrical system. Maintain dry footing, stand on insulating surfaces and **DO NOT** contact any other portion of the compressor when

making adjustments or repairs to exposed live parts of the electrical system. Make all such adjustments or repairs with one hand only, so as to minimize the possibility of creating a current path through the heart.

**C.** Attempt repairs in clean, dry and well lighted and ventilated areas only.

**D. DO NOT** leave the compressor unattended with open electrical enclosures. If necessary to do so, then disconnect, lock out and tag all power at source so others will not inadvertently restore power.

**E.** Disconnect, lock out, and tag all power at source prior to attempting repairs or adjustments to rotating machinery and prior to handling any ungrounded conductors.

## 1.9 LIFTING

**A.** If the compressor is provided with a lifting bail, then lift by the bail provided. If no bail is provided, then lift by sling. Compressors to be air-lifted by helicopter must not be supported by the lifting bail but by slings instead. In any event, lift and/or handle only in full compliance with OSHA standards 29 CFR 1910 subpart N and/or any applicable Federal, State, and Local codes, standards and regulations.

**B.** Inspect points of attachment for cracked welds and for cracked, bent, corroded or otherwise degraded members and for loose bolts or nuts prior to lifting.

**C.** Make sure entire lifting, rigging and supporting structure has been inspected, is in good condition and has a rated capacity of at least the weight of the compressor. If you are unsure of the weight, then weigh compressor before lifting.

**D.** Make sure lifting hook has a functional safety latch or equivalent, and is fully engaged and latched on the bail or slings.

**E.** Use guide ropes or equivalent to prevent twisting or swinging of the compressor once it has been lifted clear of the ground.

**F. DO NOT** attempt to lift in high winds.

**G.** Keep all personnel out from under and away from the compressor whenever it is suspended.

**H.** Lift compressor no higher than necessary.

**I.** Keep lift operator in constant attendance whenever compressor is suspended.

**J.** Set compressor down only on a level surface capable of safely supporting at least its weight and its loading unit.

# Section 1

## SAFETY

**K.** When moving the compressor by forklift truck, utilize fork pockets if provided. Otherwise, utilize pallet if provided. If neither fork pockets or pallet are provided, then make sure compressor is secure and well balanced on forks before attempting to raise or transport it any significant distance.

**L.** Make sure forklift truck forks are fully engaged and tipped back prior to lifting or transporting the compressor.

**M.** Forklift no higher than necessary to clear obstacles at floor level and transport and corner at minimum practical speeds.

**N.** Make sure pallet-mounted compressors are firmly bolted or otherwise secured to the pallet prior to attempting to forklift or transport them. **NEVER**

attempt to forklift a compressor that is not secured to its pallet, as uneven floors or sudden stops may cause the compressor to tumble off, possibly causing serious injury or property damage in the process.

### 1.10 ENTRAPMENT

**A.** If the compressor enclosure, if any, is large enough to hold a man and if it is necessary to enter it to perform service adjustments, inform other personnel before doing so, or else secure and tag the access door in the open position to avoid the possibility of others closing and possibly latching the door with personnel inside.

**B.** Make sure all personnel are out of compressor before closing and latching enclosure doors.

## Section 2 DESCRIPTION

### 2.1 INTRODUCTION

Your new Sullair lubricated rotary screw air compressor will provide you with a unique experience in improved reliability and greatly reduced maintenance.

Compared to other types of compressors, the Sullair rotary screw is unique in mechanical reliability, with minimal wear and no inspection required of the working parts within the compressor unit.

Read Section 6 (Maintenance) to see how to keep your air compressor in top operating condition. Should any questions arise which cannot be answered in the following text, call your nearest Sullair representative or the Sullair Corporation Service Department.

### 2.2 DESCRIPTION OF COMPONENTS

Refer to Figures 2-1. The components and assemblies of the air compressor are clearly shown. The complete package includes **compressor**, **electric**


**motor**, **compressor inlet system**, **compressor discharge system**, **compressor cooling and lubrication system**, **capacity control system** and "**Supervisor II Control System**" all mounted on a structural steel frame.

On air-cooled models, the cooling package is mounted within the package. The separate motor-driven fan cooling package forces air through the coolers, which removes the heat of compression from the cooling fluid.

### 2.3 SULLAIR COMPRESSOR UNIT, FUNCTIONAL DESCRIPTION

Sullair air compressors feature the Sullair compressor unit, a two-stage, positive displacement, lubricated-type compressor. This unit provides continuous pulse-free air compression to meet your needs. With a Sullair compressor, there is no maintenance or inspection of the internal parts of the compressor unit permitted in accordance with the terms of the

Figure 2-1 Sullair Series LS16T Rotary Screw Compressor- Air-cooled (Typical)

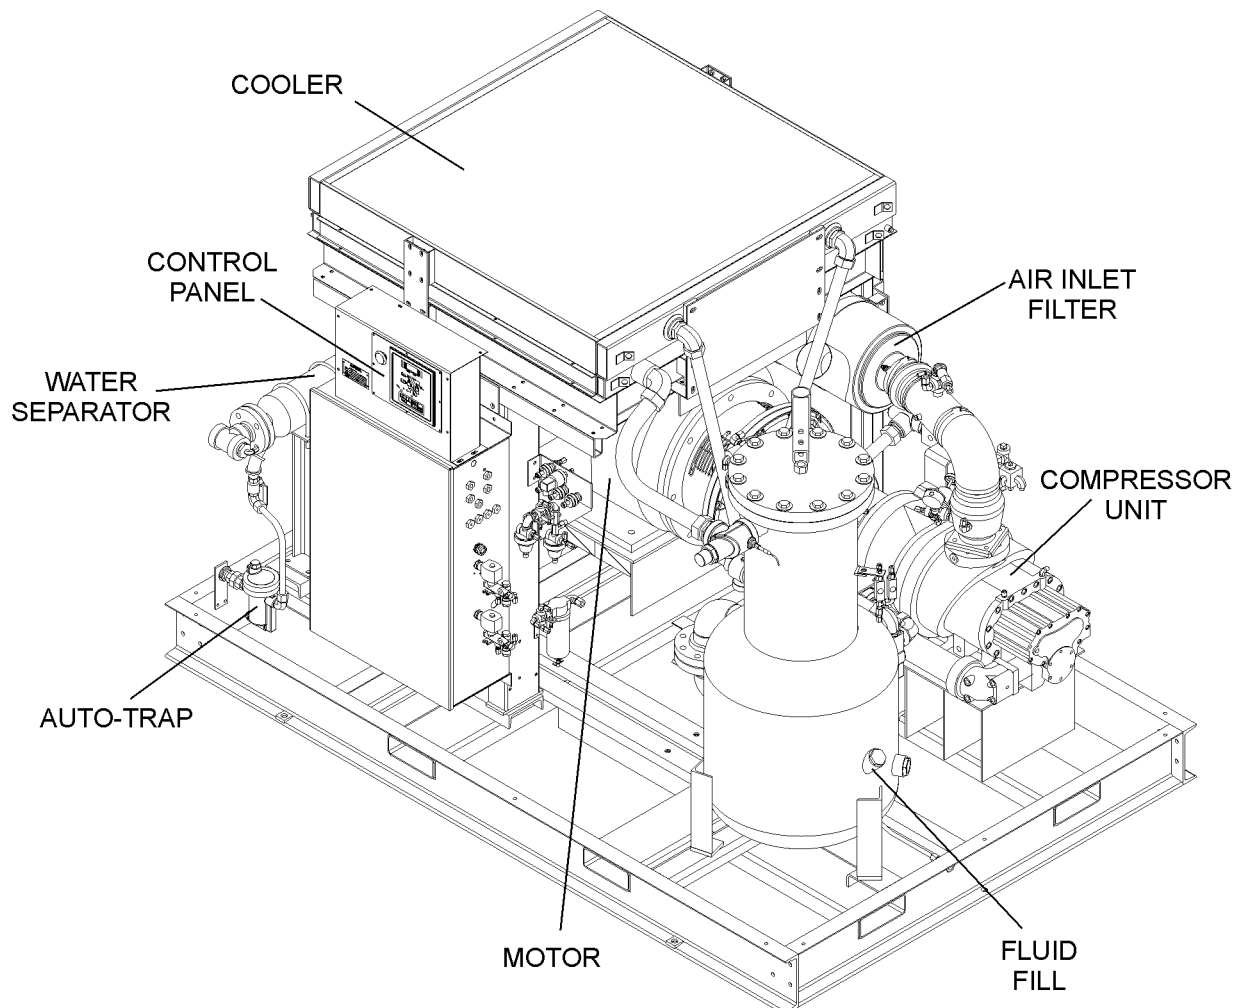

## Section 2 DESCRIPTION

warranty.

Fluid is injected into the compressor unit at each stage, and mixes directly with the air as the rotors turn, compressing the air. The fluid flow has three main functions:

- As coolant, it controls the rise of air temperature normally associated with the heat of compression.
- Seals between the rotors and the stator and also between the rotors themselves.
- Acts as a lubricating film between the rotors allowing one rotor to directly drive the other, which is an idler.

After the air/fluid mixture is discharged from the compressor unit, the fluid is separated from the air. At this time, the air flows to the service line and the fluid is cooled in preparation for reinjection.

### 2.4 COMPRESSOR COOLING AND LUBRICATION SYSTEM, FUNCTIONAL DESCRIPTION

Refer to Figures 2-2, 2-3A and 2-3B. The cooling


and lubrication system consists of a fluid cooler, aftercooler, full flow fluid filters, fluid stop valve, thermal valve and interconnection piping. For water-cooled models, a shell and tube fluid cooler and aftercooler are mounted on the compressor package. For air-cooled models, they are radiator-type coolers, and are mounted on the compressor package.

The pressure in the receiver/sump causes fluid flow by forcing the fluid from the high pressure area of the sump to an area of lower pressure in the compressor unit.

Fluid flows from the bottom of the receiver/sump to the thermal valve. The thermal valve bypass is fully open when the discharge temperature is below 220°F (104.4°C). The fluid passes through the thermal valve, the main fluid filter and directly to the compressor unit, thus feeding the bearings, seals and rotor area.

As the discharge temperature rises above 220°F (104.4°C), due to the heat of compression, the

Figure 2-2 Compressor Cooling, Lubrication and Discharge System

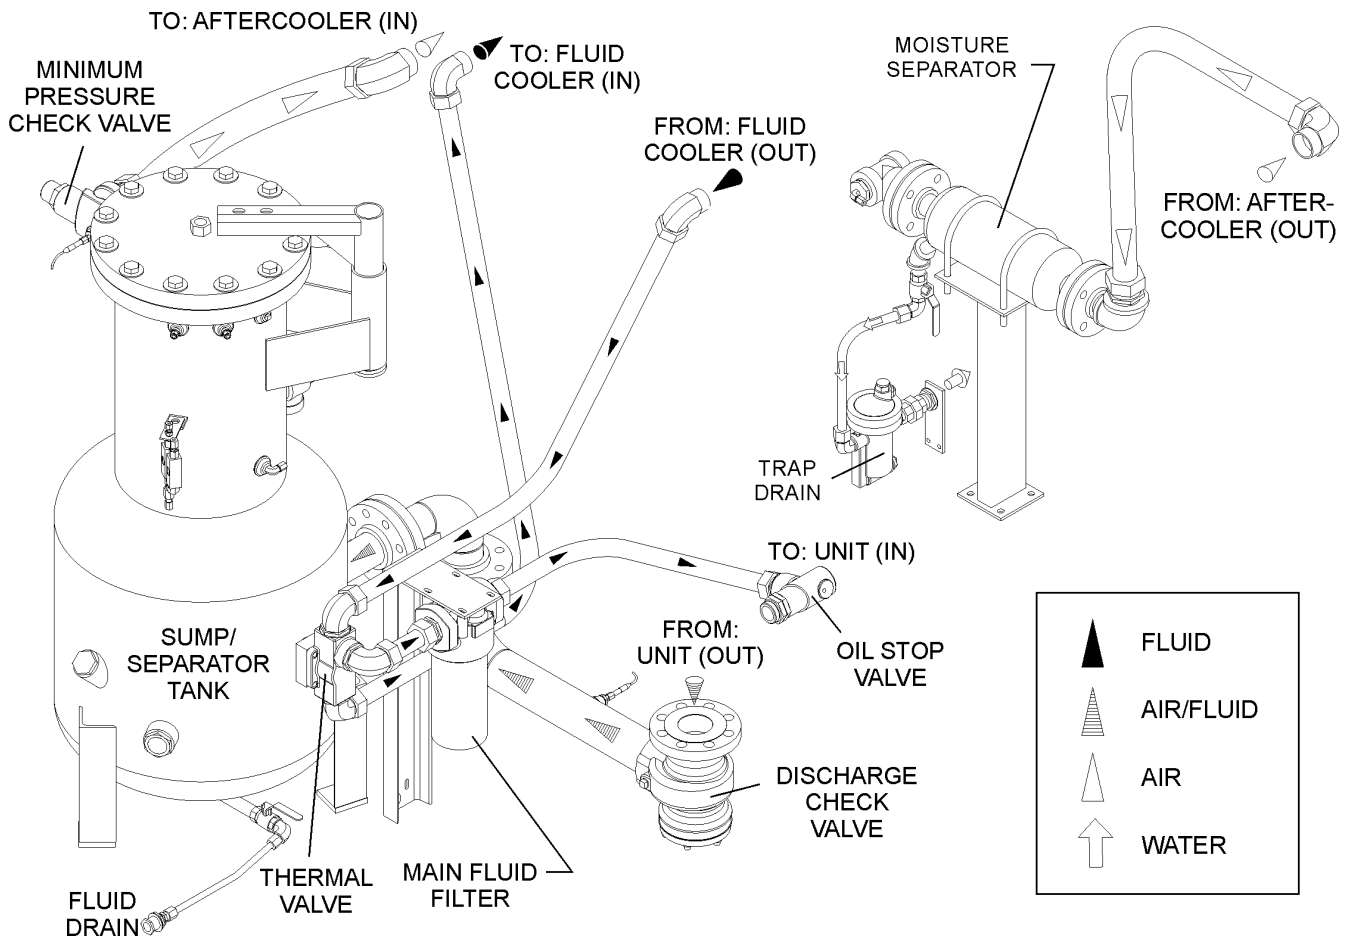

## Section 2 DESCRIPTION

thermal valve bypass begins to close and a portion of the fluid then flows through the cooler. From the cooler, the fluid flows to the main filter and on to the compressor unit. The fluid filter has a replacement element and an integral pressure bypass valve.

The fluid stop valve prevents fluid from filling the compressor unit when the compressor is shut down. When the compressor is operating, the fluid stop valve is held open by air pressure from the compressor unit allowing a free flow of fluid from the receiver/sump back to the compressor unit. On shutdown, the compressor unit pressure is reduced, causing the fluid stop valve to close and isolate the compressor unit from the cooling system.

### 2.5 COMPRESSOR DISCHARGE SYSTEM, FUNCTIONAL DESCRIPTION

Refer to Figures 2-2, 2-3A and 2-3B. The compressor unit discharges the compressed air/fluid moisture through a discharge check valve into the combination receiver/sump. The discharge check valve prevents air in the receiver from returning to the compression chamber after the compressor has been shut down. The receiver has three functions:

- It acts as a primary fluid separator.
- Serves as the compressor fluid sump.
- Houses the final fluid separator elements.

The compressed air/fluid mixture enters the receiver and is directed against the ends of the tank. The direction of movement is changed and its velocity significantly reduced, thus causing large droplets of fluid to form and fall to the bottom of the receiver/sump. The fractional percentage of fluid remaining in the compressed air collects on the surfaces of the dual separator elements as the compressed air flows through them. Two return lines (or scavenge tubes) lead from the bottom of each separator element to the interstage of the compressor unit. Fluid collecting on the bottom of each separator is returned to the compressor by a pressure difference between the receiver and the compressor. Sight glasses are located in the return lines to observe this fluid flow. There are also orifices in this return line (protected by strainers) to assure proper flow. By pressing the dP1 pad on the Supervisor II, the operator may monitor the condition of the separator elements by reading differential pressure on the digital display. At a differential of 10 psid (0.7 bar) or greater, the operator will be told to service the separator element. At this time, separator element replacement is necessary.

The receiver is an ASME pressure vessel. A combi-

nation minimum pressure/check valve, located downstream from the separator, assures a minimum receiver pressure of 160 psig (11bar) during full load operation. This pressure is necessary for proper air/fluid separation and proper fluid circulation while supplying air to the system. This valve also acts as a check valve preventing compressed air in the service line from bleeding back into the receiver on shutdown and during operation on the compressor in an unloaded condition.

A pressure relief valve (located on the wet side of the separator) is set to open at rated tank pressure.

The compressor is also equipped with high pressure shutdown protection to shut down at high MAX P1 setpoint. This prevents the relief valve from opening. High temperature probes are provided to shut down the compressor.



**DO NOT** remove caps, plugs, and/or other components when compressor is running or pressurized.

**Stop compressor and relieve all internal pressure before doing so.**

Fluid is added to the sump via a capped fluid filler opening, located on the tank to prevent overfilling of the sump. A sight glass enables the operator to visually monitor the sump fluid level.

### 2.6 CAPACITY CONTROL SYSTEM, FUNCTIONAL DESCRIPTION


Refer to Figures 2-3A, 2-3B, 2-4A, 2-4B, 2-4C, 2-4D and 2-4E. The purpose of the compressor control system is to regulate the compressor air intake to match the amount of compressed air being utilized. At 0 to 10 percent air output, the control system will automatically unload the compressor and reduce power consumption. The unload sump pressure can be set using the unload control regulator valve (140-175 psig).

The **Control System** consists of an **inlet poppet valve, blowdown solenoid valve, pneumatic blowdown valve, control pressure regulator, unload pressure regulator, sequencing solenoid valve, and a control line filter** located prior to the controls.

The functional description of the Control System is described below in five distinct phases of the compressor operation. For explanation purposes, this description will apply to compressors with an operating range of 350 to 360 psig (24.1 to 24.8 bar). A compressor with any other pressure range would operate in a similar manner except for the stated



# Section 2 DESCRIPTION

Figure 2-3A Compressor Piping and Instrumentation Diagram- LS16T 100/125 Air-cooled

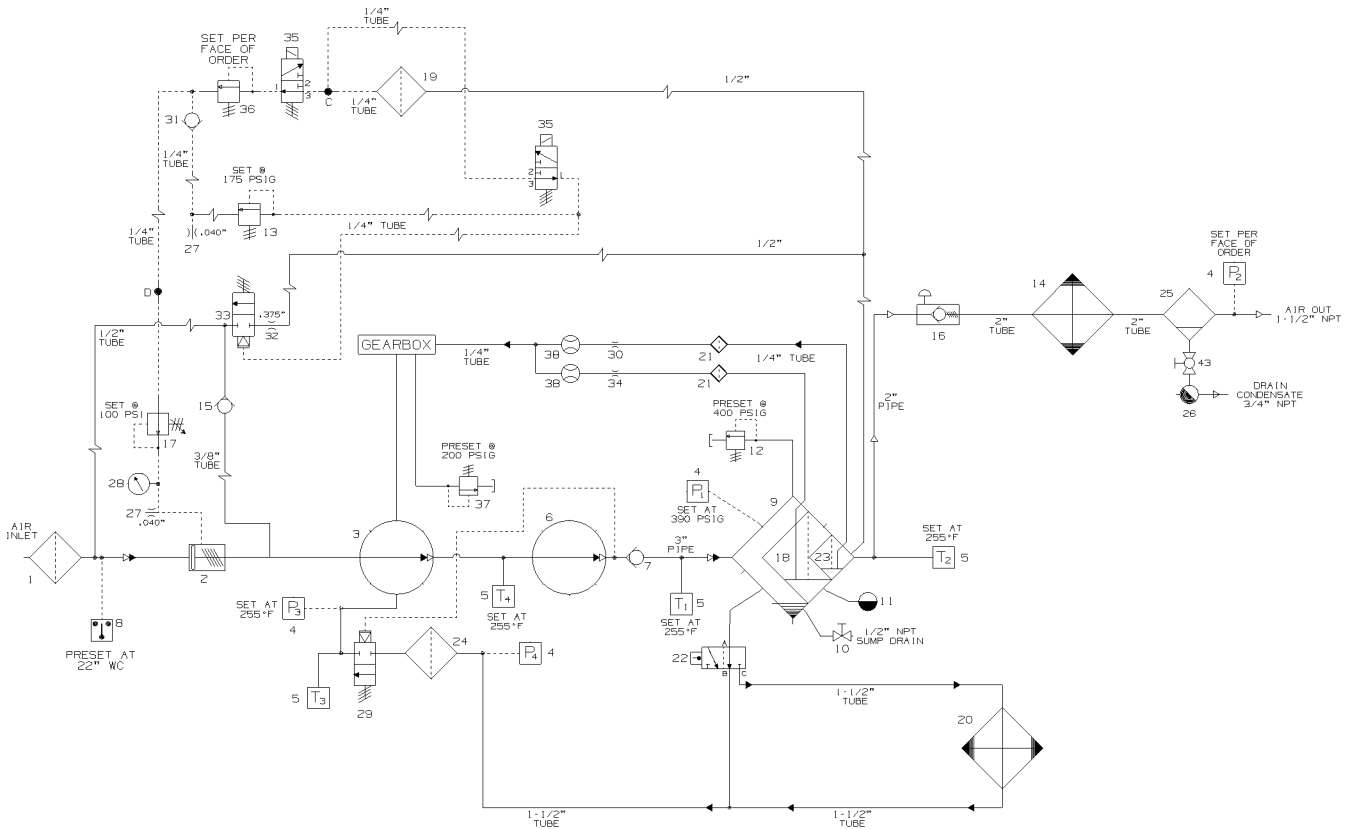

NOTES :

1. PART NUMBERS ARE FOR REFERENCE ONLY, REFER TO BILL OF MATERIAL AND/OR FACE OF ORDER FOR ACTUAL PARTS.
2. ADD CLOSED INLET INTO APPROPRIATE CONNECTION POINTS (C & D).
3. HEAT TRACE OPTIONAL.

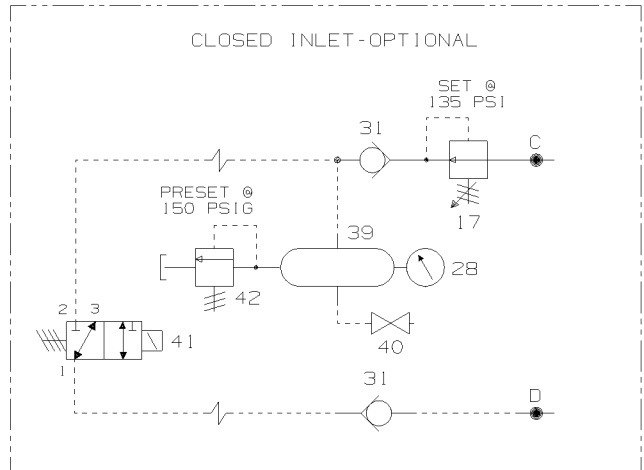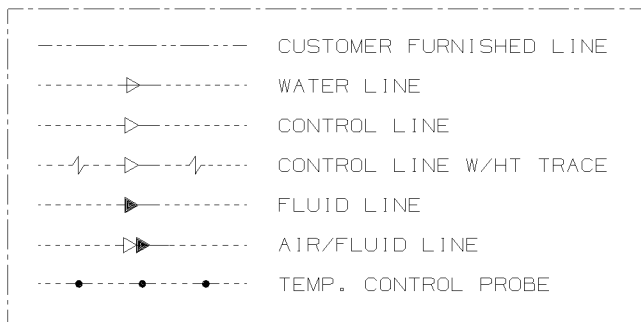

## Section 2 DESCRIPTION


Figure 2-3A Compressor Piping and Instrumentation Diagram- LS16T 100/125 Air-cooled

<b>key number</b>	<b>description</b>	<b>part number</b>	<b>quantity</b>
1	filter, air	02250059-096	1
2	valve, poppet	02250083-783	1
3	compressor, 1st stage unit		1
4	xdcr, press 0-500# 1-5vdc n4	02250085-652	4
5	p, rtd 100 ohm	250039-909	4
6	compressor, 2nd stage unit		1
7	valve, discharge check	016732B	1
8	sw,vac 22"wc n4 6' cable	02250078-249	1
9	tank, sump	02250134-216	1
10	valve, ball 3/4"	02250117-792	2
11	glass, sight	02250097-611	1
12	valve, relief-400 psi	02250137-688	1
13	valve, pressure regulator	045099	1
14	aftercooler, air	02250138-182	1
15	valve,check 1/2"	042694	1
16	valve, minimum pressure	250022-735	1
17	regulator, down stream	046556	2
18	element, separator primary	250034-115	1
19	fltr, coalescing 425#	02250058-442	1
20	cooler, oil	02250138-183	1
21	strainer, oil return	02250117-782	2
22	element, thermal vlv 220 degf	250001-349	1
23	element, separator secondary	250042-861	1
24	filter, oil injection	02250121-658	1
25	separator, water	250001-873	1
26	trap, drain	250006-639	1
27	orifice, .040" 1/4"m x 1/4"f	02250091-395	2
28	gauge, pressure	02250117-009	2
29	valve, oil stop	02250113-668	1
30	orifice, 0.032"	02250125-774	1
31	valve, check 1/4" - viton seat	02250110-557	3
32	restrictor, pipe .375" dia	866406-000	1
33	valve, running blowdown n.c.	045116	1
34	orifice, .063"	02250125-775	1
35	valve, solenoid 3-way n.o.	407390	2

(Continued on page 11)



# Section 2 DESCRIPTION

Figure 2-3A Compressor Piping and Instrumentation Diagram- LS16T 100/125 Air-cooled

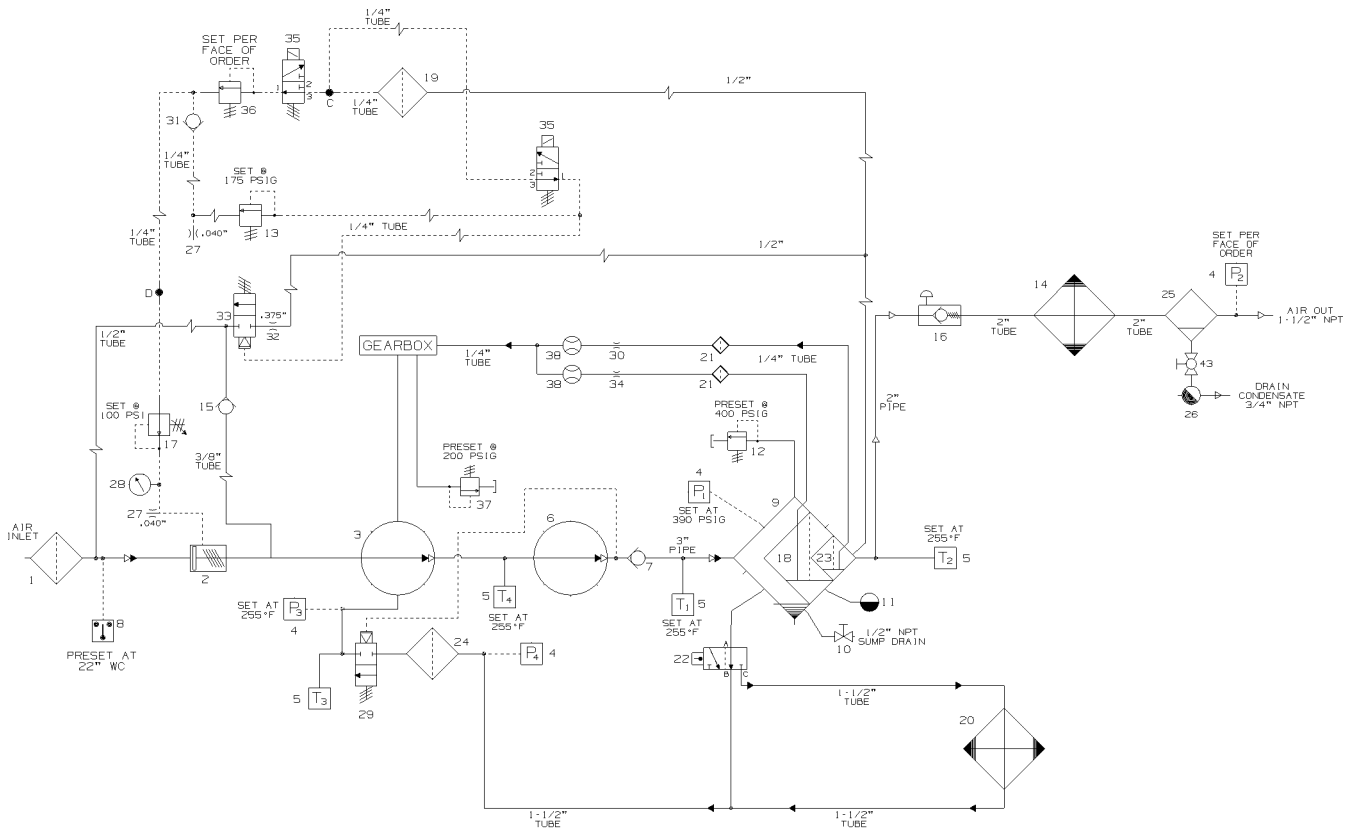

NOTES:

1. PART NUMBERS ARE FOR REFERENCE ONLY, REFER TO BILL OF MATERIAL AND/OR FACE OF ORDER FOR ACTUAL PARTS.
2. ADD CLOSED INLET INTO APPROPRIATE CONNECTION POINTS (C & D).
3. HEAT TRACE OPTIONAL.

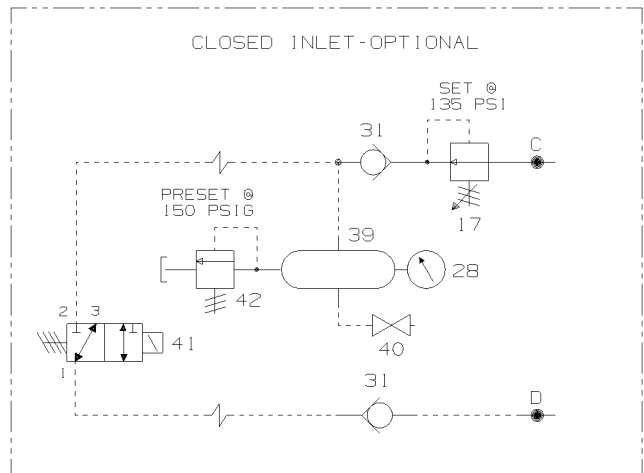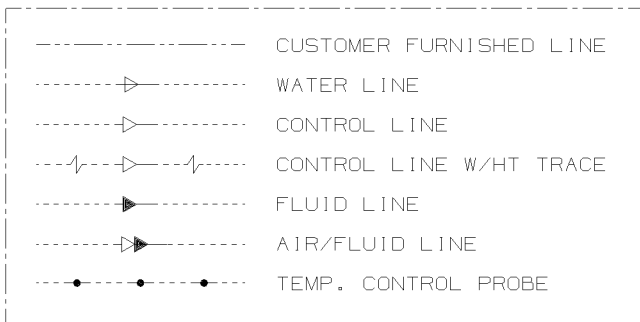


## Section 2 DESCRIPTION

Figure 2-3A Compressor Piping and Instrumentation Diagram- LS16T 100/125 Air-cooled (Continued)

<b>key number</b>	<b>description</b>	<b>part number</b>	<b>quantity</b>
36	regulator, back pressure	048059	1
37	valve, relief gearbox-200psi	250039-222	1
38	glass, sight	02250126-129	2
39	accumulator, closed inlet	02250057-463	1
40	valve, drain-self close	041111	1
41	accumulator, closed inlet	02250125-665	1
42	valve, pressure relief 150#	02250092-138	1
43	vlv, ball 3/4"npt	02250117-792	1



# Section 2 DESCRIPTION

Figure 2-3B Compressor Piping and Instrumentation Diagram- LS16T 150/200 Air-cooled

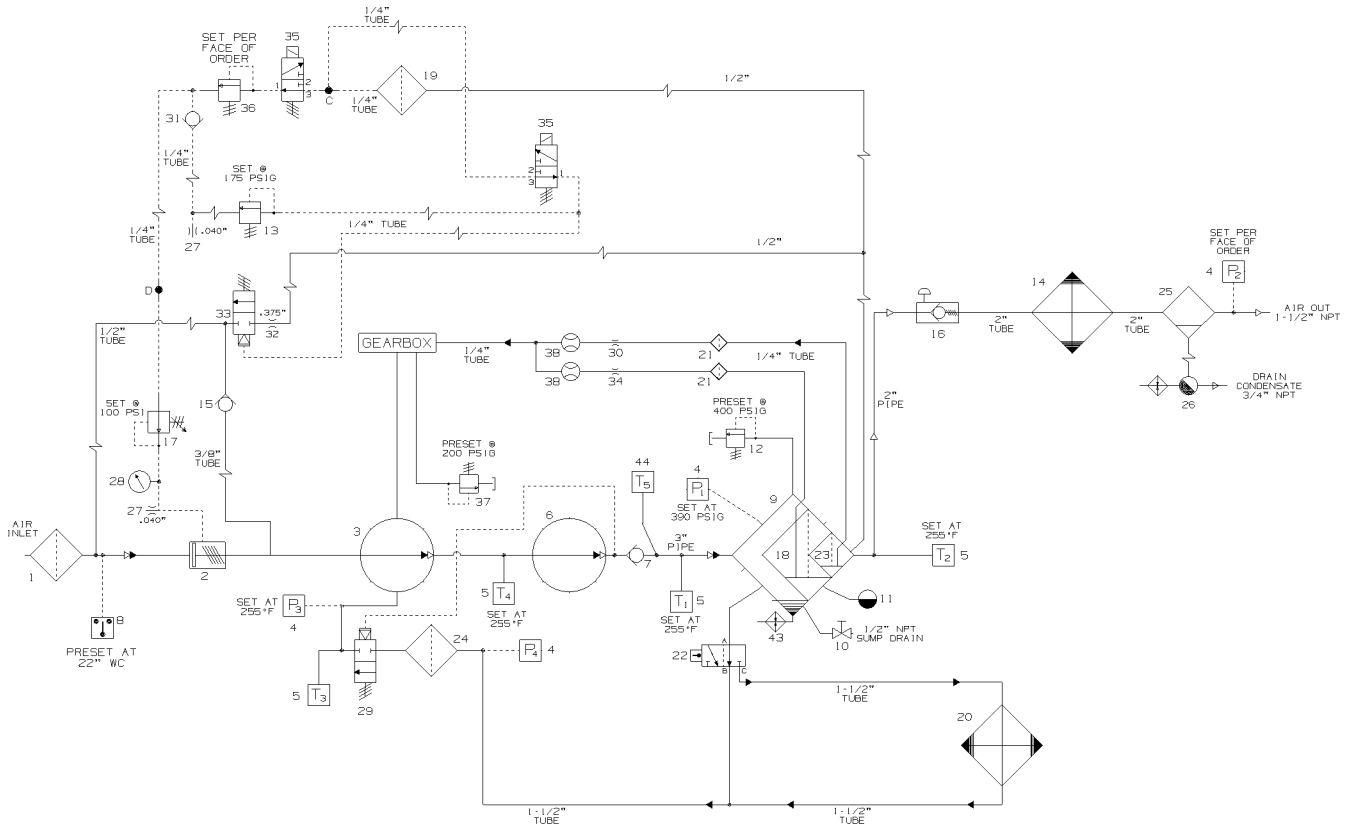

NOTES :

1. PART NUMBERS ARE FOR REFERENCE ONLY, REFER TO BILL OF MATERIAL AND/OR FACE OF ORDER FOR ACTUAL PARTS.
2. ADD CLOSED INLET INTO APPROPRIATE CONNECTION POINTS (C & D).
3. HEAT TRACE OPTIONAL.

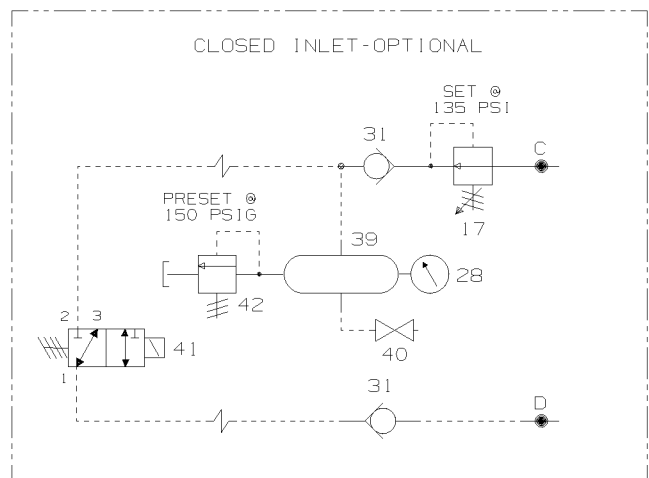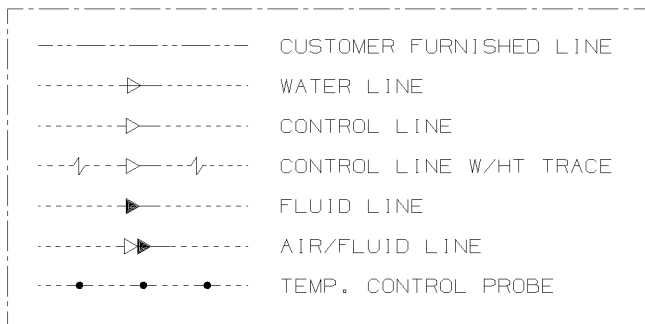

## Section 2 DESCRIPTION


Figure 2-3B Compressor Piping and Instrumentation Diagram- LS16T 150/200 Air-cooled

<b>key number</b>	<b>description</b>	<b>part number</b>	<b>quantity</b>
1	filter, air	02250059-096	1
2	valve, poppet	02250083-783	1
3	compressor, 1st stage unit		1
4	xdcr,press 0-500# 1-5vdc n4	02250085-652	4
5	p,rtd 100 ohm 20' leads w/htr	02250087-687	4
6	compressor, 2nd stage unit		1
7	valve, discharge check	016732B	1
8	sw,vac 22"wc n4 6' cable	02250078-249	1
9	tank, sump	02250134-216	1
10	valve, ball 3/4"	02250117-792	2
11	glass, sight	02250097-611	1
12	valve, relief-400 psi	02250137-688	1
13	valve, pressure regulator	045099	1
14	aftercooler, air	250008-938	1
15	valve,check 1/2"	042694	1
16	valve, minimum pressure	250022-735	1
17	regulator, down stream	046556	2
18	element, separator primary	250034-115	1
19	fltr, coalescing 425#	02250058-442	1
20	cooler, oil	02250135-021	1
21	strainer, oil return	02250117-782	2
22	element,thermal vlv 220 degf	250001-349	1
23	element, separator secondary	250042-861	1
24	filter, oil injection	02250121-658	1
25	separator, water	250001-873	1
26	trap, drain	250006-639	1
27	orifice, .040" 1/4"m x 1/4"f	02250091-395	2
28	gauge, pressure	02250117-009	2
29	valve, oil stop	02250113-668	1
30	orifice, 0.032"	02250125-774	1
31	valve, check 1/4" - viton seat	02250110-557	3
32	restrictor, pipe .375" dia	866406-000	1
33	valve, running blowdown n.c.	045116	1
34	orifice, .063"	02250125-775	1
35	valve, solenoid 3-way n.o.	407390	2

(Continued on page 15)



# Section 2 DESCRIPTION

Figure 2-3B Compressor Piping and Instrumentation Diagram- LS16T 150/200 Air-cooled

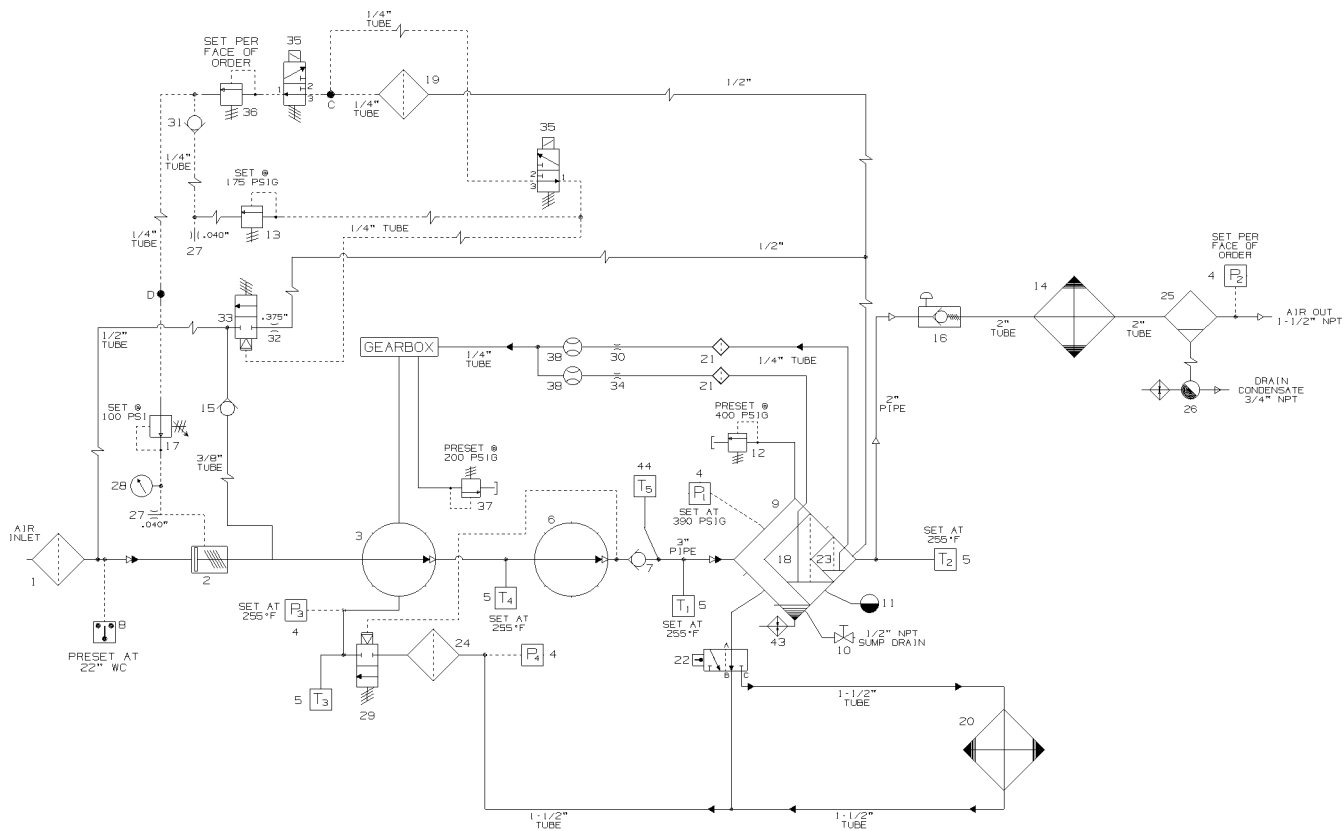

NOTES:

1. PART NUMBERS ARE FOR REFERENCE ONLY, REFER TO BILL OF MATERIAL AND/OR FACE OF ORDER FOR ACTUAL PARTS.
2. ADD CLOSED INLET INTO APPROPRIATE CONNECTION POINTS (C & D).
3. HEAT TRACE OPTIONAL.

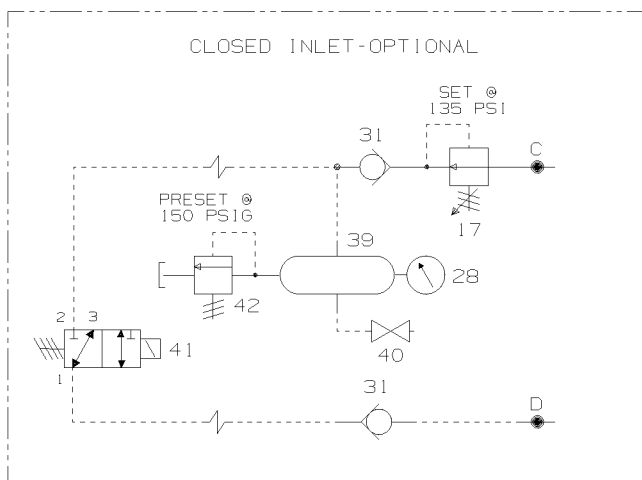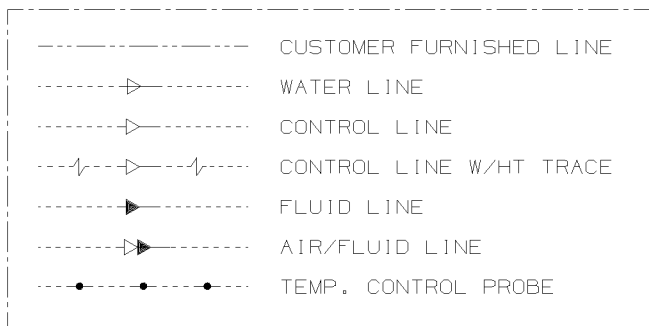

## Section 2 DESCRIPTION

Figure 2-3B Compressor Piping and Instrumentation Diagram- LS16T 150/200 Air-cooled (Continued)

<b>key number</b>	<b>description</b>	<b>part number</b>	<b>quantity</b>
36	regulator, back pressure	048059	1
37	valve, relief gearbox-200psi	250039-222	1
38	glass, sight	02250126-129	2
39	accumulator, closed inlet	02250057-463	1
40	valve, drain-self close	041111	1
41	accumulator, closed inlet	02250125-665	1
42	valve, pressure relief 150#	02250092-138	1
43	heater, sump tank	02250064-140	1
44	probe,100 ohm rtd 20'	02250044-985	1

## Section 2

# DESCRIPTION

pressures.

### **START MODE - TO 160 PSIG (11 BAR)**

When the compressor start button is depressed, the sump pressure will rise from 0 to 160 psig (0 to 11 bar). During this period, the control pressure regulator is closed at this time. The inlet poppet valve opens allowing full air flow to the compressor inlet and the sump pressure builds to approximately 160 psig (11 bar). No air is supplied to the system service line during this phase by the minimum pressure valve. When the sump pressure exceeds approximately 160 psig (11 bar), the minimum pressure valve starts to open and allows air to flow to the system service line.

### **NORMAL OPERATION MODE - 160 TO 350 PSIG (11 TO 24.1 BAR)**

When the sump pressure rises above 160 psig (11 bar), the minimum pressure valve opens and delivers compressed air to the system service line. From this point on, a line air pressure transducer continually monitors the air pressure. The modulating control regulator valve remains closed during this phase, keeping the inlet poppet valve wide open. The blowdown solenoid valve also remains closed during this phase. Flow will occur when the discharge pressure is higher than the line pressure. The check valve, which is built into the minimum pressure valve, will prevent back flow into the compressor.

### **MODULATING MODE - 350 TO 360 PSIG (24.1 TO 24.8 BAR)**

If less than the rated capacity of compressed air is being used, the system service line pressure will rise above 350 psig (24.1 bar). The modulating control regulator valve gradually opens applying air pressure to the control side of the inlet poppet valve, which modulates the position of the inlet poppet valve. This reduces the amount of air entering the compressor until it matches the amount of air being utilized. The control system functions continually in this manner, between the limits of 350 to 360 psig (24.1 to 24.8 bar) in response to varying demands from system service line. The control pressure regulator valve has an orifice, which vents a small amount of air to the atmosphere when the control pressure regulator valve modulates the inlet poppet valve.

### **UNLOAD MODE - EXCESS OF 360 PSIG (24.8 BAR)**

As the required air is reduced, the discharge pressure and line pressure rise above the 360 psig (24.8 bar), the Supervisor II activates the unload solenoid valve which in turn pressurizes the blowdown valve. This opens the blowdown valve, which allows discharge air to flow back to the compressor inlet. Since the inlet poppet valve is closed, the air pressure from the sump tank will be relieved through the blowdown valve, which will reduce the sump pressure. Some of the outgoing air will flow directly into the compressor inlet to avoid cavitation during this time of blowdown. As the sump pressure drops, motor power consumption is also reduced. The unload control regulator is set to maintain the unload pressure at a designated value of approximately 150 psig (10.3 bar). At this time, the compressor is in the unload mode.

When the line pressure drops back to the load point (cut-in pressure) of the Supervisor II, usually 350 psig (24.1 bar), the compressor will change state back to the modulating mode as discussed earlier. This cycle will repeat itself, maintaining the demand required on the system line supply.


### **SHUTDOWN MODE**

When the compressor is shut down based on a manual shutdown, a safety shutdown or an automatic shutdown from the Supervisor II touch pad, the unload solenoid valve is de-energized allowing air to flow through the check valve and into the poppet valve keeping the inlet poppet valve closed. This also opens the blowdown valve to vent compressed air through the inlet filter. The control lines are properly sized and routed to allow the compressed air to relieve to atmosphere rather than below the inlet poppet valve.

If the compressor Supervisor II controller is in the automatic mode, the compressor will shut down after running unloaded for a specific amount of time. The reverse also holds true, if the system requires additional compressed air, the compressor will start automatically to satisfy this demand.

# Section 2 DESCRIPTION


Figure 2-4A Control System Diagram- Functional Components

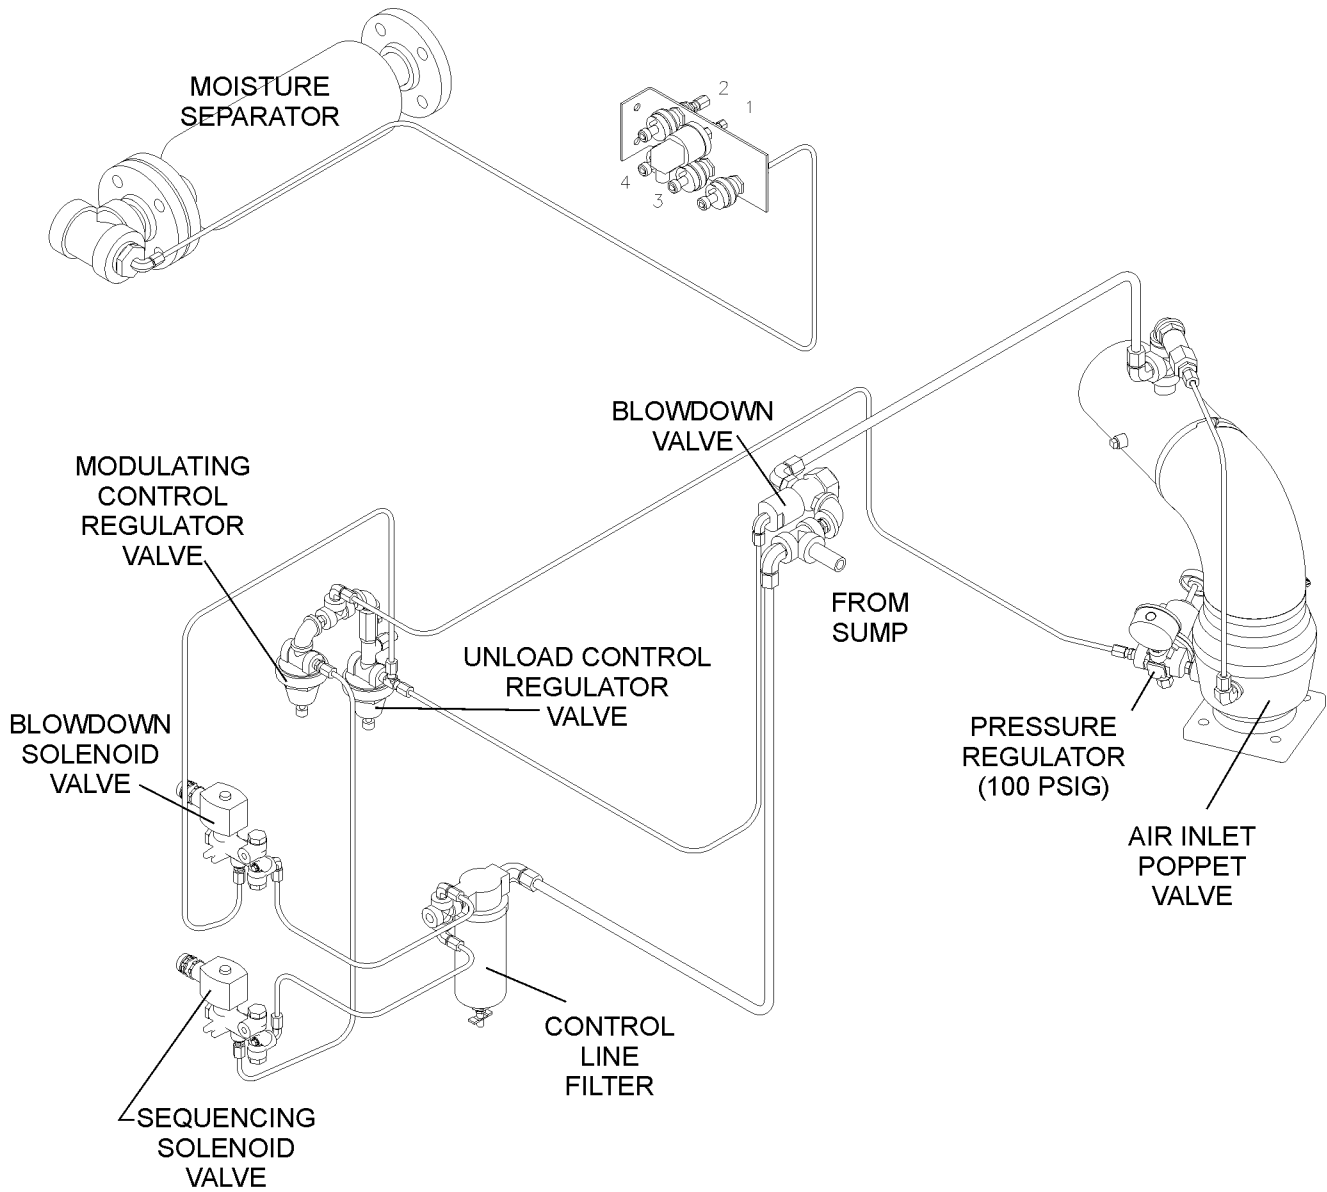




LEGEND:	
1	- TO INLET FILTER
2	- TO FLUID FILTER INLET
3	- TO WET SIDE SUMP
4	- TO UNIT FLUID INJECTION BLOCK

# Section 2 DESCRIPTION

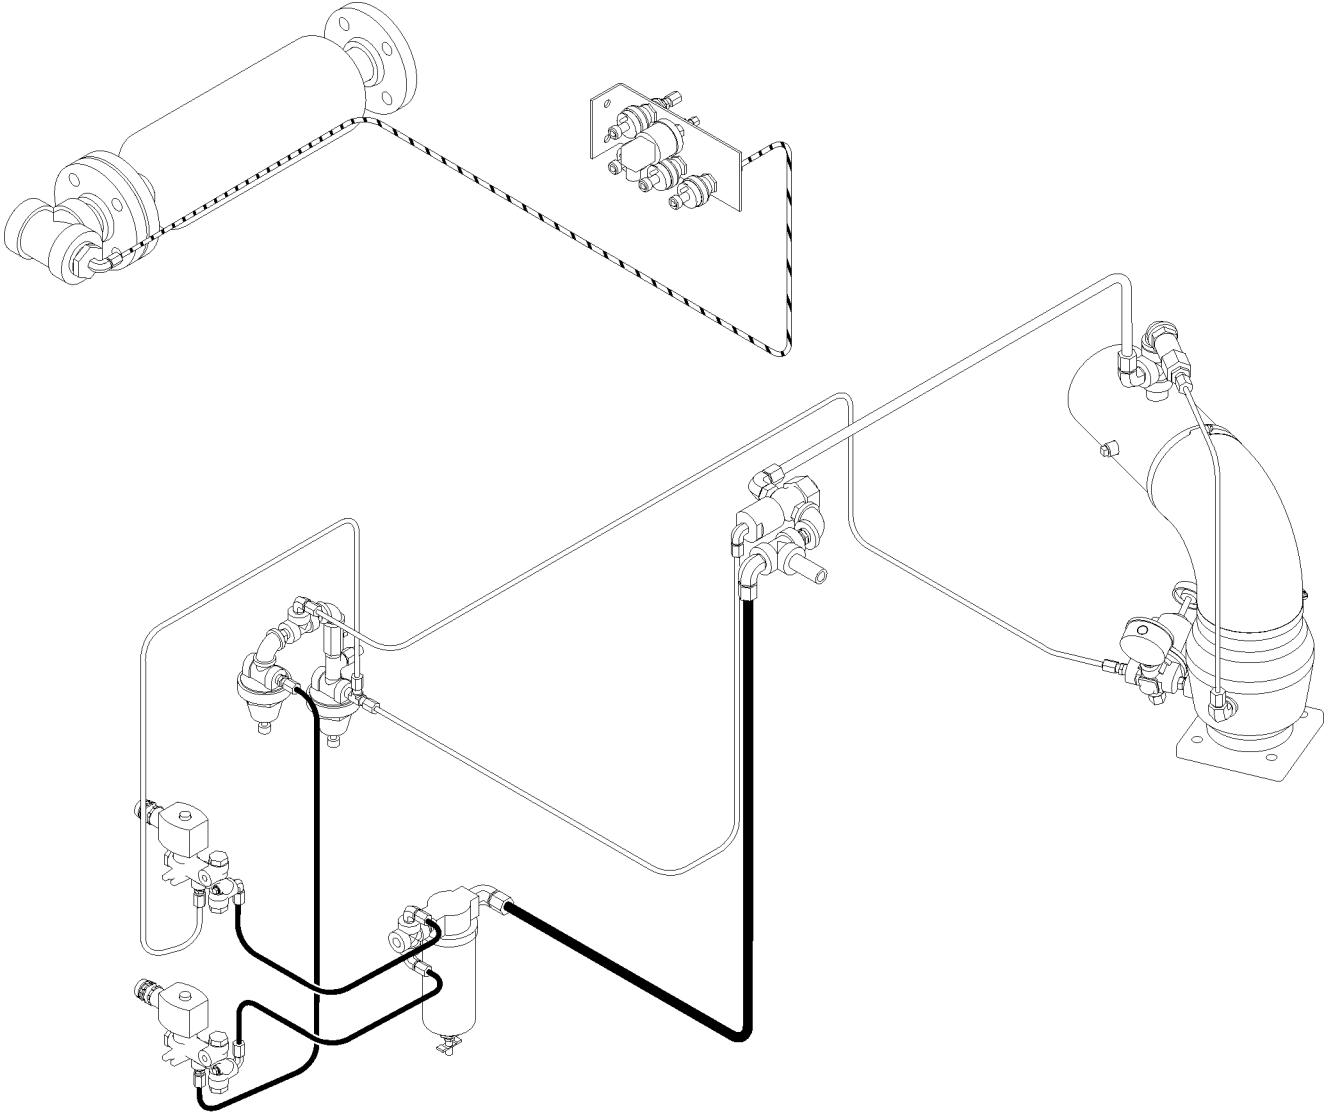
Figure 2-4B Control System Diagram- START



-  Line Pressure Air
-  Dry Side Air
-  Regulated Air


## Section 2 DESCRIPTION

 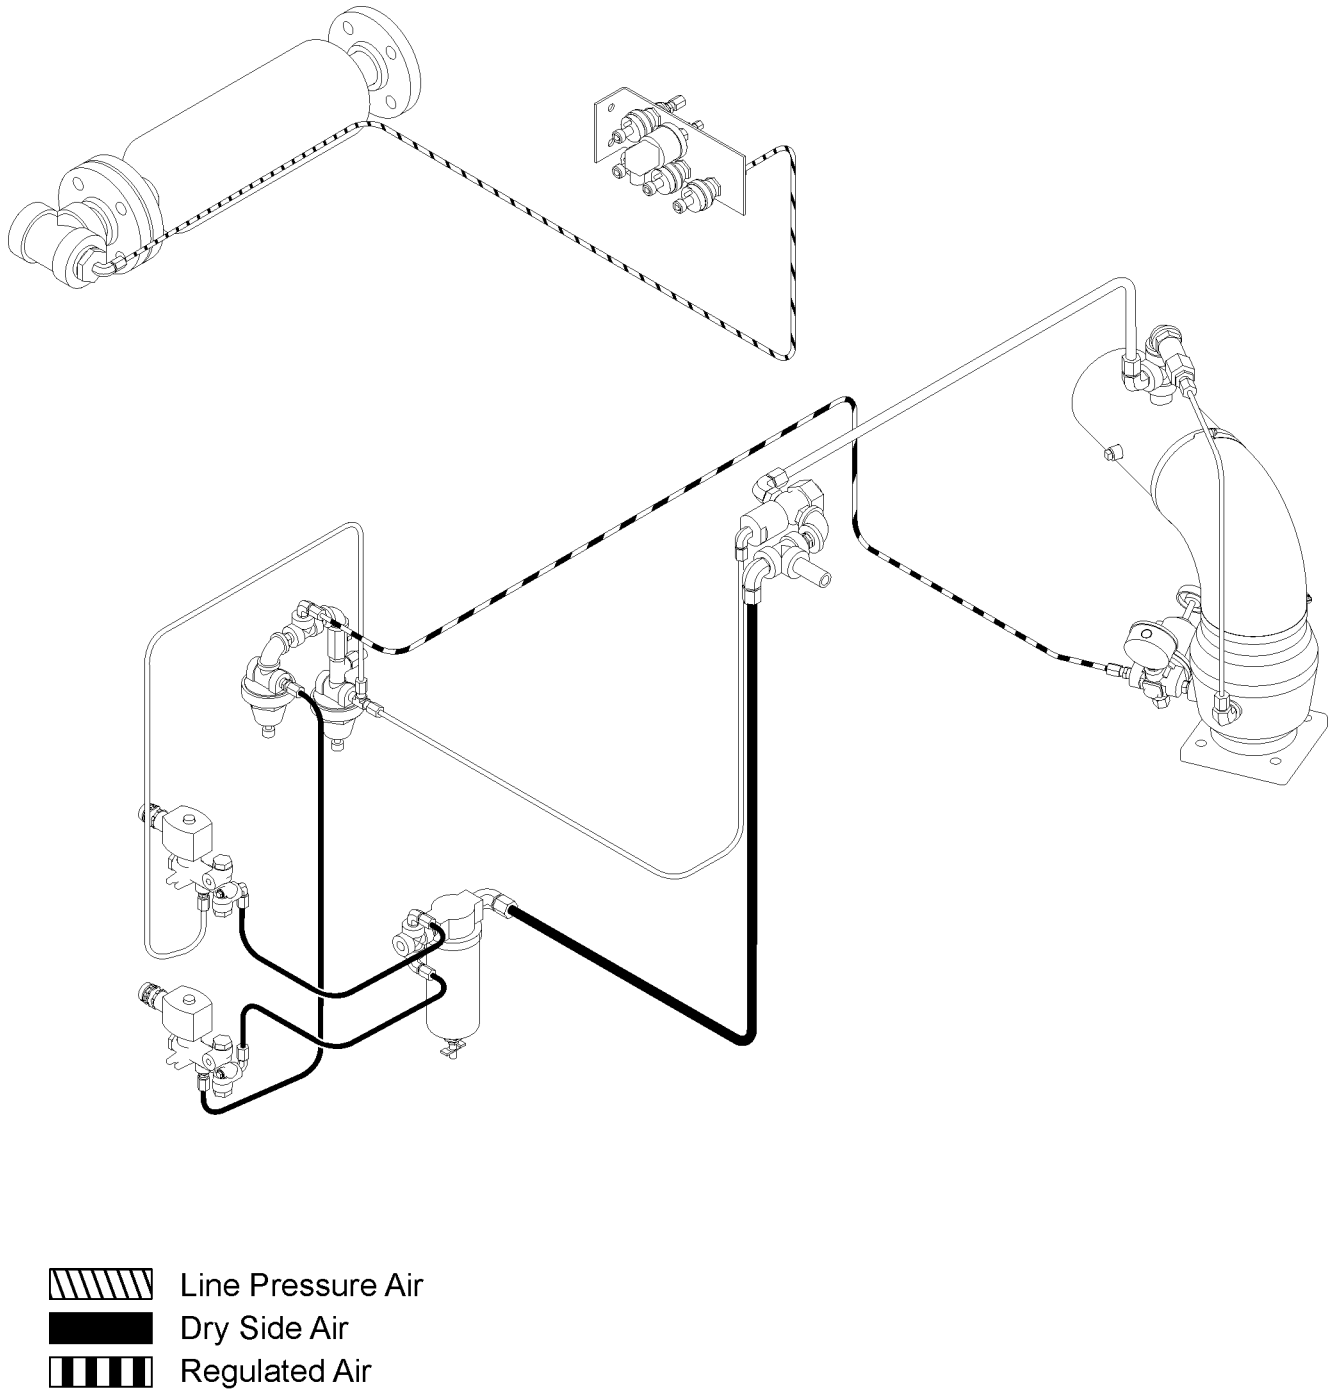


Figure 2-4C Control System Diagram- **MODULATION**



# Section 2 DESCRIPTION

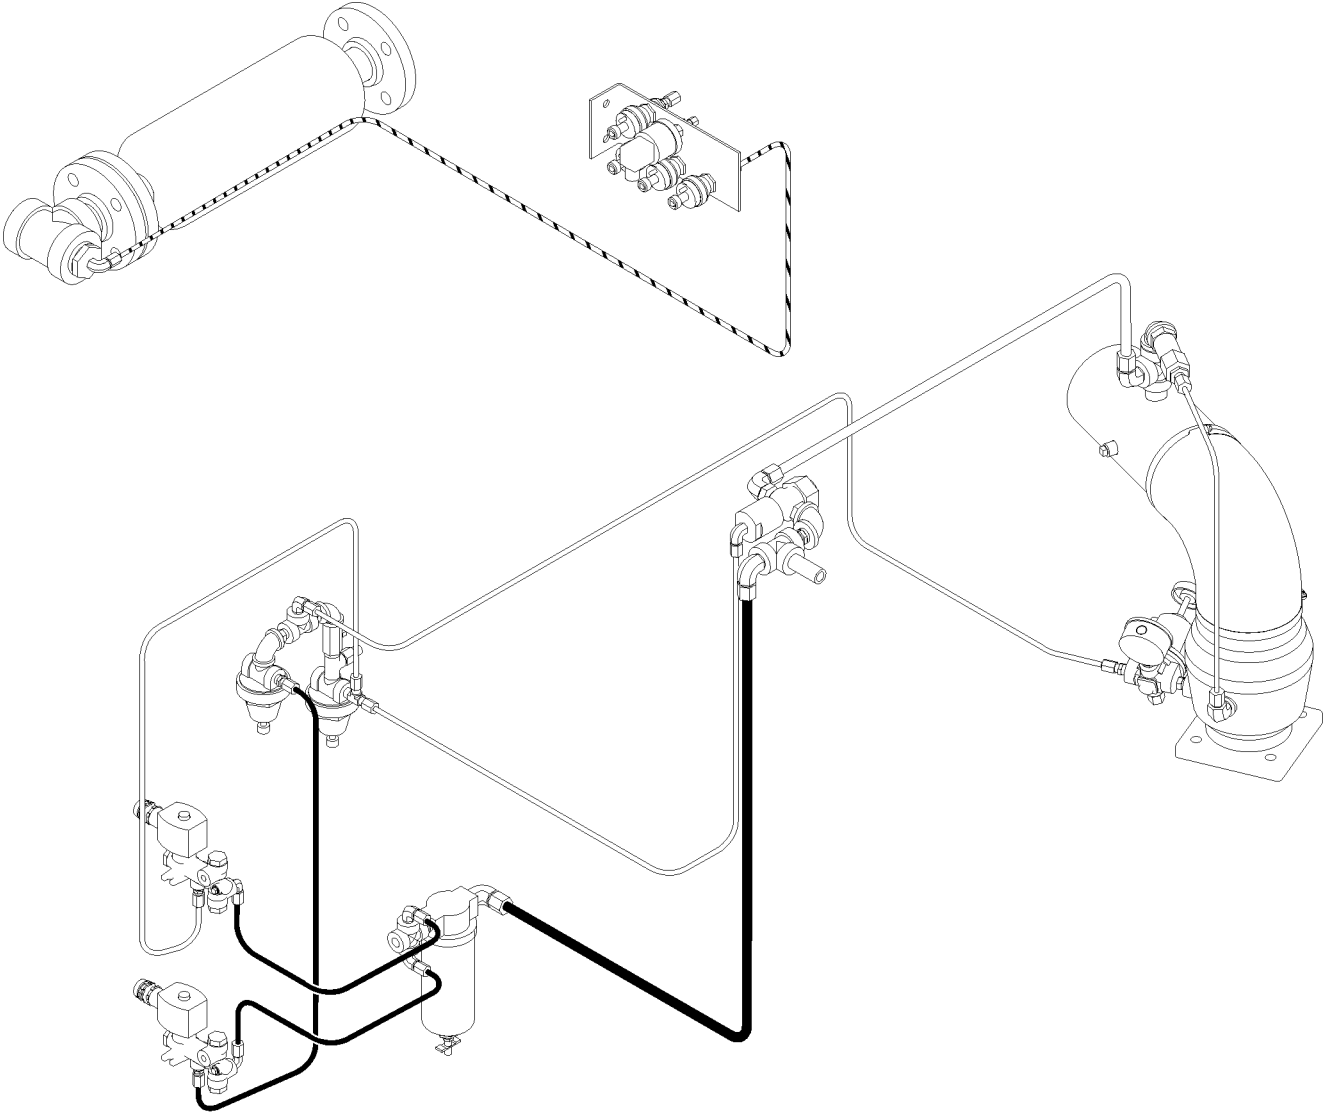
Figure 2-4D Control System Diagram- FULL LOAD






-  Line Pressure Air
-  Dry Side Air
-  Regulated Air

## Section 2 DESCRIPTION

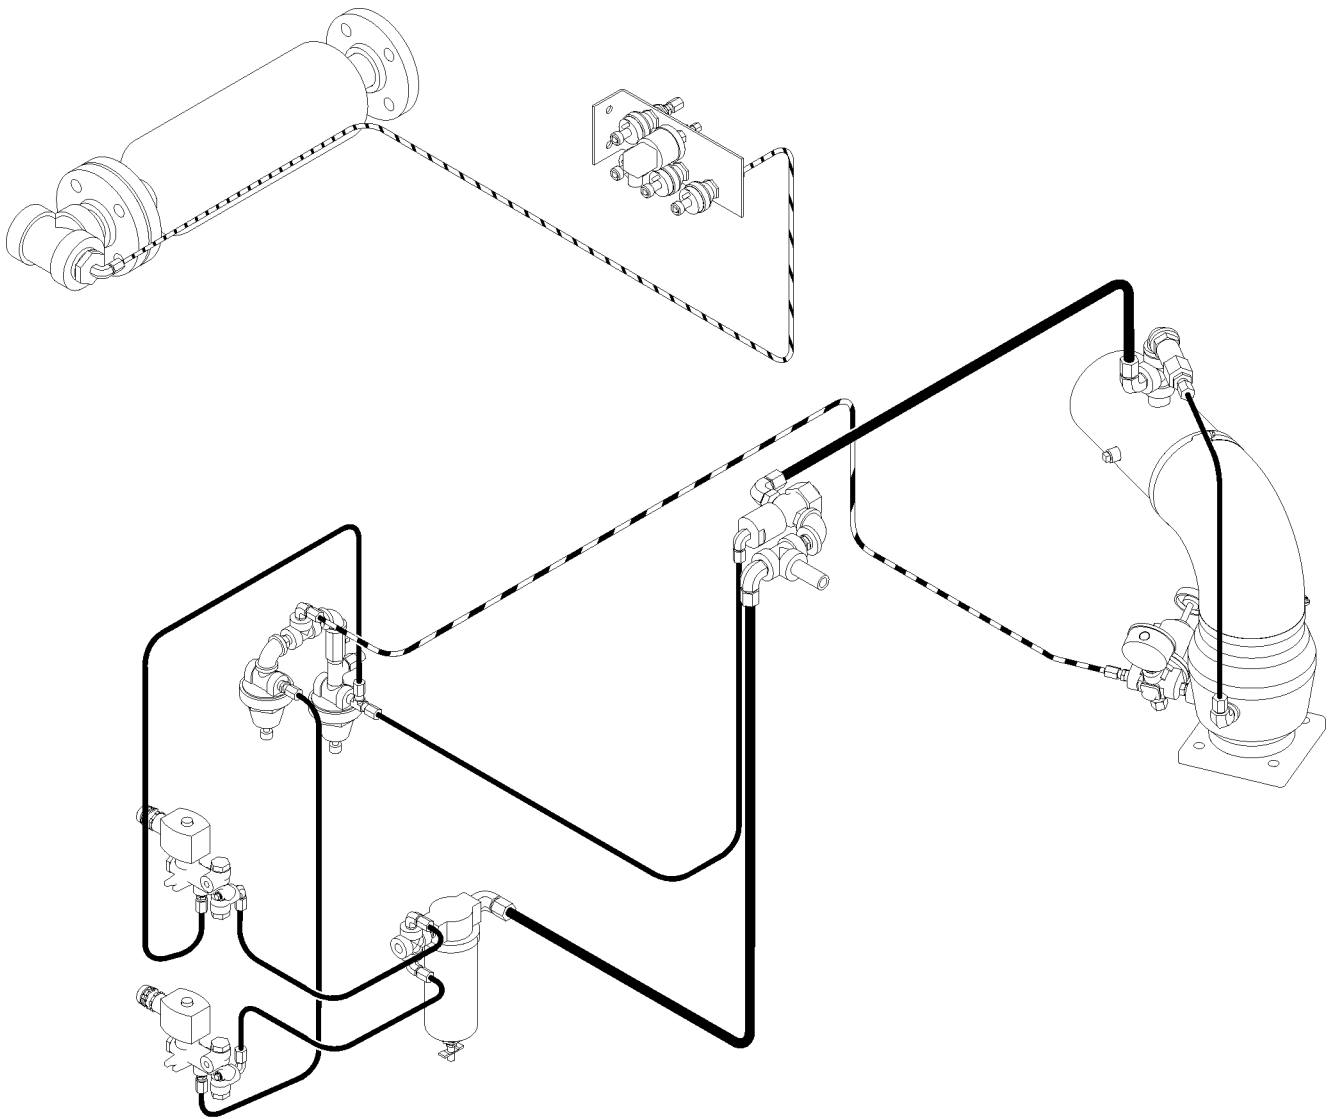Figure 2-4E Control System Diagram- UNLOAD



-  Line Pressure Air
-  Dry Side Air
-  Regulated Air

## Section 2 DESCRIPTION

### 2.7 AIR INLET SYSTEM, FUNCTIONAL DESCRIPTION

Refer to Figure 2-5. The **Compressor Inlet System** consists of a **dry-type air filter**, a **vacuum switch**, and an **air inlet valve**.

At 20" water column the inlet vacuum switch will allow the Supervisor II to indicate that "AIR FILTER MAINT RQD" is required.

The poppet-type air inlet valve directly controls the amount of air intake to the compressor in response to the operation of the controls (see Section 2.6, [Control System, Functional Description](#)).

### 2.8 SUPERVISOR II PANEL BASIC INTRODUCTION

Refer to Figure 2-6. The Supervisor II has a two line display to show temperature, pressure and status. It has a keypad for operating the compressor, programming the control points and selecting displays. There is a graphic illustration with lamps that light to show the item being displayed. The lamps flash if that component is in an alarm condition.

### 2.9 KEYPAD

The keypad is used to control the machine as well as display status and change setpoints. Refer to Figure 2-6 for following key descriptions.

- **Stop** - Used to put the machine into manual stop. It is also used to clear alarm conditions.



- **Continuous** - Starts machine if no alarm conditions are present. Also used to clear alarm conditions while machine is running.




- **Auto** - Starts machine and selects auto mode if no alarm conditions are present. Also used to clear alarm conditions while machine is running.



- **Display** - Used to display pressures, temperatures and other status information (See section on STATUS DISPLAYS).



Figure 2-5 Air Inlet System

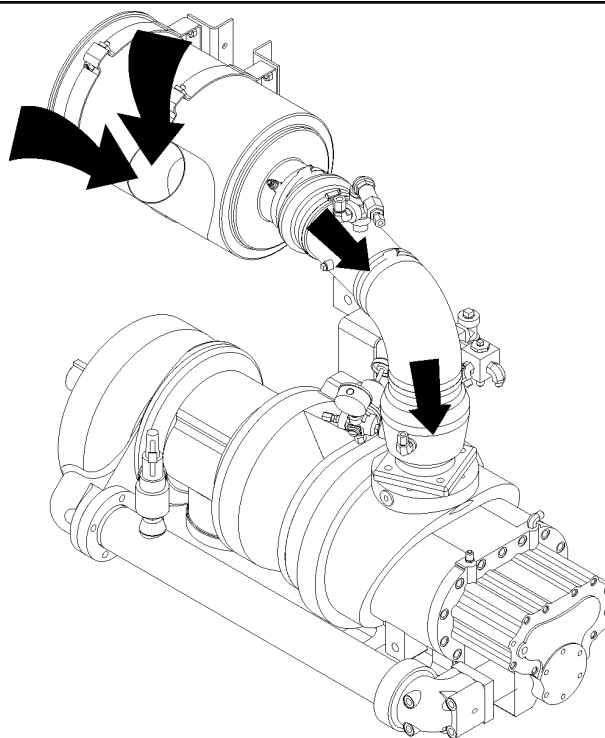

- **Logo** - Used for various functions described in later sections.



- **Program** - Used to enter the parameter change mode where control parameters may be displayed and changed (See PARAMETER SETUP).



- **Up arrow** - Used in status displays to change displays and in parameter setup mode to increment a value.




- **Down arrow, lamp test** - Used in status displays to change displays and in parameter setup mode to increment a value. When in the default display the key will light all the lamps for three seconds.



# Section 2 DESCRIPTION

Figure 2-6 Supervisor II Panel

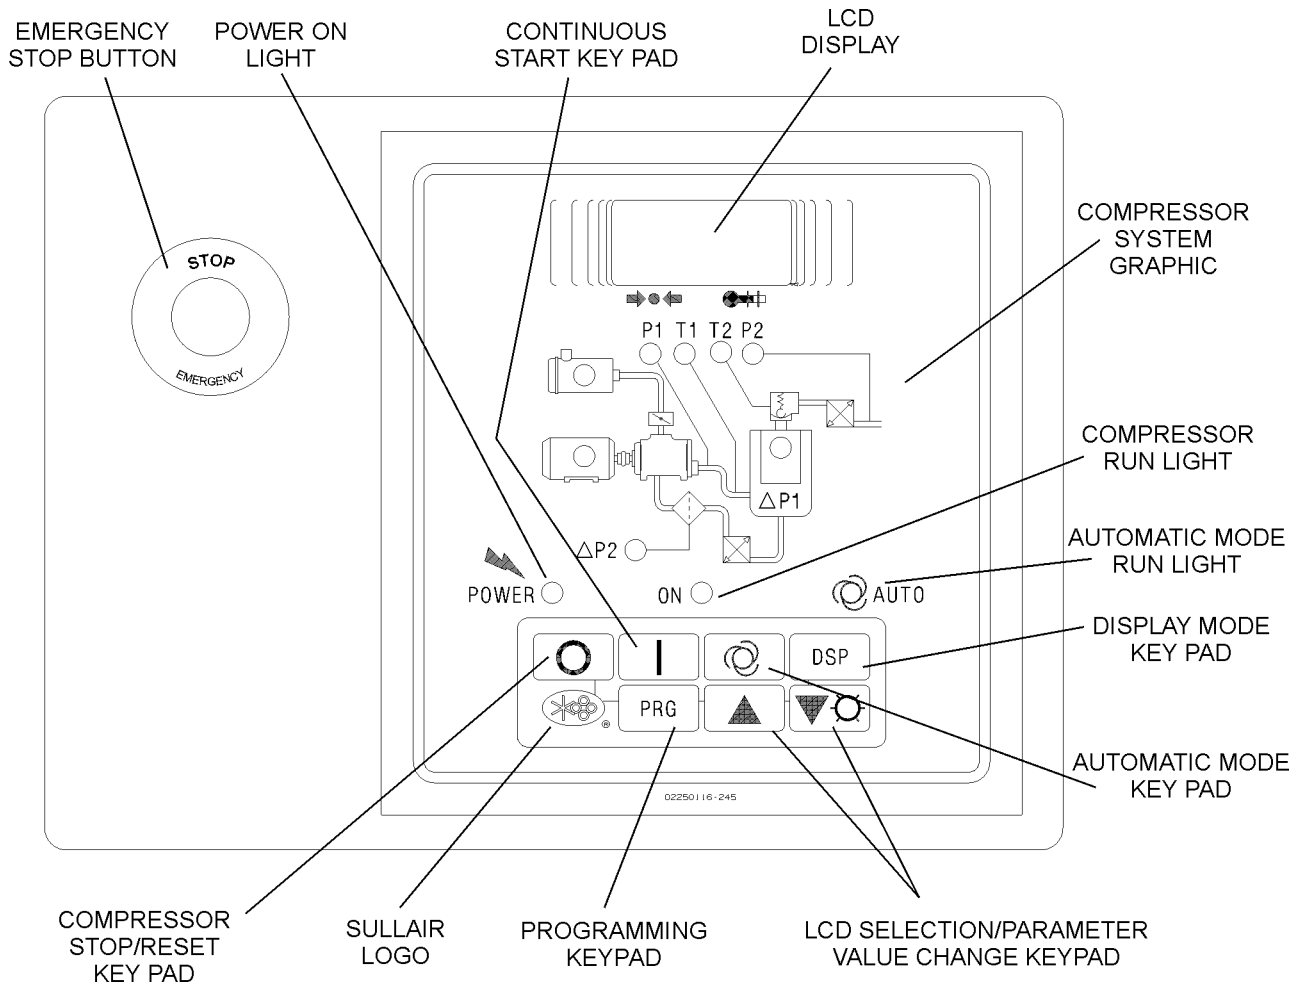

## 2.10 STATUS DISPLAYS

By default the line pressure (P2) and discharge temperature (T1) are shown on the bottom line of the display, and machine status on the top line.

The following are the various machine status messages that indicate the state of the compressor:

(Display graphics shown below.)

- **STOP** - Compressor is off.
- **STANDBY** - Compressor is off but armed to start. This state may be entered because of a power up, or the unload timer had expired and stopped the machine.

### NOTE

The machine may start at any time.

- **STARTING** - Machine is trying to start.
- **OFF LOAD** - Machine is running and off loaded.

- **ON LOAD** - Machine is running and loaded.
- **FULL LD** - Machine is running and fully loaded. This state is only displayed if the machine has a full load valve.
- **RMT STOP** - Compressor is off but armed to start. The machine will start when the remote start contact is closed.

### NOTE

The machine may start at any time.

- **SEQ STOP** - Compressor is off but armed to start. The machine will start when the sequencing conditions meet the criteria to start.

### NOTE

The machine may start at any time.

This default display appears as follows:

## Section 2 DESCRIPTION

**STOP**  
**360 220**

If there are alarms active they will alternately be shown with the default display. The machine status will be displayed for 2 seconds then the alarms for 2 seconds each. For example:

**T1 HI**  
**360 220**

To view other status press the DSP key. All temperatures and pressures may be displayed as well as other status information. To scroll through the displays press the up arrow or down arrow keys. Up arrow moves to the next display, down arrow the previous display. To return to the default display press the display key.

- Separator differential pressure and the maximum limit. If the limit is exceeded, a separator maintenance warning will be displayed.

**dP1 4**  
**MAX 10**

- Sump pressure and line pressure.

**P1 363**  
**P2 358**

- Oil filter differential pressure and the maximum limit. If the limit is exceeded oil maintenance warning will be displayed.

**dP2 4**  
**MAX 20**

- Pressure before (P4) and after (P3) oil filter.

**P3 290**  
**P4 295**

- Oil differential pressure and the minimum limit. If the pressure goes below the limit a P3 LOW shutdown will occur. Oil differential (dP3) is defined as P3-P1/2

**dP3 40**  
**MIN 1**

- Unit discharge temperature and the maxi-

mum limit. If the temperature exceeds the limit a T1 HI shutdown will occur.

**T1 210**  
**MAX 255**

- Dry side discharge temperature and the maximum limit. If the temperature exceeds the limit a T2 HI shutdown will occur.

**T2 210**  
**MAX 255**

- Oil temperature and the maximum limit. If the temperature exceeds the limit a T4 HI shutdown will occur.

**T4 210**  
**MAX 255**

- Total hours that the compressor has been running.

**HRS RUN**  
**001234.0**

- Total hours that the compressor has been loaded.

**HRS LOAD**  
**000987.0**

- Last fault log. This shows the fault on the first line and the run hours when the fault occurred.

**T1 HI**  
**@1 255**

- Next to last fault log. This shows the fault on the first line and the run hours when the fault occurred.

**T1 HI**  
**@2 224**

### 2.11 LAMP INDICATORS

Embedded into the front panel schematic of the compressor are several lamps. Pressing the lamp test key will light all the lamps for 3 seconds. Each LED lamp has the following purpose.

**P1** - (Line pressure) If lit steady, signifies that P1 is being displayed, if flashing denotes the presence of

## Section 2 DESCRIPTION

an alarm.

**P2** - (Sump pressure) If lit steady, signifies that P2 is being displayed, if flashing denotes the presence of an alarm.

**P3** - Injection oil pressure (Pressure after oil filter) Same as P1 & P2 except for P3.

**P4** - (Pressure before oil filter)

**dP1** - (Separate differential pressure) If lit steady, signifies that DP1 is being displayed, if flashing denotes replacement of separator is needed.

**dP2** - (Oil filter differential pressure)

**dP3** - (Oil differential pressure)

**T1** - (Dry side discharge temperature) If lit steady, signifies that T1 is being displayed, if flashing denotes the presence of an alarm.

**T2** - (Discharge temperature) If lit steady, signifies that T2 is being displayed, if flashing denotes the presence of an alarm.

**T3** - (Oil temperature) If lit steady, signifies that T3 is being displayed. For monitoring only.

**T4** - (Interstage temperature) If lit steady, signifies that T4 is being displayed, if flashing denotes the presence of an alarm.

### NOTE

For T1, T2 and T4, shutdown points are at 255°F (124°C) with a 30 second delay, and 275°F (135°C) immediate.

**MOTOR** - If flashing, indicates the motor overload contact has opened.

**INLET FILTER** - If flashing, indicates that inlet filter maintenance is needed.

**OIL FILTER** - If flashing, indicates that oil filter maintenance is needed.

**POWER ON** - Lit if 120VAC power is applied to the Supervisor II.

**ON** - If lit steady, the compressor is running. If flashing, indicates that the compressor is armed but stopped because of restart timer not expired, remote stop or sequence stop. The compressor may start at any time.

**AUTO** - If lit steady, the compressor is running and in auto mode. If flashing, indicates that the compressor is armed but stopped because of restart timer not expired, remote stop or sequence stop. The compressor may start at any time.

# NOTES

# Section 3 SPECIFICATIONS

## 3.1 SPECIFICATIONS- LS16T

Model Series	DIMENSIONS WITHOUT ENCLOSURE (I)						Weight	
	Length		Width		Height		lb	kg
	in	mm	in	mm	in	mm		
LS16T 250 CFM	108.0	2744	71.69	1821	71.5	1816	6200	2812
LS16T 360 CFM	108.0	2744	71.69	1821	71.5	1816	6500	2949
LS16T 425 CFM	108.0	2744	71.69	1821	71.5	1816	6850	3108

(I) For information concerning enclosed compressors, please contact the Sullair Factory Sales Department.

### NOTE

For noise level information, please contact the Sullair Factory Service Department.

#### COMPRESSOR:

Type:	2-Stage Oil Flooded Rotary
Maximum Full Load Operating Pressure:	350 psig (24.1 bar)
Bearing Type:	Anti-Friction
Cooling:	Pressurized Compressor Fluid
Lubricant:	Sullube
System Fluid Capacity (refill):	30 U.S. Gallons (113.6 Liters)
Control:	Supervisor II Controller

#### MOTOR:

Type:	O.D.P., 460V, A.C., Three Phase, 60 Cycles
Size:	100, 125, 150 and 200HP
Speed:	1800 RPM

## 3.2 LUBRICATION GUIDE-STANDARD COMPRESSORS

Refer to Figure 3-1 for fluid fill port location. Sullair standard compressors are filled with Sullube fluid as factory fill.

### ⚠ WARNING

To be sure that you receive the correct fluid for your compressor, when ordering fluid, always confirm your compressor's fluid fill with the parts technician by using your compressor's serial number.


### ⚠ WARNING

Mixing of other fluids within the compressor will void all warranties.

Sullube fluid should be changed every 1800 hours or once a year, whichever comes first. The fluid should be changed more frequently under severe operating conditions, such as high ambient temperatures coupled with high humidity, or when high particulate level, corrosive gases or strong oxidizing gases are present in the air.

Maintenance of all other components is still recommended as indicated in the Operator's Manual.

*Figure 3-1 Fluid Fill Port Location*

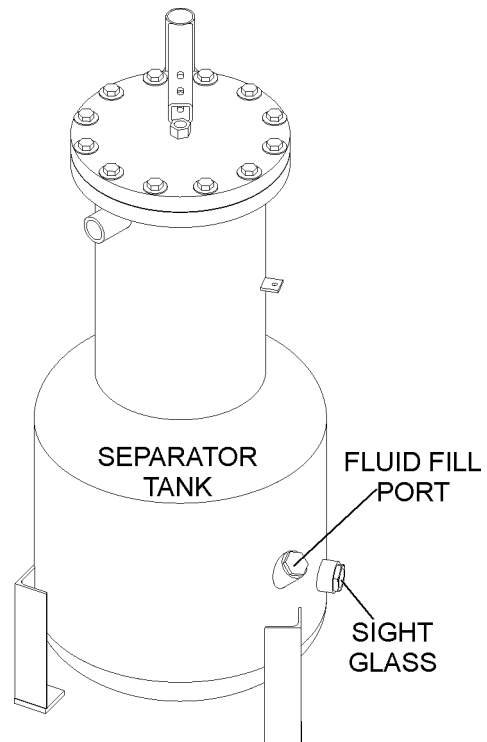

## Section 3

# SPECIFICATIONS



Mixing of other lubricants within the compressor unit will void all warranties

“The Plastic Pipe Institute recommends against the use of thermoplastic pipe to transport compressed air or other compressed gases in exposed above ground locations, e.g. in exposed plant piping.” (I)

Sullube should not be used with PVC piping systems. It may affect the bond at cemented joints. Certain other plastic materials may also be affected.


(I) Plastic Pipe Institute, Recommendation B, Adopted January 19, 1972.

### 3.3 APPLICATION GUIDE

Sullair encourages the user to participate in a fluid analysis program with the fluid suppliers. This could result in a fluid change interval differing from that stated in the manual. Contact your Sullair dealer for details.

# Section 3 SPECIFICATIONS

Figure 3-2 Identification- LS16T 100/125 Air-cooled




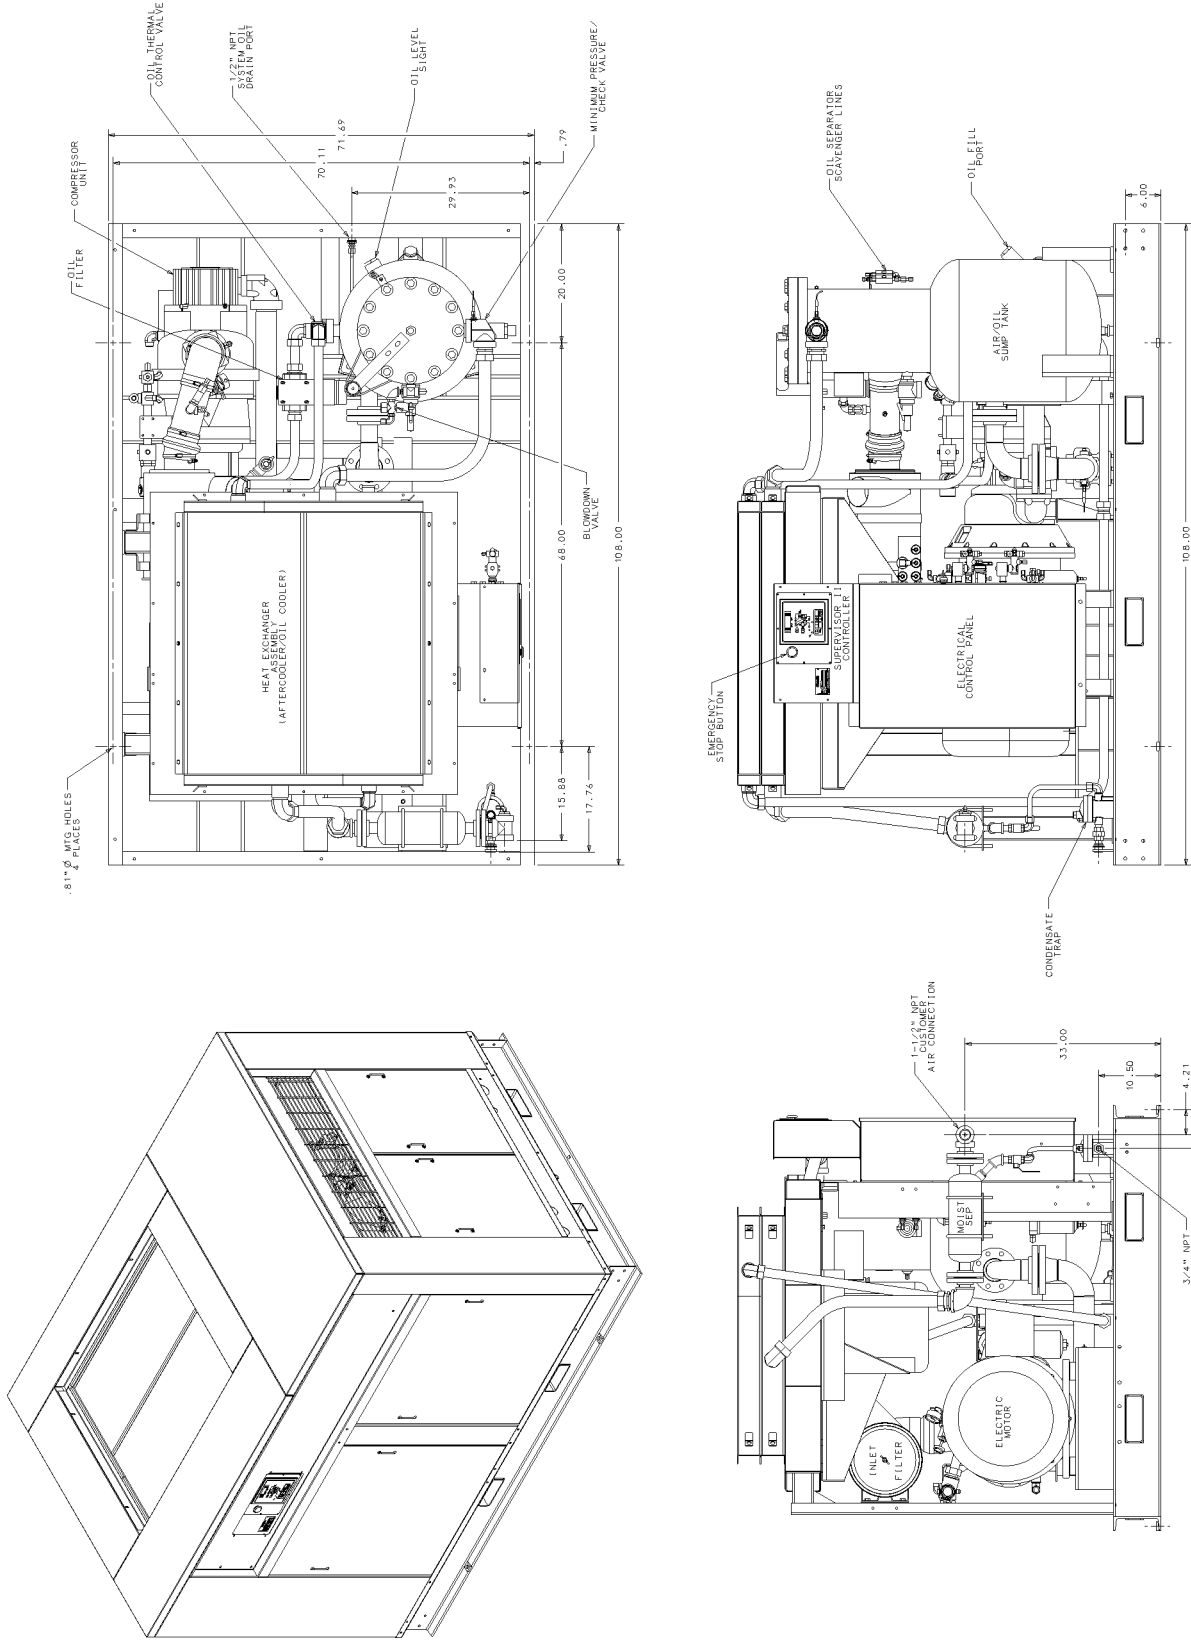


5. A FOUNDATION OR MOUNTING CAPABLE OF SUPPORTING THE COMPRESSOR FRAME AND LEGS AND ENOUGH COMPRESSOR FRAME MOUNTING HOLES IN THE FRAME ALIGNMENT IS REQUIRED. MOUNTING HOLES IN THE FRAME ARE SUPPLIED TO ALLOW FOR BOLTING TO THE COMPRESSOR FRAME. TRANSMITTED VIBRATION LOADS SHALL BE TRANSMITTED TO THE PACKAGE BY EXTERNAL CONNECTIONS.

NOTES:  
 1. ALLOW 4 FT. MIN. CLEARANCE ALL AROUND FOR ACCESS/FREE AIR FOR COOLING.  
 2. FRAME MOUNTING HOLES ARE .81" DIAMETER (4 PLACES).  
 3. TANK LID PROVIDED W/ SERVICE ARM TO BE UTILIZED DURING MAINTENANCE.  
 4. ALL DIMENSIONS ARE  $\pm .50$  INCH TOLERANCE.

# Section 3 SPECIFICATIONS

Figure 3-3 Identification- LS16T 150/200 Air-cooled

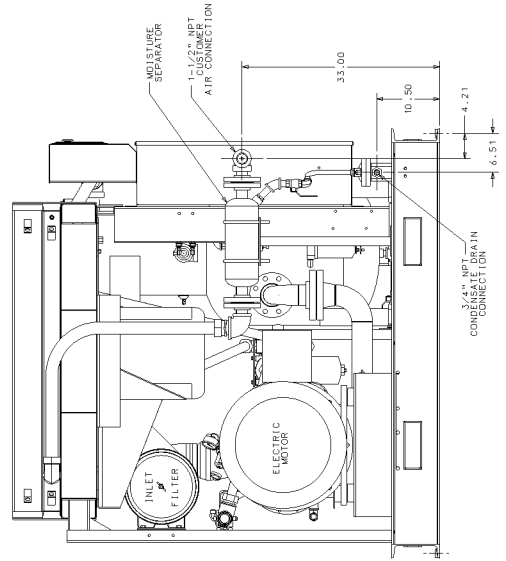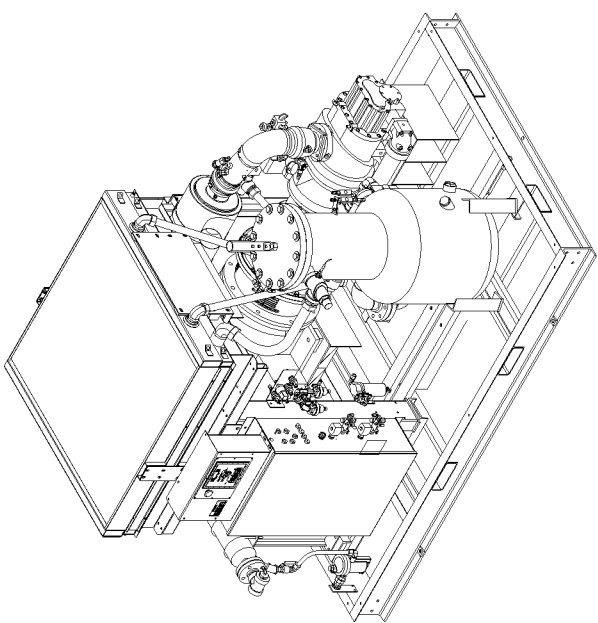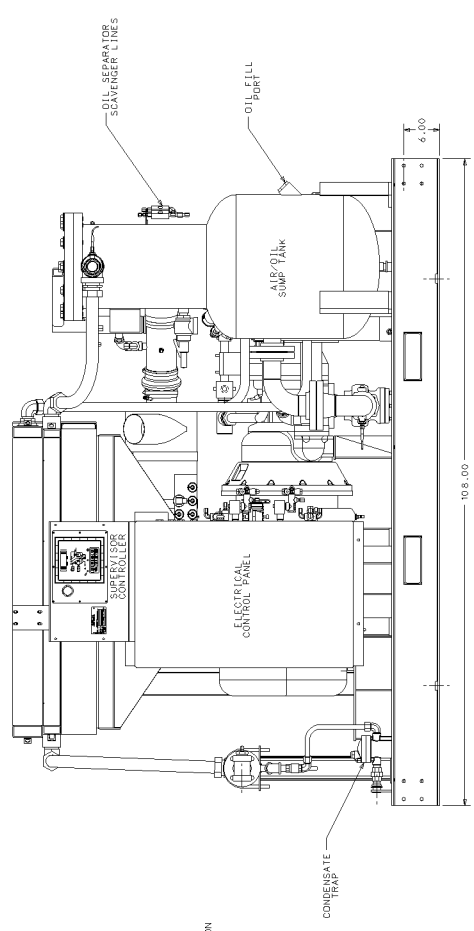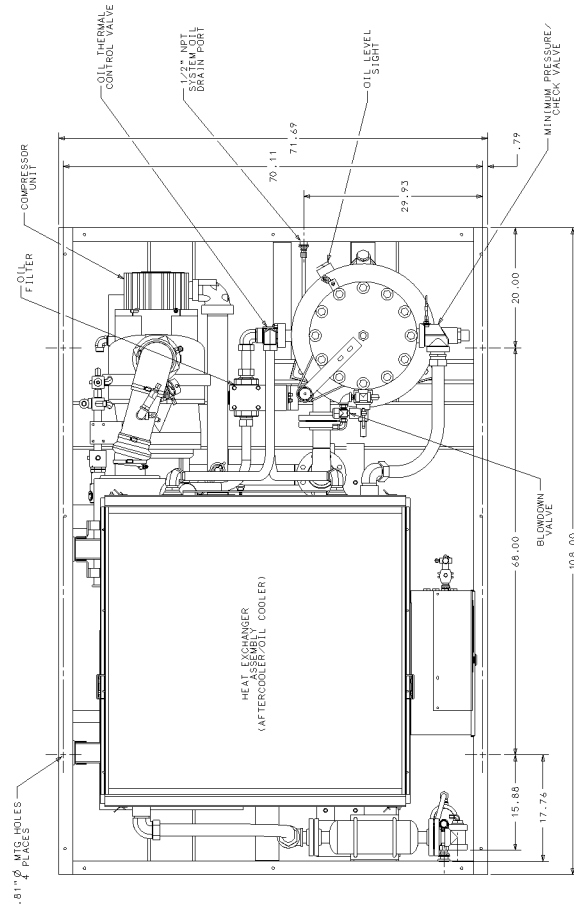

5. A FOUNDATION OR MOUNTING CAPABLE OF SUPPORTING THE ENTIRE PACKAGE AND RIGID ENOUGH TO MAINTAIN THE COMPRESSOR FRAME LEVEL AND THE COMPRESSOR COMPRESSOR ALIGNMENT IS REQUIRED. MOUNTING HOLES IN THE FRAME ARE SUPPLIED TO ALLOW FOR BOLTING PACKAGE TO THE FOUNDATION SUPPLIED BY THE CUSTOMER. MOUNTING LOADS SHALL BE TRANSMITTED TO THE PACKAGE BY EXTERNAL CONNECTIONS.

NOTES:  
 1. ALLOW 4 FT. MIN. CLEARANCE ALL AROUND FOR ACCESS/FREE AIR FOR COOLING. HOLES ARE .81" DIAMETER (4 PLACES).  
 2. FRAME MOUNTING HOLES ARE .81" DIAMETER (4 PLACES).  
 3. TANK LID PROVIDED BY SERVICE ELEMENTS.  
 4. ALL DIMENSIONS ARE ±.50 INCH TOLERANCE.

# Section 4 INSTALLATION

## 4.1 MOUNTING OF COMPRESSOR

A foundation or mounting capable of supporting the weight of the compressor, and rigid enough to maintain the compressor frame level and the compressor in alignment is required. The compressor frame must be leveled and secured with foundation bolts, and full uniform contact must be maintained between the frame and foundation. It is recommended that the frame be grouted to the foundation. The compressor unit and driver must be aligned after installation as specified in this Operator's Manual. No piping loads shall be transmitted to the compressor or the cooling package at the external connections.

## 4.2 VENTILATION AND COOLING

For air-cooled compressors, select a location to permit sufficient unobstructed air flow in and out to the compressor to keep the operating temperature stable. The minimum distance that the compressor should be from surrounding walls is 4 feet/1.22m. To prevent excessive ambient temperature rise, it is imperative to provide adequate ventilation.

For water-cooled compressors, it is necessary to check the cooling water supply. The water system must be capable of supplying the following flows:

<u>MODEL-HP/KW</u>	<u>WATER FLOW (GPM)</u>
LS16T- 100HP/75KW	20
LS16T- 125HP/93KW	22
LS16T- 150HP/112KW	29
LS16T- 200HP/149KW	33

### NOTE

Water flow requirements are based on 80°F to 85°F (27°C to 29°C) water inlet temperature.

Recommended water pressure range is 40 to 75 psig (2.8 to 5.2 bar). Water flow rates will vary with operating conditions. For rates based on criteria other than that listed, consult your local Sullair representative.

*Table 4-1 Ventilation Requirements* indicates the ventilation requirements necessary to keep the compressor running at a normal operating temper-

*Table 4-1 Ventilation Requirements*

		WATER COOLED OR REMOTE COOLED COMPRESSOR PACKAGE		AIR-COOLED (I) COOLING PACKAGE	
MODEL	MOTOR HP/KW	HEAT REJECTION BTU/HR	VENT FAN FLOW (II) CFM	HEAT REJECTION BTU/HR	AIR FLOW CFM
LS16T-100	100/75	21,500	2,800	214,078	13,000
LS16T-125	125/93	25,000	2,800	248,680	13,000
LS16T-150	150/112	35,500	2,800	352,471	18,500
LS16T-200	200/149	41,000	2,800	400,045	18,500

(I) Applicable to air-cooled models only.

(II) Applicable to compressors with enclosure.

ature. The fan air requirement is the volume of air which must flow through the compressor for proper ventilation. The specified heat rejection requirement is the amount of heat that is radiated by the compressor. This heat must be removed to assure a normal operating temperature. With air-cooled compressors it is possible to use this heat for space heating, providing excessive pressure drop is not created across the fan. Consult a Sullair office for assistance in utilizing this heat.

**DO NOT** install a water-cooled or an air-cooled/aftercooled compressor without adequate freeze protection where it will be exposed to temperature less than 32°F(0°C).

## 4.3 SERVICE AIR PIPING

Service air piping should be installed as shown in Figure 4-1. A shut-off valve should be installed to isolate a compressor from the service line if required. Also notice that the service line should be equipped with water legs and condensate drains throughout the system.

### WARNING

“The Plastic Pipe Institute recommends against the use of thermoplastic pipe to transport compressed air or other compressed gases in exposed above ground locations, e.g. in exposed plant piping.” (I)

Sullube should not be used with PVC piping systems. It may affect the bond at cemented joints. Certain other plastic materials may also be affected.

(I) Plastic Pipe Institute, Recommendation B, Adopted January 19, 1972.

## 4.4 COUPLING ALIGNMENT CHECK


In preparation for the factory test, the coupling supplied with your compressor is properly aligned for operation. The motor is flange-mounted to the compressor unit adapter. Therefore, it is not necessary to check this alignment, unless high vibration is noticed.

## 4.5 FLUID LEVEL CHECK

Your air compressor is also supplied with the prop-

# Section 4 INSTALLATION

Figure 4-1 Service Air Piping

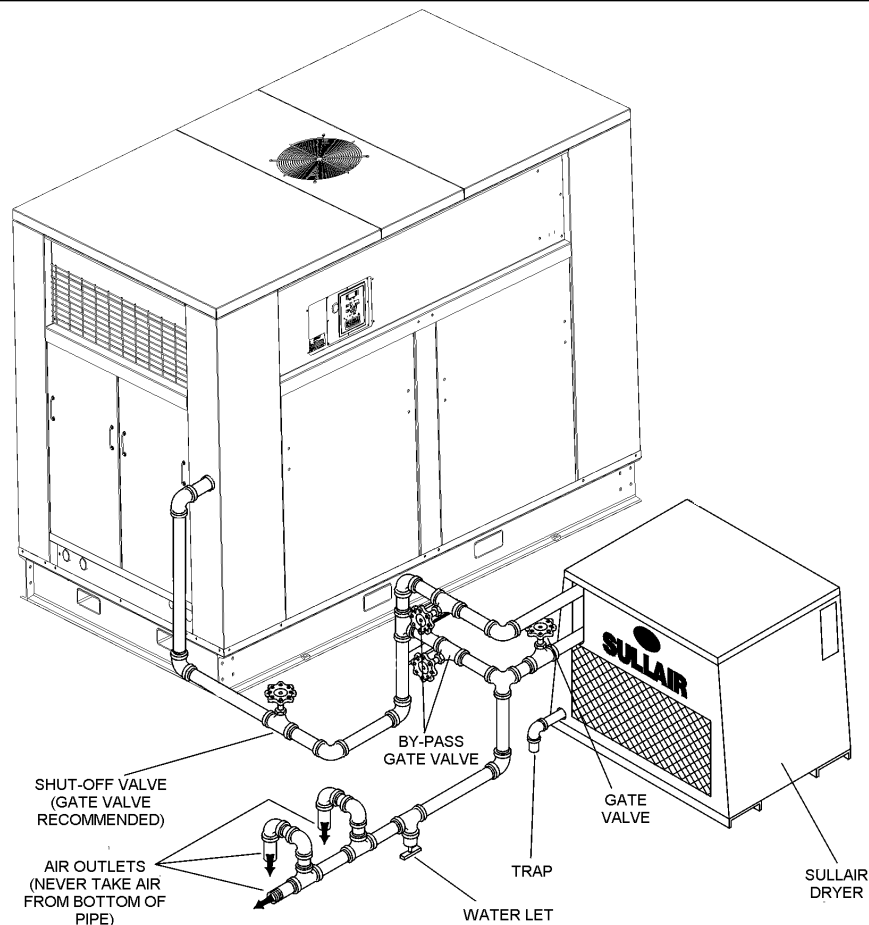

er amount of fluid. However, it is necessary to check the fluid level at installation. The level is checked by looking at the sight glass located on the sump. If the sump is properly filled, the coolant level MAX should fill 1/2 of the sight glass when the compressor is running.

## 4.6 ELECTRICAL PREPARATION

Interior electrical wiring is performed at the factory. Required customer wiring is minimal, but should be done by a qualified electrician in compliance with any applicable regional or local electrical code concerning isolation switches, fuse disconnects, etc. Sullair provides a wiring diagram for use by the installer.

### **WARNING**

Lethal shock hazard inside.

Disconnect all power at source before opening or servicing starter or control panel.

1. Check incoming voltage. Be sure that the incoming voltage is the same voltage that the compressor was wired for.

2. Check starter and overload heater sizes (see electrical parts in Parts Manual).
3. Check all electrical connections for tightness.

## 4.7 MOTOR ROTATION CHECK

After the electrical installation has been done, it is necessary to check the direction of motor rotation.

With the control system in MANUAL MODE, pull out the **EMERGENCY STOP** button and press once, quickly and in succession, the **(START)** “**I**” and **(STOP)** “**O**” pads. This action will bump start the motor for a very short time. When looking at the motor rear end, the driveline should be rotating in the direction indicated by the “Direction of Rotation” decal located on the top of the compressor/motor adapter piece. If the reversed rotation is noted, disconnect the power to the starter and exchange any two of the three power input leads, then re-check rotation. A “Direction of Rotation” decal is located on the top of the compressor/motor adapter piece.

# Section 5 OPERATION

## 5.1 GENERAL

While Sullair has built into this compressor a comprehensive array of controls and indicators to assure you that it is operating properly, you will want to recognize and interpret the reading which

will call for service or indicate the beginning of a malfunction. Before starting your Sullair compressor, read this section thoroughly and familiarize yourself with the controls and indicators - their purpose, location and use.

## 5.2 PURPOSE OF CONTROLS

CONTROL OR INDICATION	PURPOSE
FLUID LEVEL SIGHT GLASS	Monitors fluid level in the sump. Proper level should fill the sight glass. Check level when the compressor is shut down. <b>DO NOT OVERFILL.</b>
SEPARATOR RETURN LINE SIGHT GLASS	Used to indicate fluid flow in the return lines. When the compressor is running at full load, fluid flow should be visible in this sight glass. There may be little or no flow when the compressor is running unloaded, but a sluggish flow at full load indicates a need to clean the return line strainer.
FLUID STOP VALVE	Cuts off flow of fluid to compressor unit at compressor shutdown and allows flow of fluid to the unit on startup.
DISCHARGE CHECK VALVE	Cuts off the reverse flow of air/fluid mixture through compressor discharge system at compressor shutdown.
THERMAL VALVE	Regulates flow of fluid to and around the cooler. Designed to maintain a minimum operating temperature of 220°F (104°C). Also used for fast warm-up on startup.
MINIMUM PRESSURE/CHECK VALVE	Maintains minimum of 160 psig (11bar) in the compressor sump. Valve piston restricts receiver air discharge from receiver/sump when pressure falls to 160 psig (11bar). Prevents line pressure backflow into the sump during unload conditions and after shutdown.
PRESSURE RELIEF VALVE (SUMP)	Opens sump pressure to the atmosphere should pressure inside the sump becomes too high (400 psig [27.6 bar]). Operation of this valve indicates that there is a mechanical or electrical malfunction.
PRESSURE RELIEF VALVE (INTER-STAGE)	Opens interstage of compressor to atmosphere should the pressure become too high (200 psig [13.8 bar]). Operation of this valve indicates unit pressurization during shutdown. Causes may be plugged control lines, faulty discharge check valve, or faulty fluid stop valve.
INLET POPPET VALVE	Regulates the amount of air allowed to enter the air inlet valve. This regulation is determined by the amount of air being used at the service line.
PRESSURE REGULATOR (INLET POPPET VALVE)	Opens a pressure line between the sump and inlet poppet valve allowing to regulate air delivery according to the air demand.
PRESSURE REGULATOR (UNLOAD)	Opens a pressure line between the sump and the inlet poppet valve to regulate the unload pressure.

# Section 5 OPERATION

## 5.2 PURPOSE OF CONTROLS (CONTINUED)

CONTROL OR INDICATION	PURPOSE
BLOWDOWN SOLENOID VALVE	Opens when a demand for an unload/shutdown condition exists. When valve is opened, it will supply air to the blow-down valve.
BLOWDOWN VALVE	Vents sump pressure to the atmosphere during unload/shut-down conditions.
EMERGENCY STOP SWITCH	Pushing in this switch, found adjacent to the Supervisor, cuts all AC outputs from the latter and de-energizes the starter. A fault message (E STOP) is displayed by the Supervisor until the button is pulled out and the "O" pad is depressed.

## 5.3 PARAMETER SETUP

Pressing the program key "PRG" enters parameter display and edit mode. To move to the next parameter press the program key. To increment a parameter press the up arrow key "▲" or logo key "⊕". The logo key will increment by 10. To decrement the value press the down arrow key "▼".

The parameters are displayed in the following order:

- **Unload pressure** - The pressure where the machine is unloaded. For example if this parameter is set to 360 psi (24.8 bar) the machine will unload when the line pressure is above 360 psi (24.8 bar).

UNLOAD  
360 PSI

- **Load differential** - The pressure differential below the unload pressure where the machine is loaded. For example if the unload pressure is set to 360 psi (24.8 bar) and the load differential is set to 10 psid (0.7 bar), the machine will load when the line pressure goes below 350 psi (34.1 bar).

LOAD  
10 PSI

- **P1 Max** - Maximum sump pressure. An alarm and shut down will occur when the sump pressure rises above this pressure.

P1 MAX  
370 PSI

- **Wye to delta transition timer** - For full voltage starters this parameter is set to 0.

WYE DELT  
10 SEC

- **Restart time** - Time to wait after power-up before starting machine. This parameter is used to keep several machines from starting at the same time after power up, or to delay start until other equipment is started. If disabled the machine will not automatically start after power up.

RST TIME  
10 SEC

- **Unload Stop Timer** - If the machine is running in AUTO mode, this parameter specifies the amount of time that the machine will run unloaded before shutting off. If the time is set less than 15 minutes (for example 5), there may be times when the machine will run unloaded for more than 5 minutes. This is because there is another timer that keeps the machine from being started more than four times an hour.

UNLD TIM  
15 MIN

- **Language select** - English, German, Spanish, Italian and French may be selected for display language.

LANGUAGE  
ENGLISH

# Section 5 OPERATION

- **Units** - English or metric units may be selected.

UNITS  
ENGLISH

- **Communications ID #** - This is the network address of a machine. If there is more than one machine connected to the network, each machine must have a unique number

COM ID #  
1

- **Communications baud rate** - This should always be selected to 9600 baud for all sequencing modes. It may be lower for slave or monitoring modes.

BAUDRATE  
9600

- **Sequence method** - This parameter sets the method used for sequencing. The choices are DISABLED, REMOTE, SLAVE, HOURS, COM ID#. See the Sequencing & Protocol Manual (P/N 02250057-696) for details about these modes.

SEQUENCE  
HOURS

- **Drain interval** - The time between actuation of the drain valve.

DRN INTV  
10 MIN

- **Drain time** - The amount of time that the drain valve is actuated.

DRN TIM  
1 SEC

- **Last Communication Number** - Used only for sequencing, see Sequencing & Protocol Manual for details.

LAST COM  
3

- **Lowest Allowable Pressure** - Used only for sequencing, see Sequencing & Protocol Manual for details.

LOWEST  
90 PSI

- **Recovery Time** - Used only for sequencing, see Sequencing & Protocol Manual for details.

RECOVER  
10 SEC

- **Rotate Time** - Used only for sequencing, see Sequencing & Protocol Manual for details.

ROTATE  
50

- **Machine Capacity** - Used only for sequencing, see Sequencing & Protocol Manual for details.

CAPACITY  
100

- **Sequence Hours** - Used only for sequencing, see Sequencing & Protocol Manual for details.

SEQ HRS  
1000

## 5.4 OPERATING THE COMPRESSOR

Before operating the compressor the operating parameters must be setup. See the previous section on operating parameter setup.


### MANUAL OPERATION MODE

In this mode the compressor will run indefinitely, as long as temperatures and pressure remain within the valid operating ranges, and the motor overload or emergency stop contacts are not tripped.


Pressing the "I" will turn on the compressor and put it in manual mode. If the compressor is already running, but in automatic mode, pressing "I" will switch operation to manual. Pressing "I" while already running in manual mode will cause the Supervisor to turn off the common fault relay, if engaged, and clear any maintenance indicators.



To stop the compressor, press "O". If the compressor is already off when "O" is pressed, the



## Section 5 OPERATION

common fault relay will be turned off, if engaged, and it will try to clear the alarm and maintenance indicators. Regardless of what the compressor is doing, pressing “” puts the Supervisor in manual stop mode.

### AUTOMATIC OPERATION MODE

In this mode the compressor will start if line pressure (P2) is less than the **LOAD** parameter. It will stop if the compressor runs unloaded for the number of minutes indicated by the **UNLD TIM** parameter. To put the compressor in automatic mode press “”. If P2 is already less than **LOAD** the compressor will start immediately, otherwise the system status will indicate **STANDBY** and the LED marked **AUTO** will flash.

If the compressor is already running, but in continuous mode, pressing “” will switch operation to automatic. Pressing “” while already running in automatic mode will cause the Supervisor to turn off the common fault relay, if engaged, and clear any maintenance indicators.

In automatic mode the compressor can be stopped manually by pressing “”. Stopping the compressor using “” will put the Supervisor in manual stop mode.

Regardless of whether in “automatic” or “manual” mode, control of the load solenoid will be based on the parameters **UNLD** and **LOAD**. This operation is as follows:

- P2 > UNLD** → load solenoid turned off
- P2 < LOAD** → load solenoid turned on

### 5.5 SUPERVISOR II OUTPUT RELAYS

RELAY	OPERATION
RUN RELAY (K1)	Contact closure energizes the compressor starter.
*-DELTA (K2)	A timed contact used to provide wye-delta transition time.
UNLOAD/LOAD (K3)	Controls ON LOAD/OFF LOAD operator of the load control solenoid valve.
COMMON FAULT (K4)	May be used to provide remote indication of any pre-alarm, maintenance or fault shutdown condition.
DRAIN VALVE (K5)	Controls a solenoid valve to provide automatic condensate removal.
FULL LOAD/MODULATE (K6)	Used with sequencing feature.

**NOTE: All output relays will handle 8 amperes at 120/240 VAC.**

### POWER FAILURE RESTART

If the restart timer (RST TIME parameter) is disabled the compressor will not try to start after a power up. If this time is set to a value the machine will go into standby after power up. When the line pressure drops below the load setpoint, the restart timer will start timing. When the timer expires the machine will start.

### SEQUENCING MODES


The following is a brief description of sequencing modes, for details see the Supervisor Sequencing & Protocol Manual (P/N 02250139-197).

- **DISABLED** - Responds to status and parameter change messages via the RS485 network but will not respond to start, stop, load or unload messages.
- **REMOTE** - Responds to status and parameter change messages but will not respond to start, stop, load or unload messages. The remote inputs and outputs are enabled (start/stop, load/unload, master/local).
- **SLAVE** - Will respond to all messages, but will not start or load unless commanded to do so by a message. This mode is used to control the machine from a master computer.
- **HOURS** - Sends status message about once a second, starts, loads and unloads machines based on sequencing hours.
- **COM ID #** - Sends status message about once a second, starts, loads and unloads machines based on machine Com ID#.

# Section 5 OPERATION

## 5.6 INITIAL START-UP PROCEDURE



The following procedure should be used to make the initial start-up of the compressor:

1. Read the preceding pages of this manual thoroughly.
2. Be sure that all preparations and checks described in the Installation Section have been made.
3. Crack open the shut off valve to the service line.
4. Start the compressor by pressing the “” (START) pad.
5. Check for possible leaks in piping.
6. Slowly close the shut-off valve and check that the maximum pressure (P2) and pressure differential (P2) are correctly programmed.
7. Observe the operating temperature. If the oper-


ating temperature exceeds 235°F (113°C), the cooling system or installation environment should be checked.

8. Observe return line sight glasses and maintenance indicators.
9. Open shut-off valve to service line.
10. Reinspect the compressor for temperature and leaks the following day.

## 5.7 SUBSEQUENT START-UP PROCEDURE

On subsequent start-ups, check that the proper level is visible in the fluid level sight glass and simply press “” for manual or “” for automatic operation. When the compressor is running, observe the various parameter displays.

## 5.8 SHUTDOWN PROCEDURE

To shut the compressor down, push “” pad.

# NOTES

# Section 6 MAINTENANCE

## 6.1 MAINTENANCE INTRODUCTION

The Supervisor II monitors the status of the air filter, fluid filter, and separator elements. When maintenance to these devices is required, the Supervisor II will display the appropriate maintenance message and flash the location LED on the graphics map as a visual reminder.



**DO NOT** remove caps, plugs, and/or other components when compressor is running or pressurized.

Stop compressor and relieve all internal pressure before doing so.

## 6.2 DAILY OPERATION

Following a routine start, observe the various Supervisor II displays to check that normal readings are being made - previous records are very helpful in determining the normalcy of the measurements. These observations should be made during all expected modes of operation (i.e. full load, no-load, different line pressures, cooling water temperatures, etc.).

During the initial start-up or servicing of the package, fluid may have to be added to the sump vessel to restore an adequate level. Frequent fluid additions to maintain said level would be indicative of excessive fluid consumption, and should be investigated - see the Troubleshooting Section of this manual for probable cause and remedy.

## 6.3 MAINTENANCE AFTER INITIAL 50 HOURS OF OPERATION

After the initial 50 hours of operation, a few maintenance requirements are needed to rid the system of any foreign materials which may have accumulated during compressor assembly. Perform the following maintenance operations to prevent unnecessary problems.

1. Clean the return line strainers.
2. Clean the return line orifices.
3. Change the fluid filter elements.
4. Clean the control line filters.

## 6.4 MAINTENANCE AS REQUIRED BY LUBRICATION GUIDE (SECTION 3)

1. Drain the sump and change the compressor fluid.
2. Replace the main fluid filter element.
3. Clean the return line strainers and orifices.
4. Clean or replace the control line filter element.

## 6.5 FLUID CHANGE

Standard models are filled with Sullube. Sullube

should be changed under the following conditions, whichever occur first:

1. Every 1800 hours.
2. Once a year.
3. As indicated by fluid analysis.

A fluid sample at every 1000 hours is recommended. For a free Sullube analysis, send fluid to:

Dow Chemical  
Lubricant Technology Center  
Building B-1605  
Freeport, TX 77541

To facilitate this, a sample bottle is included with the compressor.

## 6.6 SEPARATOR MAINTENANCE

Replace the separator elements when the separator maintenance message is displayed or after one (1) year, whichever comes first. The separator elements must be replaced. **DO NOT** clean the separator elements.

## 6.7 PARTS REPLACEMENT AND ADJUSTMENT PROCEDURES

### FLUID FILTER MAINTENANCE

Refer to Figure 6-1. The main filter (P/N 02250121-658) is located schematically between the compressor and the fluid stop valve. When servicing the main filter, shut the compressor down, be sure all pressure has been released, then follow the instructions below. For element replacement order kit number 02250121-657.




To minimize the possibility of filter element rupture, it is important that **ONLY** replacement elements identified with the Sullair name, logo and appropriate part numbers be used, and that substitute elements **NOT** be used, due to the fact that such filters may have inadequate or questionable working pressure ratings.

1. Drain the fluid from the canister by removing the bottom drain plug.
2. Loosen the spin-on canister using a wrench on the bottom canister hex.
3. Pull the canister away from the filter head. The filter element will be attached to the head.
4. Separate the element from the head.
5. Remove the canister seals.
6. Thoroughly clean the filter head and canister in solvent.
7. Lubricate the new seals with the same type of

## Section 6 MAINTENANCE

Figure 6-1 Main Filter (P/N 02250121-658)

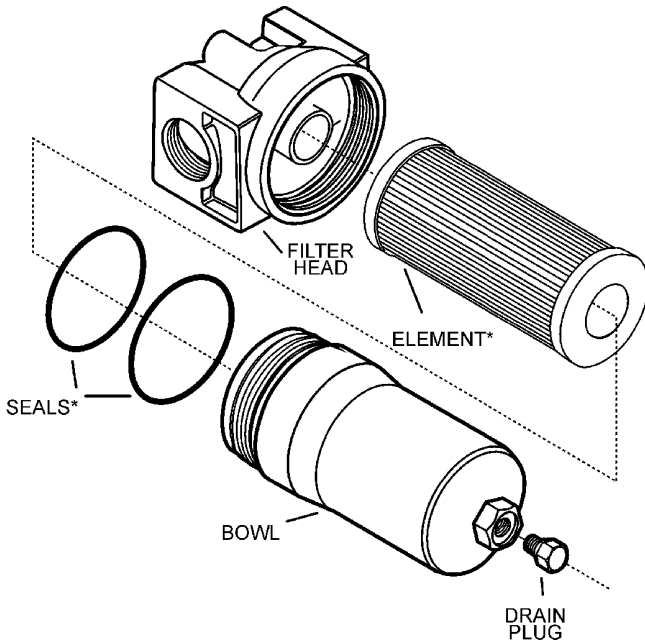

\*Repair Kit P/N 02250121-657

fluid used in the compressor and position each seal in its appropriate place.

8. Slide the element into the canister.

9. Thread the canister and element back on the filter head.


### AIR FILTER MAINTENANCE

Refer to Figure 6-2. Air filter maintenance should be performed when indicated by the maintenance display/gauge when running full load, or once a year, whichever comes first. If the filter needs to be replaced, order replacement elements. Following you will find procedures on how to replace the air filter elements.

### AIR FILTER ELEMENT REPLACEMENT

1. Clean exterior of air filter housing.
2. Unscrew the wing nut securing the cover.
3. Carefully remove the element from the housing.
4. Unscrew the wingnut assembly securing the primary element in place.
5. Remove primary element.
6. Loosen the hex nut, and remove the hex nut and washer securing the secondary element in place.
7. Carefully replace the secondary filter, making sure it rests correctly in position.
8. Replace the hex nut and washer; tighten.
9. Replace the primary element, making sure that it

Figure 6-2 Air Filter Replacement (P/N 02250059-096)

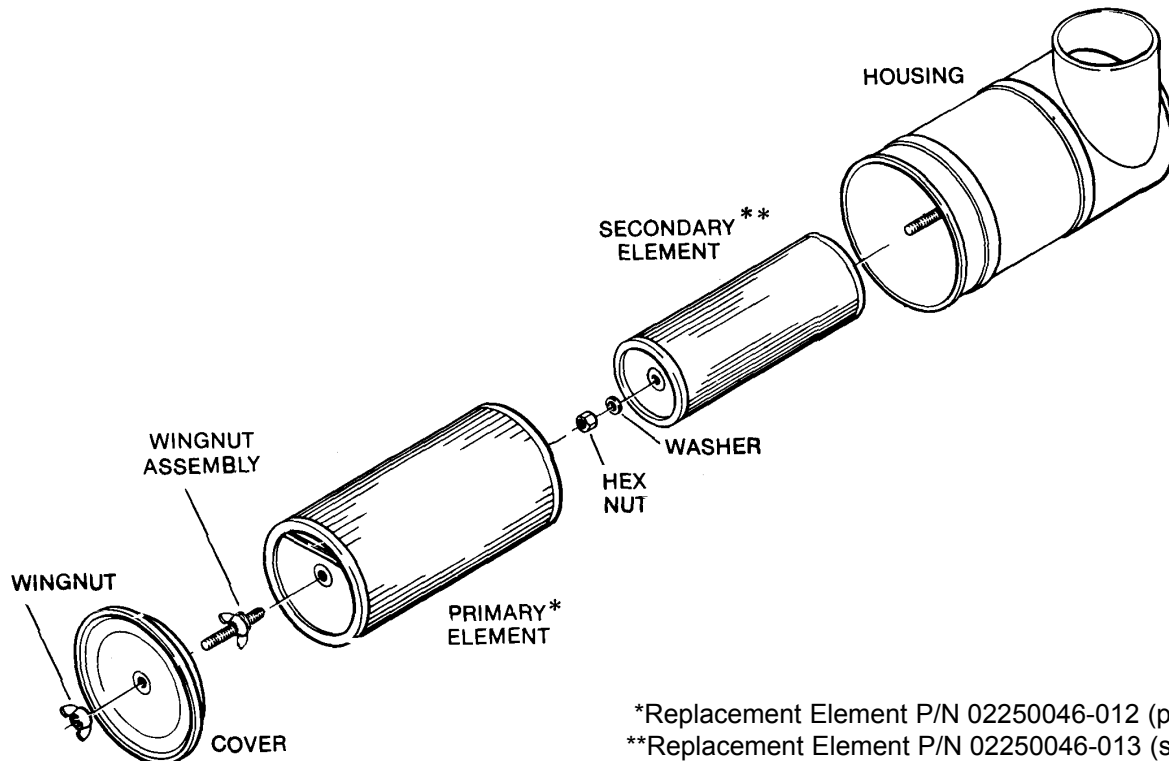

\*Replacement Element P/N 02250046-012 (primary)

\*\*Replacement Element P/N 02250046-013 (secondary)

## Section 6 MAINTENANCE

rests correctly in position.

10. Replace the wingnut assembly and tighten to secure primary element in place.
11. Replace the cover.
12. Secure the cover by tightening the wingnut.

### ELEMENT INSPECTION

1. Place a bright light inside the element to inspect for damage or leak holes. Concentrated light will shine through the element and disclose any holes.
2. Inspect all gaskets and gasket contact surfaces of the housing. Should faulty gaskets be evident, correct the condition immediately.
3. If the clean element is to be stored for later use, it must be stored in a clean container.
4. After the element has been installed, inspect and tighten all air inlet connections prior to resuming operation.

### AIR/OIL SEPARATOR ELEMENTS REPLACEMENT

Refer to Figure 6-3. The separator elements must be changed when “Separator Maintenance Required” message is displayed, or once a year, whichever occurs first. Order separator elements, number 250042-862 (primary) and number 250034-118 (secondary). Follow the procedure explained below for separator element replacement.


1. Relieve all pressure from the separator and all compressor lines.
2. Disconnect all piping connected to the separator cover (return lines, service lines, etc.) to Allow lid removal.
3. Loosen and remove the eighteen (18) hex head capscrews from the cover/lid plate.

### WARNING

To assist with the removal of the tank lid, Sullair has provided a 1”-8unc nut to the top lid so it can be removed by a 1”-8unc eyebolt (which is available from Sullair) or a similar type of lifting device.

4. Lift the cover/lid plate from the separator.
5. Remove the primary and secondary separator elements.
6. Scrape the old gasket material from the cover and flange on the sump being careful not to let the scraps fall into the sump.
7. Inspect the receiver/sump tank for rust, dirt, etc.
8. Reinsert the separator elements with gaskets

Figure 6-3 Separator Element Replacement

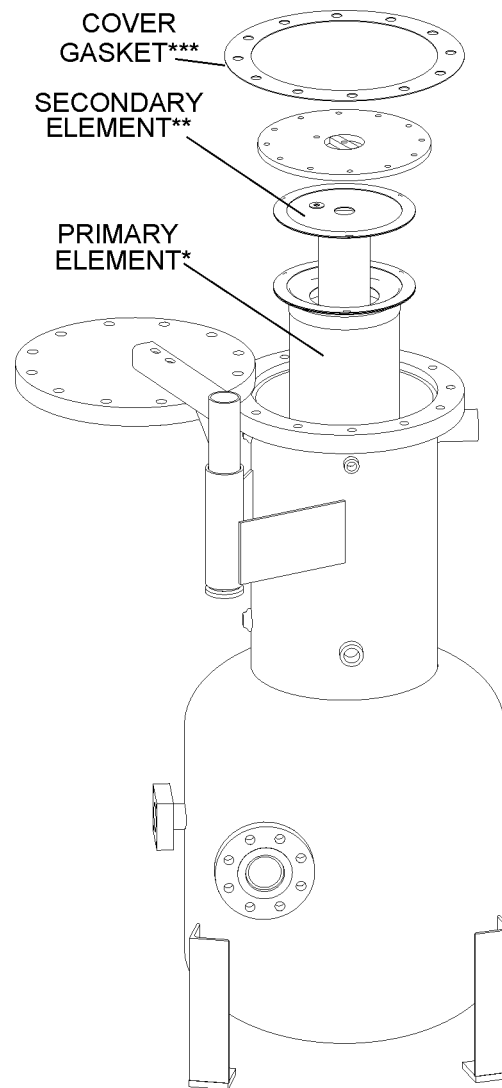

\*Primary Replacement Element P/N 250042-862

\*\*Secondary Replacement Element P/N 250034-118

\*\*\*Cover gasket (Tank Lid) P/N 250006-536

attached into the sump taking care not to dent the elements against the tank opening. **DO NOT** remove grounding staples from elements.

9. Clean underside of the separator tank cover and remove any rust. **DO NOT** remove grounding staples from elements.
10. Replace the cover plate, washers and capscrews. Torque to 260ft-lbs. (353Nm).
11. Reconnect all piping making sure return line tubes extend within 1/4” (6mm) max. above the bottom of the separator elements. This will assure proper fluid return flow to the compressor.

## Section 6 MAINTENANCE

- Check the return line strainer before restarting the compressor (replacement strainer P/N 02250117-782).

### OIL RETURN/SIGHT GLASS MAINTENANCE


Refer to Figure 6-4. The oil return/sight glass sub-assembly is attached to the separator tank lid. Oil return/sight glass maintenance should be performed on a routine basis parallel to that of the fluid filter, or as indicated in the Troubleshooting Sections (both Supervisor II and Maintenance) of this manual. The maintenance on an oil return/sight glass is mainly concerned with the condition of the filter assembly. Order filter assembly no. 02250117-782, and use the following instructions as a guide.

### NOTE

Always performing maintenance on both oil return/sight glasses at the same time.

- Disconnect the tubes at the tops of the sight glass assemblies.
- Unscrew male connector (for left-side glass), or the straight thread tube connector (for right-side glass) from sight glass/orifice blocks.

Figure 6-4 Oil Return/Sight Glass

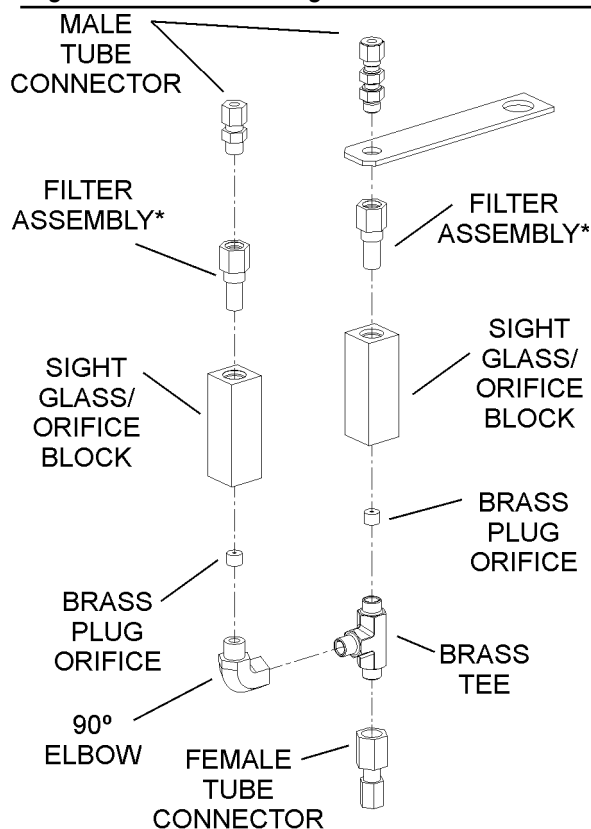

\*Replacement Filter Assembly P/N 02250117-782

- Remove used filter assembly, and replace with new assembly.
- Coat/lubricate the o-rings with silicone grease.
- Reattach the connectors to the sight glass/orifice blocks.

### DIFFERENTIAL PRESSURE REGULATOR ADJUSTMENT

Refer to Figure 6-5 and 6-6. The differential pressure regulators are adjusted by loosening the adjusting screw on the end of the cone-shaped cover of the pressure regulator. When the jam nut is loose, turn the adjusting screw clockwise to increase or counterclockwise to decrease the setting.

The reference pressure regulator should be set to maintain a 60 psig (4.14 bar) downstream pressure to the inlet poppet valve. The unload pressure regulator should be set at 175 psig (12.1 bar) to control the compressor package during unload only. The inlet poppet valve control pressure regulator should be set to control the systems modulation to the service line desired pressure.

### DRIVE COUPLING INSTALLATION AND ALIGNMENT

### WARNING

Applies to base-mounted compressors and drives only. Units mounted through common housing are self-aligning. If alignment is suspect, use the following procedure.

Refer to Figures 6-6, 6-7 and 6-8. For coupling installation and alignment, the tools required will be one set of standard allen wrenches and a dial indicator. If a dial indicator is not available, an alternate method of checking the alignment may be used as a secondary or less desirable technique. This method of checking is done by careful use of a square or metal straight edge feeler gauge and a set of inside calipers (see Figure 6-8). Those specifications in *Table 6-1 Installation Data* which are designated in inches are provided for this method.

For installation and maintenance of the drive coupling, follow the steps explained below.

### WARNING

Disconnect all power at source, before attempting maintenance or adjustments.

#### STEP 1 - MOUNT HUBS

After, carefully inspecting the hub bores and the shafts for dirt and burrs, mount the motor hub and the compressor hub on their respective shafts. It is also necessary to check for a proper key fit. Place

Figure 6-5 Pressure Regulator Adjustments


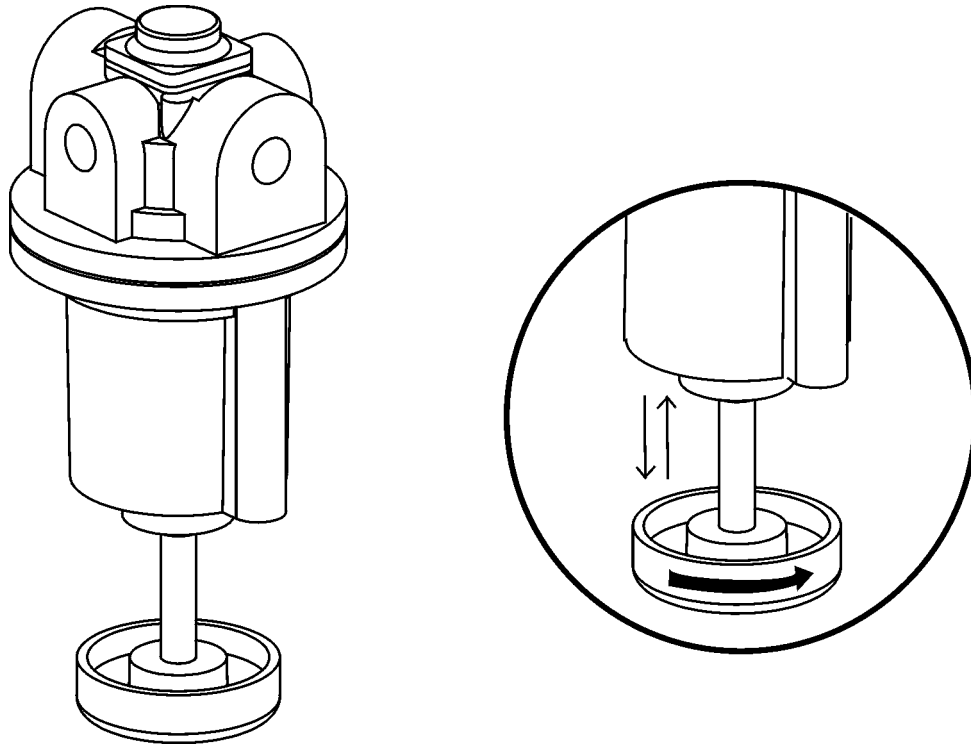


Figure 6-6 Drive Coupling Alignment

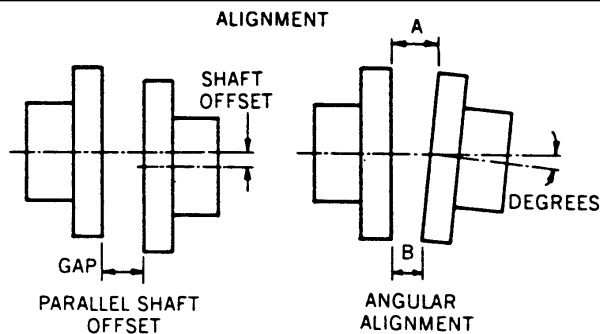

the keys in position being sure that the end of the key is flush with the end of the shaft. Secure the compressor hub on the shaft with setscrews. Place the element between the hubs and push the motor hub to engage the element. After engaging the element, set the motor hub for the proper gap as specified in [Table 6-1 Installation Data](#), and secure the motor hub with a setscrew. When the hub gap is properly set, you will be able to move the element in a slight back and forth motion (unless the coupling is extremely out of alignment).

### STEP 2 - ANGULAR ALIGNMENT

Clean fluid and dirt from the hubs in preparation for angular alignment. Position the dial indicator on the hubs as shown in [Figure 6-8](#). Rotate both hubs

Table 6-1 Installation Data

Parallel Offset inches/mm	Coupling Gap ±.03 in./ .762mm	Max. Operating Misalignment Angular	
		Degrees	inches/ mm (I)
.008/ .02	1.38/ 35.0mm	.025	.005/ 127mm


(I) Angular misalignment in inches equals maximum A minus minimum B as shown in [Figure 6-6](#). **DO NOT** exceed values in [Table 6-1](#) above.

equally to check alignment.

### STEP 3 - PARALLEL OFFSET ALIGNMENT


Reposition the dial indicator as shown in [Figure 6-8](#). Rotate both hubs equally to check for misalignment. Parallel offset alignment is equal to 1/2 the

Figure 6-7 Drive Coupling

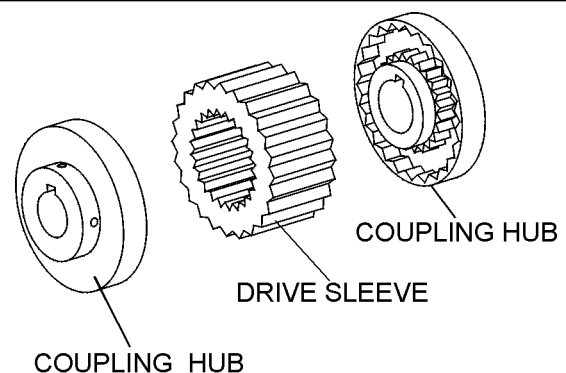

## Section 6 MAINTENANCE

Figure 6-8 Parallel/ Angular Alignment

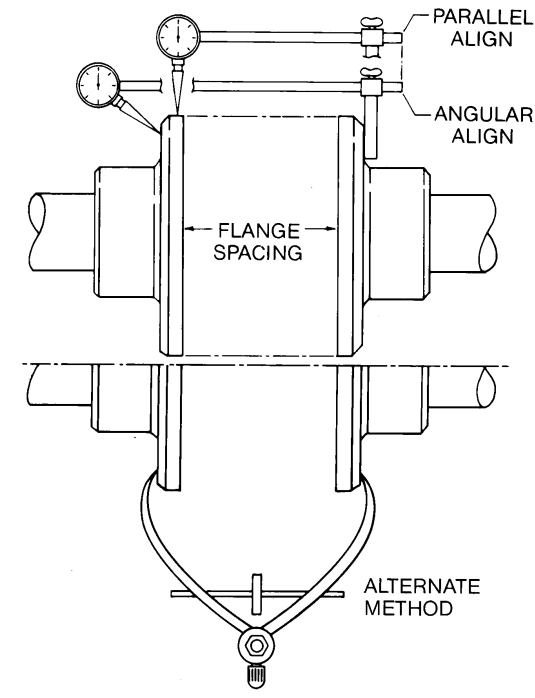

difference in indicator readings of 180° apart or the gap between the hub and straight edge when the alternate method is used. Vertical parallel offset is corrected by the addition or removal of equal amounts of shims under the motor feet while horizontal parallel offset is corrected by sliding the motor sideways.

Angular alignment is indicated by the difference in indicator readings or by the difference in caliper measurements (X) ( $A - B = X$ ). Vertical angular alignment is achieved by placing shims under the front or rear motor feet while horizontal angular alignment is achieved by sliding the motor sideways.

# Section 7 TROUBLESHOOTING

## 7.1 TROUBLESHOOTING

The information contained in the Troubleshooting chart is based upon both actual applied situations and extensive testing at the factory. It contains symptoms and usual causes for the described problems. However, **DO NOT** assume that these are the only problems that may occur. All available data concerning the trouble should be systematically analyzed before undertaking any repair or component replacement procedures.

A detailed visual inspection is worth performing for almost any problems which may prevent unnece-

sary damage to the compressor. Always remember to:

- a. Check for loose wiring.
- b. Check for damaged piping.
- c. Check for parts damaged by heat or an electrical short circuit, usually apparent by discoloration or a burnt odor.

Should your problem persist after making the recommended check, consult your nearest Sullair representative or the Sullair Corporation factory.

## 7.2 TROUBLESHOOTING GUIDE

SYMPTOM	PROBABLE CAUSE	REMEDY
COMPRESSOR WILL NOT START	Main Disconnect Switch Open	Close switch.
	Line Fuse Blown	Replace fuse.
	Control Transformer Fuse Blown	Replace fuse.
	Motor Starter Overloads Tripped	Reset. Should trouble persist, check whether motor starter contacts are functioning properly.
	Low Incoming Line Voltage	Check voltage. Should voltage check low, consult power company.
COMPRESSOR SHUTS DOWN	Loss of Control Voltage	Reset. If trouble persists, check that line pressure does not exceed maximum operating pressure of the compressor (specified on nameplate).
	Low Incoming Voltage	Consult power company.
	Excessive Operating Pressure	Separator requires maintenance; check dP1 under full load conditions.  Defective blowdown solenoid valve; repair if defective (kit available).  Defective blowdown valve; blowdown valve should exhaust sump pressure to the atmosphere when maximum operating pressure is reached. Repair or replace as necessary (kit available).
	P1 High Pressure Shutdown Parameter is Adjusted Too Low	Readjust MAX P1 setpoint appropriately.
	High Discharge Temperature	Cooling water temperature too high; increase water flow (water-cooled).  Cooling water flow insufficient; check water lines and valves. (water-cooled).

# Section 7 TROUBLESHOOTING

## 7.2 TROUBLESHOOTING GUIDE(CONTINUED)

SYMPTOM	PROBABLE CAUSE	REMEDY
COMPRESSOR SHUTS DOWN (CONTINUED)	High Discharge Temperature (Cont.)	Cooler plugged; clean tubes. If plugging persists, install water conditioner. (water-cooled).
		Low fluid level; add fluid.
		Clogged filter; change the fluid filter element if maintenance indicator shows red, and/or dP2 on controller indicates high dP.
		Thermal valve not functioning properly; replace element.
		Cooling air flow restricted; clean cooler and check for proper ventilation (air-cooled).
		Ambient temperature too high; provide sufficient ventilation (air-cooled).
	RTD probe out of calibration, or bad RTD. Replace if necessary.	
	Low Fluid Pressure	Clogged filter; replace fluid filter element
	Low Water Pressure	Check water lines and valves (water-cooled).
COMPRESSOR WILL NOT BUILD UP FULL DISCHARGE PRESSURE	Air Demand is Too Great	Check service lines for leaks or open valves.
	Dirty Air Filter	Check the filter indicator and change or clean element if required.
	Defective Pilot Pressure Regulator	Check diaphragm and replace if necessary (kit available).
	Defective Minimum Pressure Valve	Check that the piston is moving freely.
	Defective Control Inlet Solenoid Valve	Repair or replace.
LINE PRESSURE RISES ABOVE P2 PRESSURE	Leak in Control System Causing Loss of Pressure Signals	Check for leaks.
	Defective Blowdown Solenoid Valve	Repair or replace if necessary (kit available).
	Defective Blowdown Valve	Check that sump pressure is exhausted to the atmosphere when the unload pressure setting on Supervisor is met, or repair or replace if necessary (kit available).
EXCESSIVE COMPRESSOR LUBRICANT CONSUMPTION	Clogged Return Line or Orifice	Clean strainer (screen and o-ring replacement kit available).
		Clean orifice.
	Separator Elements Damaged or Not Functioning Properly	Change separator elements.

## Section 7 TROUBLESHOOTING

### 7.2 TROUBLESHOOTING GUIDE (CONTINUED)

SYMPTOM	PROBABLE CAUSE	REMEDY
EXCESSIVE COMPRESSOR-LUBRICANT CONSUMPTION (CONTINUED)	Leak in the Lubrication System	Check all pipes, connections and components.
	Excessive Fluid Foaming	Drain fluid and change.
	Fluid Level Too High	Drain excess fluid.
SUMP PRESSURE RELIEF VALVE OPENS REPEATEDLY	High Pressure Shutdown Parameter is Out of Adjustment	Readjust below pressure relief valve setting.
	Defective Pressure Relief Valve	Replace pressure relief valve.
	Defective Pressure Transducer	Recalibrate or replace.
	Defective Minimum Pressure Valve	Repair or replace.
	High Separator Differential (dP1)	Replace separator elements.
	Defective Blowdown Valve	Repair or replace (kit available).
	Defective Blowdown Solenoid Valve	Repair or replace (kit available).
INTERSTAGE PRESSURE RELIEF VALVE OPENS REPEATEDLY	Plugged or Frozen Control Lines	Replace or thaw as needed.
	Defective Discharge Check Valve	Repair or replace (kit available).
	Defective Oil Stop Valve	Repair or replace (kit available).
	Defective Pressure Relief Valve	Replace pressure relief valve.

# NOTES

## Section 8

# ILLUSTRATIONS AND PARTS LIST

### 8.1 PROCEDURE FOR ORDERING PARTS

Parts should be ordered from the nearest Sullair Representative or the Representative from whom the compressor was purchased. If for any reason parts cannot be obtained in this manner, contact the factory directly at the addresses, phone or fax numbers below. When ordering parts always indicate the Serial Number of the compressor. This can be obtained from the Bill of Lading for the compressor or from the Serial Number Plate located on the compressor.

**SULLAIR ASIA, LTD.**  
 Sullair Road, No. 1  
 Chiwan, Shekou  
 Shenzhen, Guangdong PRV.  
 PRC POST CODE 518068  
 Telephone: 755-6851686  
 Fax: 755-6853473  
[www.sullair-asia.com](http://www.sullair-asia.com)

**SULLAIR CORPORATION**  
 3700 East Michigan Boulevard  
 Michigan City, Indiana 46360 U.S.A.  
[www.sullair.com](http://www.sullair.com)  
 Telephone: 1-800-SULLAIR (U.S.A. Only)  
 or 1-219-879-5451  
 Fax: (219) 874-1273

**PARTS DEPARTMENT**  
 Fax: (219) 874-1835  
[www.sullair.com/parts.shtm](http://www.sullair.com/parts.shtm)

**SERVICE DEPARTMENT**  
 Fax: (219) 874-1205  
[www.sullaircompressors.com](http://www.sullaircompressors.com)

**SULLAIR EUROPE, S.A.**  
 Zone Des Granges BP 82  
 42602 Montbrison Cedex, France  
 Telephone: 33-477968470  
 Fax: 33-477968499  
[www.sullaireurope.com](http://www.sullaireurope.com)

### 8.2 SPARE PARTS LIST- LS16T

DESCRIPTION	KIT NUMBER	QTY
Replacement element for primary separator (I)(II)	250042-862	2
Replacement element for secondary separator (I)(II)	250034-118	2
Replacement element for inlet filter 02250059-096 (primary) (I)	02250046-012	1
Replacement element for inlet filter 02250059-096 (secondary) (I)	02250046-013	1
Replacement element for fluid filter 02250121-658 (I)	02250121-657	1
Replacement element for control line filter 02250058-442 (I)	02250058-441	1
Repair kit for fluid stop valve 02250113-668	02250116-697	1
Repair kit for minimum pressure valve 250022-735	250022-736	1
Repair kit for inlet valve 02250083-783 (III)	250029-249	1
Repair kit for unit discharge check valve 016732B (IV)	606208-001	1
Repair kit for blowdown valve 045116	047524	1
Repair kit for pressure regulator 048059 (I)	048409	1
Repair kit for pressure regulator 045099 (I)	048409	1
Repair kit for pressure regulator 02250139-030 (I)	02250139-037	1
Repair kit for solenoid valve 407390 (I)	02250053-830	1
Replacement coil for solenoid valve 407390	250031-431	1

(Continued on page 50)

(I) Recommended spare parts.

(II) When performing maintenance on separator elements, if required, order (lid cover) gasket no. 250006-536.

(III) When performing maintenance on inlet valve, if required, order gasket no. 040708.

(IV) When performing maintenance on inlet valve assembly (discharge check valve), if required, order 2 1/2" gasket no. 240620-007, and 3" gasket no. 240620-008.

---

**PLEASE NOTE: WHEN ORDERING PARTS, INDICATE SERIAL NUMBER OF COMPRESSOR**

## Section 8

# ILLUSTRATIONS AND PARTS LIST

### 8.2 SPARE PARTS LIST- LS16T (CONTINUED)

DESCRIPTION	KIT NUMBER	QTY
Replacement drive-coupling element (I)(V)	02250075-399	1
Replacement filter assembly for sight-glass	02250117-782	2
Replacement parts for thermal valve:		
seal, u-cup	02250101-372	1
element, (220°F)	250001-349	1
o-ring, viton	826502-144	1
Repair kit for shaft seal	001934A	1
Sullube fluid (5-gal can)	250022-669	30-gal
Sullube fluid (55-gal drum) (I)	250022-670	30-gal

(I) Recommended spare parts.

(V) Due to custom motor requests, drive-coupling elements may vary. Consult factory for correct size/component.


---

**PLEASE NOTE: WHEN ORDERING PARTS, INDICATE SERIAL NUMBER OF COMPRESSOR**

# NOTES

# Section 8 ILLUSTRATIONS AND PARTS LIST

## 8.3 MOTOR, FRAME, COMPRESSOR AND PARTS- 100-125HP

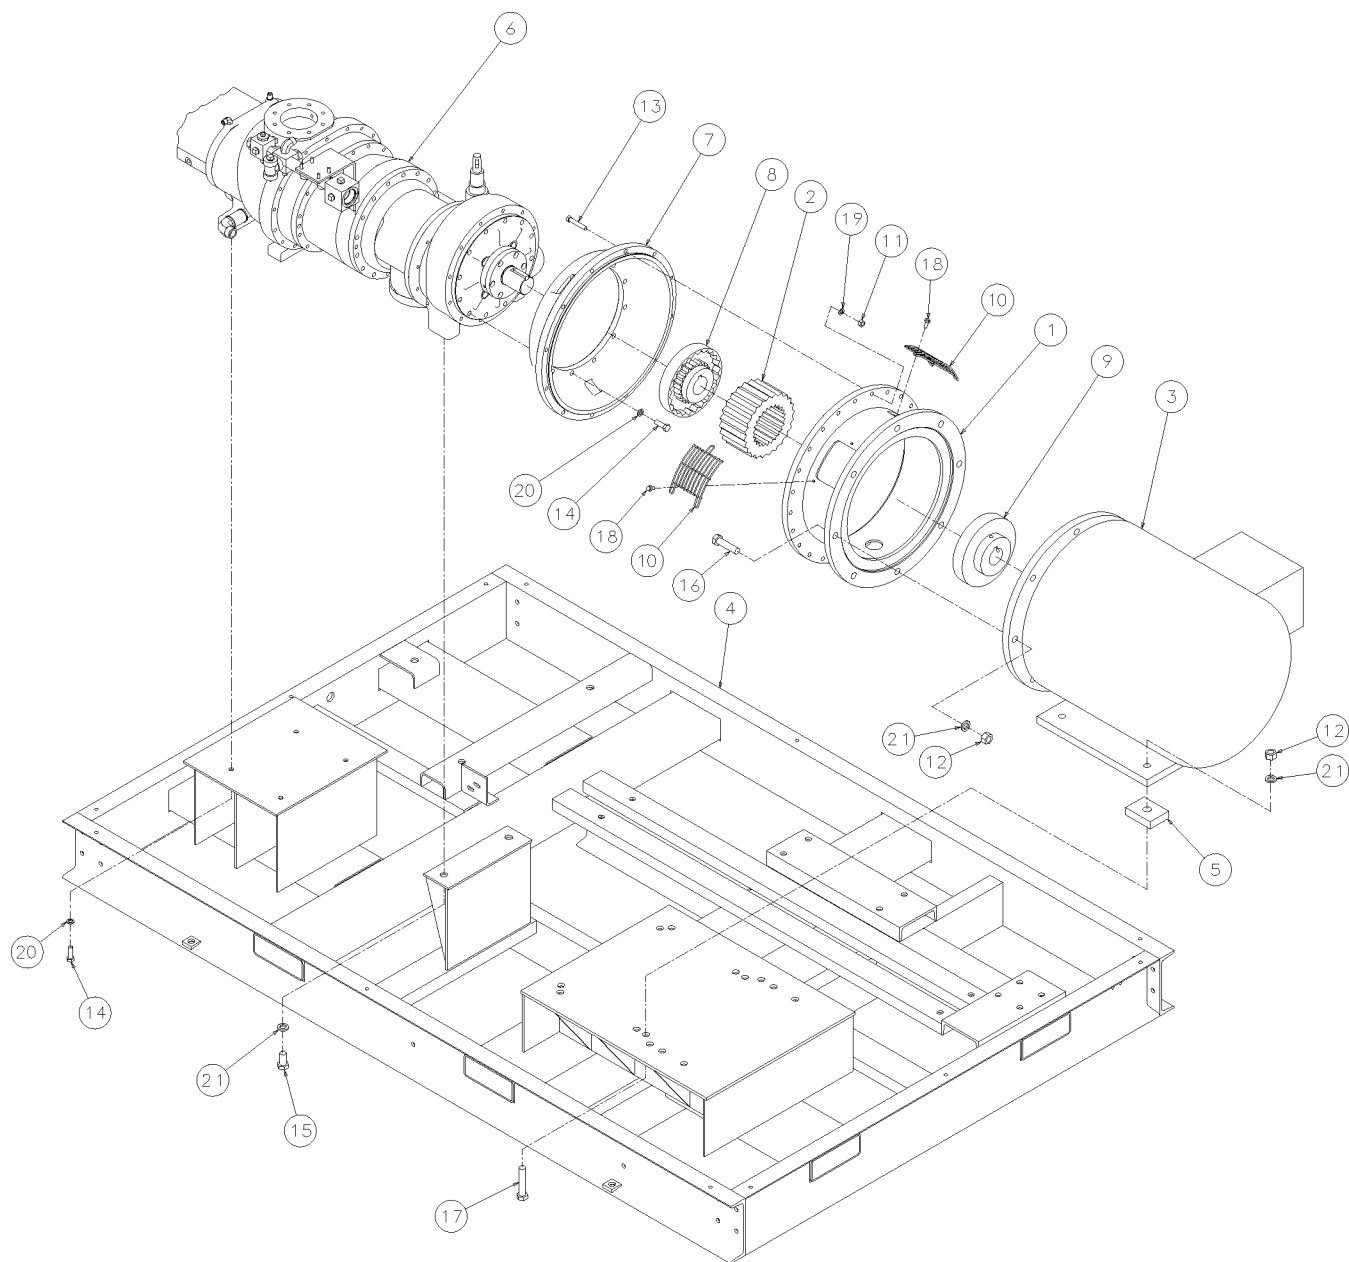

02250134-194R00

## Section 8

# ILLUSTRATIONS AND PARTS LIST

### 8.3 MOTOR, FRAME, COMPRESSOR AND PARTS- 100-125HP

<i>key number</i>	<i>description</i>	<i>part number</i>	<i>quantity</i>
1	adapter, mtr/compr LS20T	013702	1
2	sleeve, 11h hytel (I)	02250075-399	1
3	motor, 100 horse power 460/60 4pyd tepe	02250134-203	1
4	frame, base LS16T-100/200a	02250134-388	1
5	bar, mtr supt 3x4x1"thk	028084	4
6	unit, compressor LS16T (II)	-	1
7	adaptor, sae 1 dhh16 gi ma	232859	1
8	hub, coupling 11su 2-1/4" bore	250001-614	1
9	hub, coupling #11su 2-1/8id	250034-420	1
10	guard, adapter mtr/compr 20/12	250042-780	2
11	nut, hex pltd 7/16-14	825207-385	12
12	nut, hex pltd 3/4-10	825212-665	12
13	capscr, hex gr5 7/16-14 x 2 1/2	829107-250	12
14	capscr, hex gr5 1/2-13 x 1 1/2	829108-150	16
15	capscr, hex gr5 3/4-10 x 1 1/2	829112-150	2
16	capscr, hex gr5 3/4-10 x 3	829112-300	8
17	capscr, hex gr5 3/4-10 x 3 3/4	829112-375	4
18	screw, hex ser washer 5/16-18 x 3/4	829705-075	6
19	washer, spr lock reg pltd 7/16	837807-112	12
20	washer, spr lock reg pltd 1/2	837808-125	16
21	washer, spr lock reg pltd 3/4	837812-188	14

(I) For maintenance on drive coupling sleeve, order replacement sleeve no. 02250075-399. **NOTE:** Due to custom motor requests, drive-coupling elements may vary. To verify correct replacement sleeve part number, consult factory with serial number of machine.

(II) There is an exchange program whereby a remanufactured compressor unit can be obtained from Sullair distributors or the factory at less cost than the owner could repair the unit. For information regarding the unit exchange program, contact your nearest Sullair representative or the Sullair Corporation.


The shaft seal is not considered part of the compressor unit in regard to the two year warranty. The normal Sullair parts warranty applies. For shaft seal repairs order repair kit no. 001934A.

---

**PLEASE NOTE: WHEN ORDERING PARTS, INDICATE THE SERIAL NUMBER OF COMPRESSOR**

# Section 8 ILLUSTRATIONS AND PARTS LIST

## 8.4 MOTOR, FRAME, COMPRESSOR AND PARTS- 150-200HP

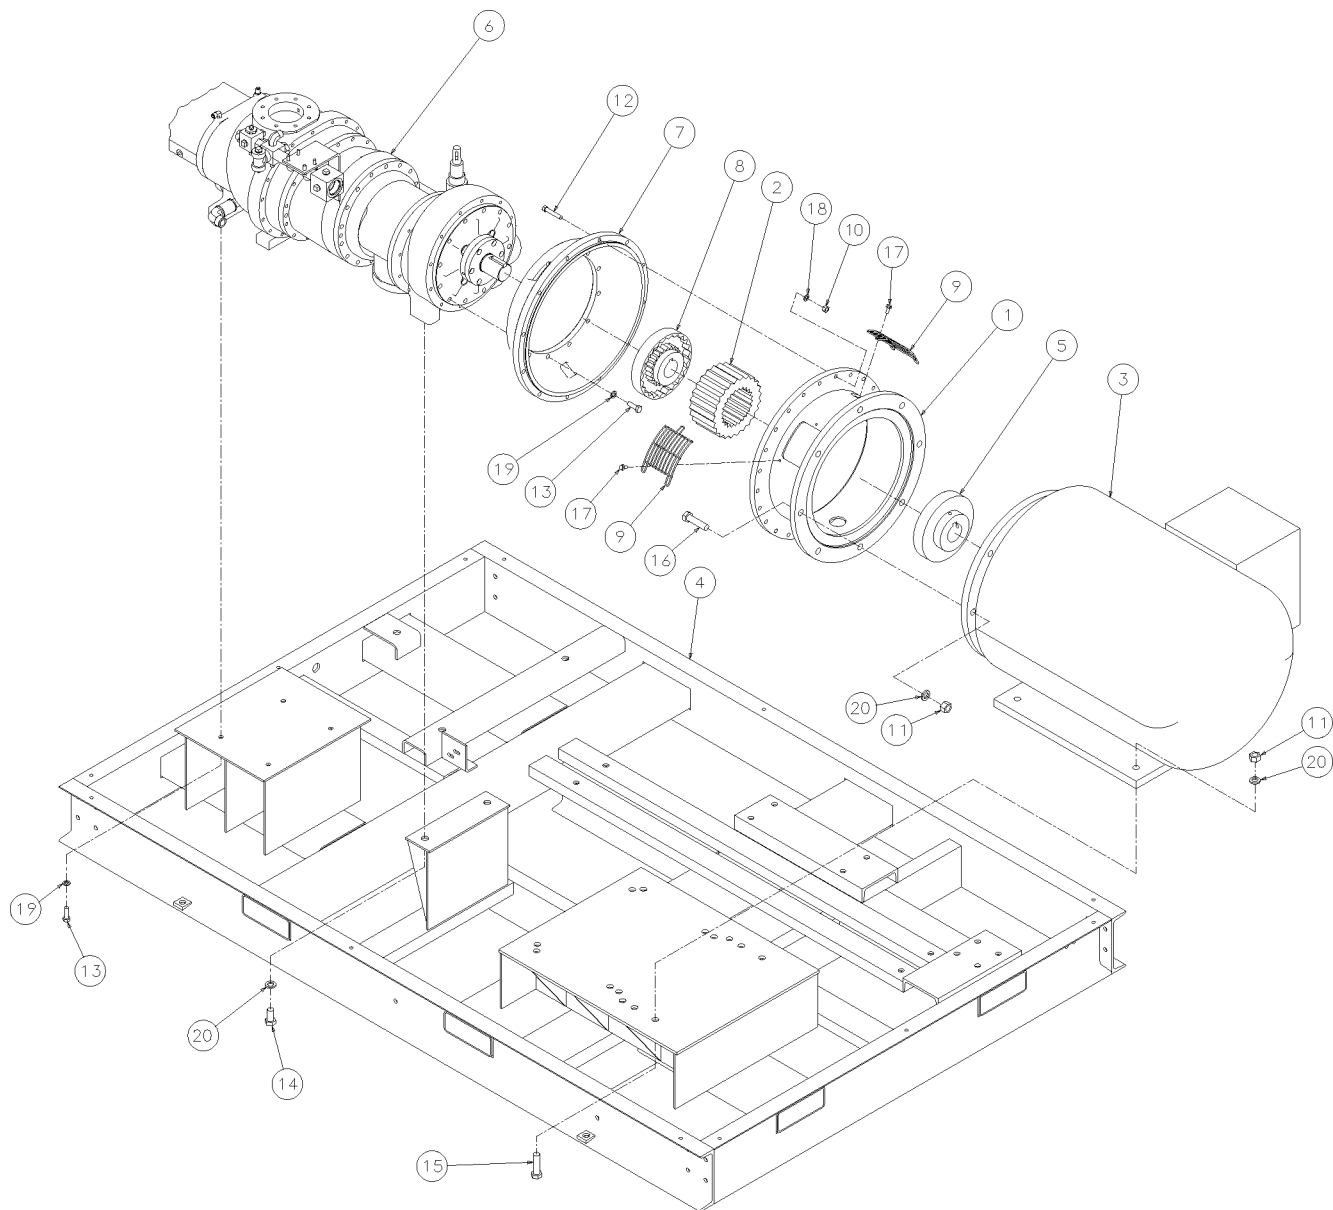

02250134-195R00

## Section 8

# ILLUSTRATIONS AND PARTS LIST

### 8.4 MOTOR, FRAME, COMPRESSOR AND PARTS- 150-200HP

<i>key number</i>	<i>description</i>	<i>part number</i>	<i>quantity</i>
1	adapter, mtr/compr LS20T	013702	1
2	sleeve, 11h hytel <b>(I)</b>	02250075-399	1
3	motor, 200 horse power 460/60 4pyd tepe	02250134-204	1
4	frame, base LS16T-100/200a	02250134-388	1
5	hub, coupling 11 su 2-3/8"bore	049923	1
6	unit, compressor LS16T <b>(II)</b>	-	1
7	adaptor, sae 1 dhh16 gi ma	232859	1
8	hub, coupling 11su 2-1/4" bore	250001-614	1
9	guard, adapter mtr/compr 20/12	250042-780	2
10	nut, hex pltd 7/16-14	825207-385	12
11	nut, hex pltd 3/4-10	825212-665	12
12	capscr, hex gr5 7/16-14 x 2 1/2	829107-250	12
13	capscr, hex gr5 1/2-13 x 1 1/2	829108-150	16
14	capscr, hex gr5 3/4-10 x 1 1/2	829112-150	2
15	capscr, hex gr5 3/4-10 x 2 3/4	829112-275	4
16	capscr, hex gr5 3/4-10 x 3	829112-300	8
17	screw, hex ser washer 5/16-18 x 3/4	829705-075	6
18	washer, spr lock reg pltd 7/16	837807-112	12
19	washer, spr lock reg pltd 1/2	837808-125	16
20	washer, spr lock reg pltd 3/4	837812-188	14

**(I)** For maintenance on drive coupling sleeve, order replacement sleeve no. 02250075-399. For maintenance on drive coupling sleeve, order replacement sleeve no. 02250075-399. **NOTE:** Due to custom motor requests, drive-coupling elements may vary. To verify correct replacement sleeve part number, consult factory with serial number of machine.

**(II)** There is an exchange program whereby a remanufactured compressor unit can be obtained from Sullair distributors or the factory at less cost than the owner could repair the unit. For information regarding the unit exchange program, contact your nearest Sullair representative or the Sullair Corporation.


The shaft seal is not considered part of the compressor unit in regard to the two year warranty. The normal Sullair parts warranty applies. For shaft seal repairs order repair kit no. 001934A.

---

**PLEASE NOTE: WHEN ORDERING PARTS, INDICATE THE SERIAL NUMBER OF COMPRESSOR**

# Section 8 ILLUSTRATIONS AND PARTS LIST

## 8.5 AIR INLET SYSTEM

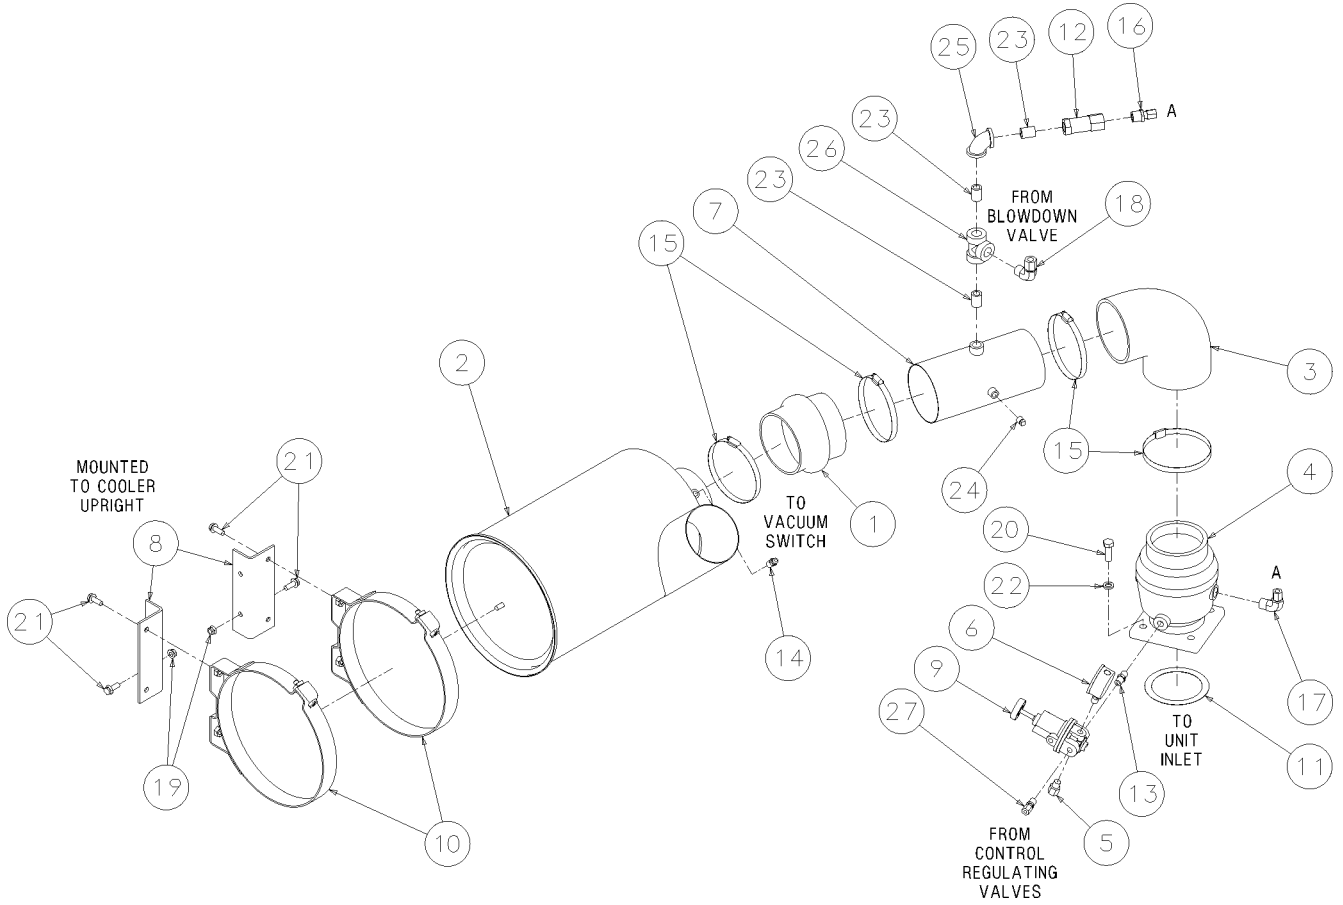

## Section 8 ILLUSTRATIONS AND PARTS LIST

### 8.5 AIR INLET SYSTEM

<i>key</i> number	description	<i>part</i> number	quantity
1	hose, hump- straight 5" id	02250045-989	1
2	filter, air inlet <b>(I)</b>	02250059-096	1
3	elbow, rub 90deg 5" id	02250061-835	1
4	valve, air inlet 4" for sesa <b>(II)</b>	02250083-783	1
5	orifice, .040 1/4fnpt x 1/4mnpt	02250091-395	1
6	gage, air press 2 1/2" 0-200 psi	02250117-009	1
7	tube, air inlet LS16T 5" w/ports	02250135-049	1
8	support, fltr-LS16T st hd	02250135-050	2
9	valve, pressure reducing 1/4" vit 2-150# <b>(III)</b>	02250139-030	1
10	band, receiver 12.0" dia.	040081	2
11	gasket, 1/32 x 5 1/4odx4 1/8id <b>(IV)</b>	040708	1
12	valve, check 1/2"	042694	1
13	nipple, hx tbe 316s 1/4"	250018-760	1
14	connector, tube-strrt 1/4mnpt x1/4"t	250024-685	1
15	clamp, hose 6"dia worm drive	408153	4
16	connector, tube-m 3/8 x 1/2	810206-050	1
17	elbow, tube 90 deg m 3/8 x 1/2	810506-050	1
18	elbow, tube 90 deg m 1/2 x 1/2	810508-050	1
19	nut, hex f pltd 3/8-16	825306-347	4
20	capscr, hex gr5 1/2-13 x 1 1/2	829108-150	4
21	screw, hex ser washer 3/8-16 x 1"	829706-100	8
22	washer, spr lock reg pltd 1/2	837808-125	4
23	nipple, pipe-xs plt 1/2 x cl	866408-000	3
24	plug, pipe 1/4" 3000# stl plt	866900-010	1
25	elbow, pipe 90 deg 300# plt 1/2"	867030-020	1
26	tee, pipe pltd 1/2	868430-020	1
27	connector, tube-m 1/4 x 1/4 ss	876804-025	1

**(II)** For maintenance on air filter no. 02250059-096, order primary replacement element no. 02250046-012 and secondary replacement element no. 02250046-013.

**(I)** For maintenance on air inlet valve assembly no. 02250083-873, order repair kit no. 250029-249. **NOTE:** See footnote *(IV)* below.

**(III)** For maintenance on pressure reducing valve no. 02250139-030, order repair kit no. 02250139-037.


**(IV)** When performing maintenance on inlet valve, if required, order gasket no. 040708.

---

**PLEASE NOTE: WHEN ORDERING PARTS, INDICATE THE SERIAL NUMBER OF COMPRESSOR**

# Section 8 ILLUSTRATIONS AND PARTS LIST

## 8.6 FLUID COOLING SYSTEM- 100-125HP AIR-COOLED

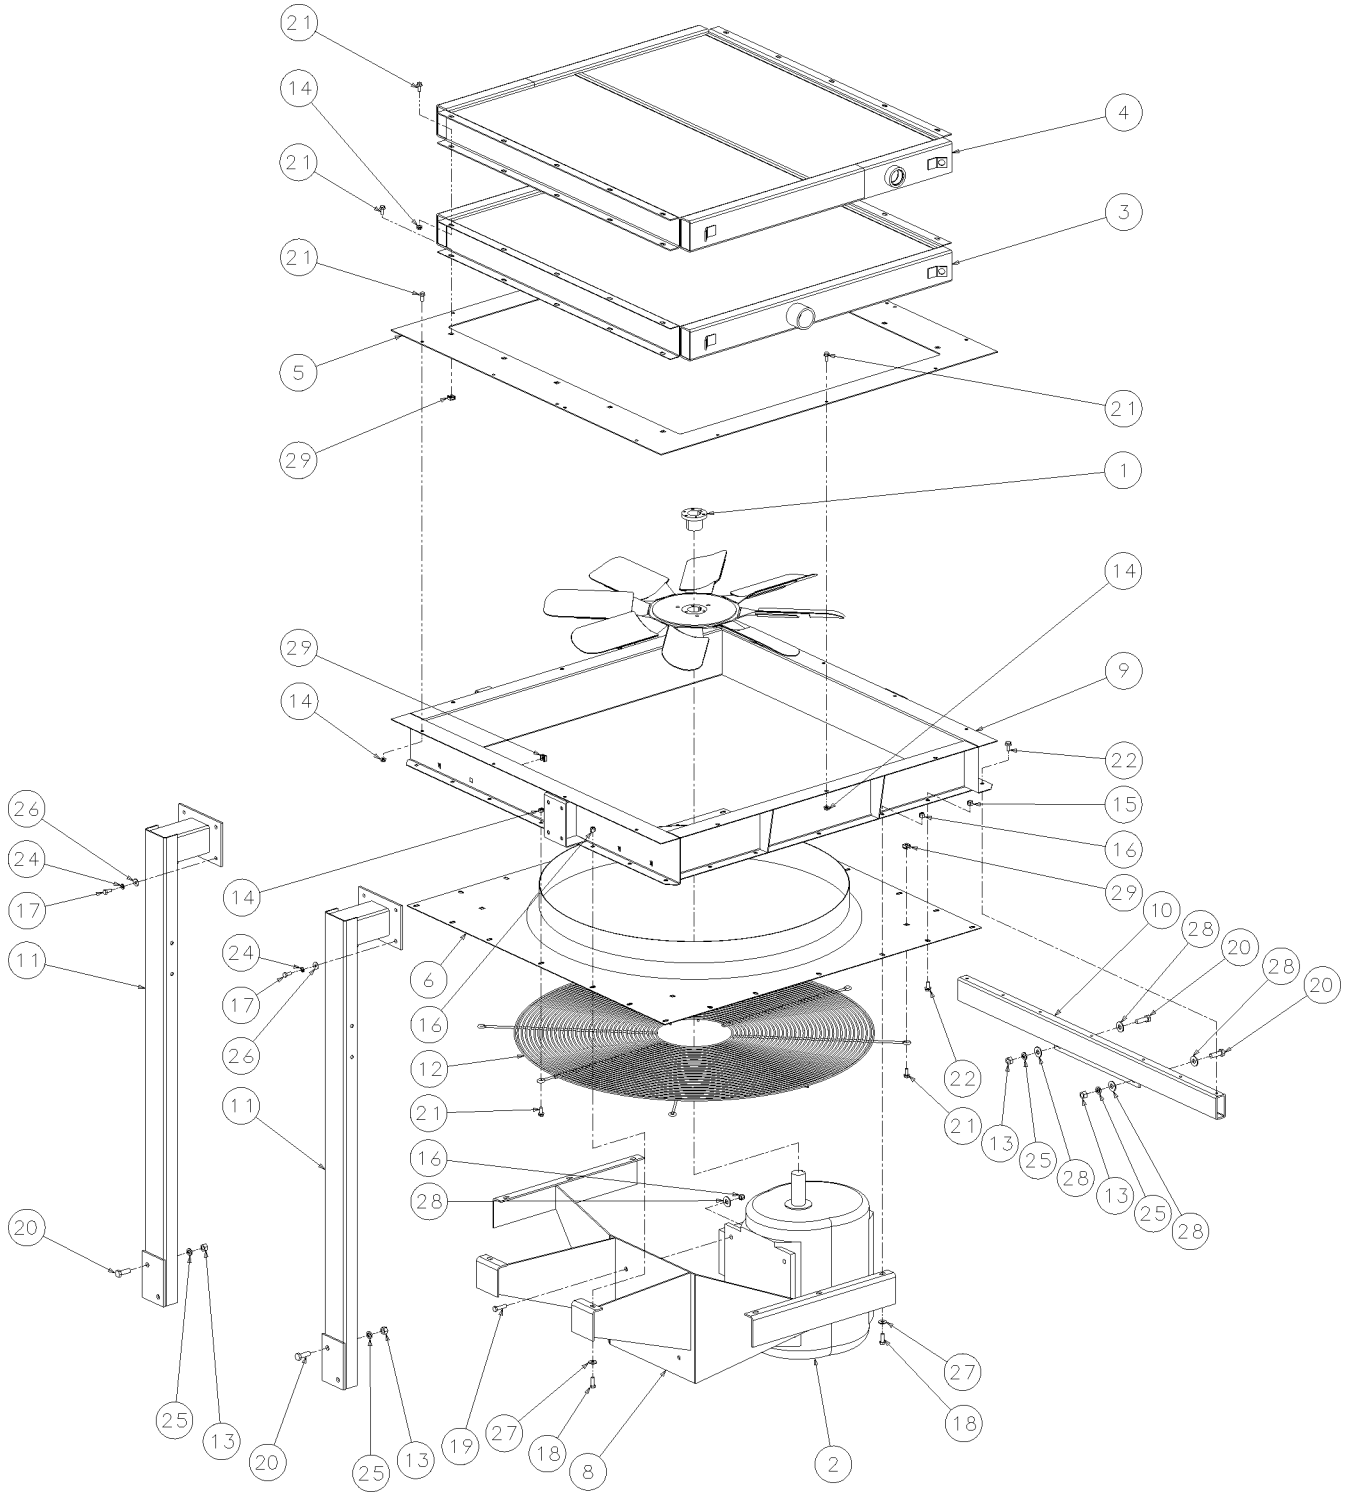

02250138-173R00

## Section 8

# ILLUSTRATIONS AND PARTS LIST

### 8.6 FLUID COOLING SYSTEM- 100-125HP AIR-COOLED


<i>key number</i>	<i>description</i>	<i>part number</i>	<i>quantity</i>
1	bushing, split taper p1 1-5/8"brn	02250043-645	1
2	motor, 7.5hp 230/460/60 6p aoep	02250128-791	1
3	cooler, aftclr 500# 2"npt stl 16T	02250138-182	1
4	cooler, oil 500# 1 7/8 sae stl LS16T	02250138-183	1
5	plate, adapter clrpk LS16T-100/125a	02250138-221	1
6	panel, venturi 36" LS16T-100/125a	02250139-054	1
7	fan, 36" cw rotation	250022-605	1
8	support, fan mtr 20/12-200/300	250041-048	1
9	adapter, venturi/aftclr-20/12	250041-106	1
10	support, clr assy-20/12	250041-116	1
11	support, clr assy-20/12	250041-119	2
12	guard, fan 20/12-500/750 cfm	250042-676	1
13	nut, hex pltd 1/2-13	825208-448	6
14	nut, hex f pltd 5/16-18	825305-283	28
15	nut, hex f pltd 3/8-16	825306-347	14
16	nut, hex locking 3/8-16	825506-198	12
17	capscr, hex gr5 5/16-18 x 3/4	829105-075	8
18	capscr, hex gr5 3/8-16 x 1	829106-100	8
19	capscr, hex gr5 3/8-16 x 1 1/2	829106-150	4
20	capscr, hex gr5 1/2-13 x 1 1/2	829108-150	6
21	screw, hex ser washer 5/16-18 x 3/4	829705-075	42
22	screw, hex ser washer 3/8-16 x 3/4	829706-075	21
23	washer, spr lock reg pltd 1/4	837804-062	1
24	washer, spr lock reg pltd 5/16	837805-078	8
25	washer, spr lock reg pltd 1/2	837808-125	6
26	washer, pl-b reg pltd 5/16	838205-071	8
27	washer, pl-b reg pltd 3/8	838206-071	8
28	washer, pl-b reg pltd 1/2	838208-112	8
29	nut, retainer 5/16-18 .092	861405-092	22

---

**PLEASE NOTE: WHEN ORDERING PARTS, INDICATE THE SERIAL NUMBER OF COMPRESSOR**

# Section 8 ILLUSTRATIONS AND PARTS LIST

## 8.7 FLUID COOLING SYSTEM- 150-200HP AIR-COOLED

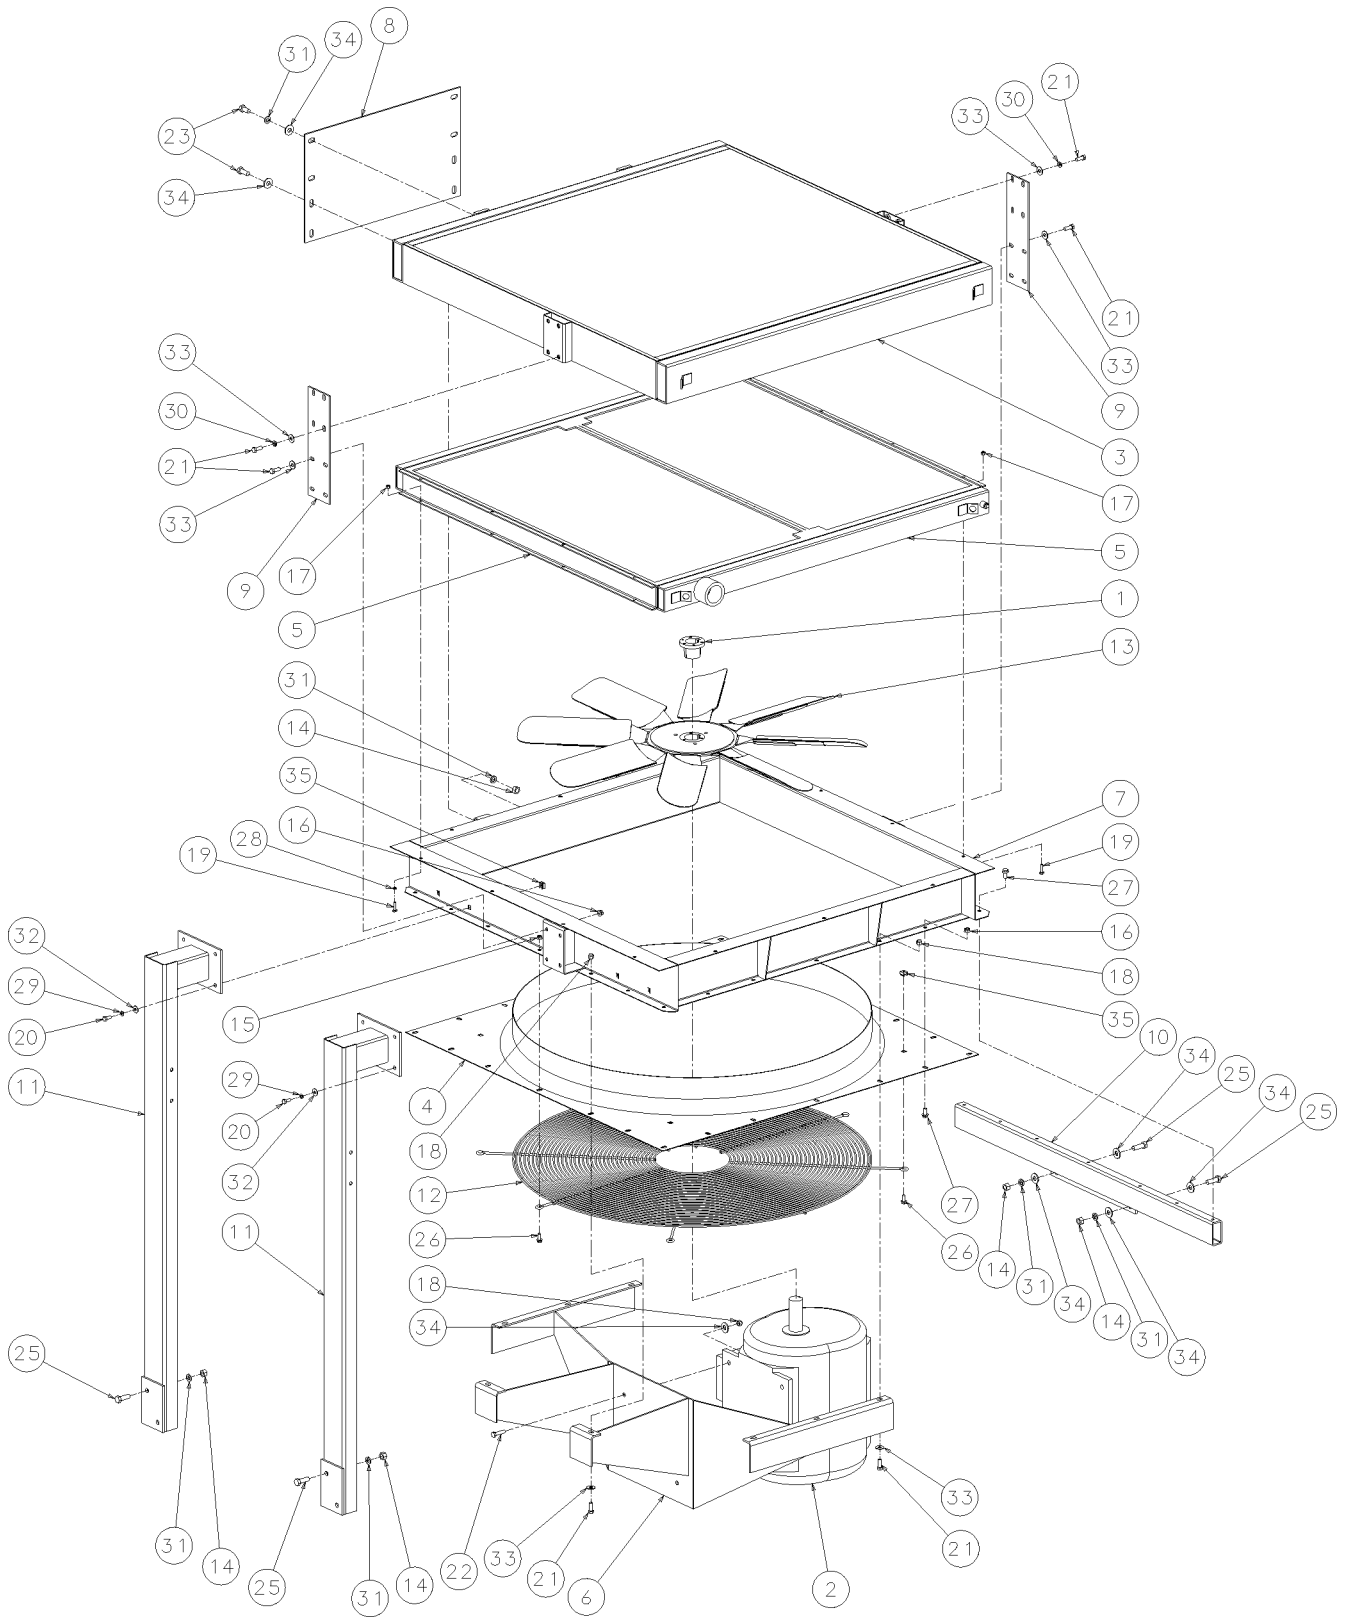

02250134-189R00

## Section 8

# ILLUSTRATIONS AND PARTS LIST

### 8.7 FLUID COOLING SYSTEM- 150-200HP AIR-COOLED


<i>key number</i>	<i>description</i>	<i>part number</i>	<i>quantity</i>
1	bushing, split taper p1 1-5/8"brn	02250043-645	1
2	motor, 7.5hp 230/460/60 6p aoep	02250128-791	1
3	cooler, oil/air 500# steel 20T/16T	02250135-021	1
4	panel, venturi 42"32-200/250	250001-202	1
5	aftclr, 750/350psi	250008-938	1
6	support, fan mtr 20/12-200/300	250041-048	1
7	adapter, venturi/aftclr-20/12	250041-106	1
8	plate, oil clr mtg	250041-110	1
9	plate, oil clr mtg	250041-114	2
10	support, clr assy-20/12	250041-116	1
11	support, clr assy-20/12	250041-119	2
12	guard, fan 20/12-500/750 cfm	250042-676	1
13	fan, 42"d-18500cfm@1.5sp1200rpm	406966	1
14	nut, hex pltd 1/2-13	825208-448	10
15	nut, hex f pltd 5/16-18	825305-283	2
16	nut, hex f pltd 3/8-16	825306-347	22
17	nut, hex locking 1/4-20	825504-145	8
18	nut, hex locking 3/8-16	825506-198	12
19	capscr, hex gr5 1/4-20 x 1	829104-100	8
20	capscr, hex gr5 5/16-18 x 3/4	829105-075	8
21	capscr, hex gr5 3/8-16 x 1	829106-100	24
22	capscr, hex gr5 3/8-16 x 1 1/2	829106-150	4
23	capscr, hex gr5 1/2-13 x 1	829108-100	4
24	capscr, hex gr5 1/2-13 x 1 1/4	829108-125	4
25	capscr, hex gr5 1/2-13 x 1 1/2	829108-150	6
26	screw, hex ser washer 5/16-18 x 3/4	829705-075	6
27	screw, hex ser washer 3/8-16 x 3/4	829706-075	21
28	washer, spr lock reg pltd 1/4	837804-062	8
29	washer, spr lock reg pltd 5/16	837805-078	8
30	washer, spr lock reg pltd 3/8	837806-094	8
31	washer, spr lock reg pltd 1/2	837808-125	14
32	washer, pl-b reg pltd 5/16	838205-071	8
33	washer, pl-b reg pltd 3/8	838206-071	24
34	washer, pl-b reg pltd 1/2	838208-112	16
35	nut, retainer 5/16-18 .092	861405-092	12

---

**PLEASE NOTE: WHEN ORDERING PARTS, INDICATE THE SERIAL NUMBER OF COMPRESSOR**

# Section 8 ILLUSTRATIONS AND PARTS LIST

## 8.8 AIR PIPING SYSTEM- 100-125HP AIR-COOLED

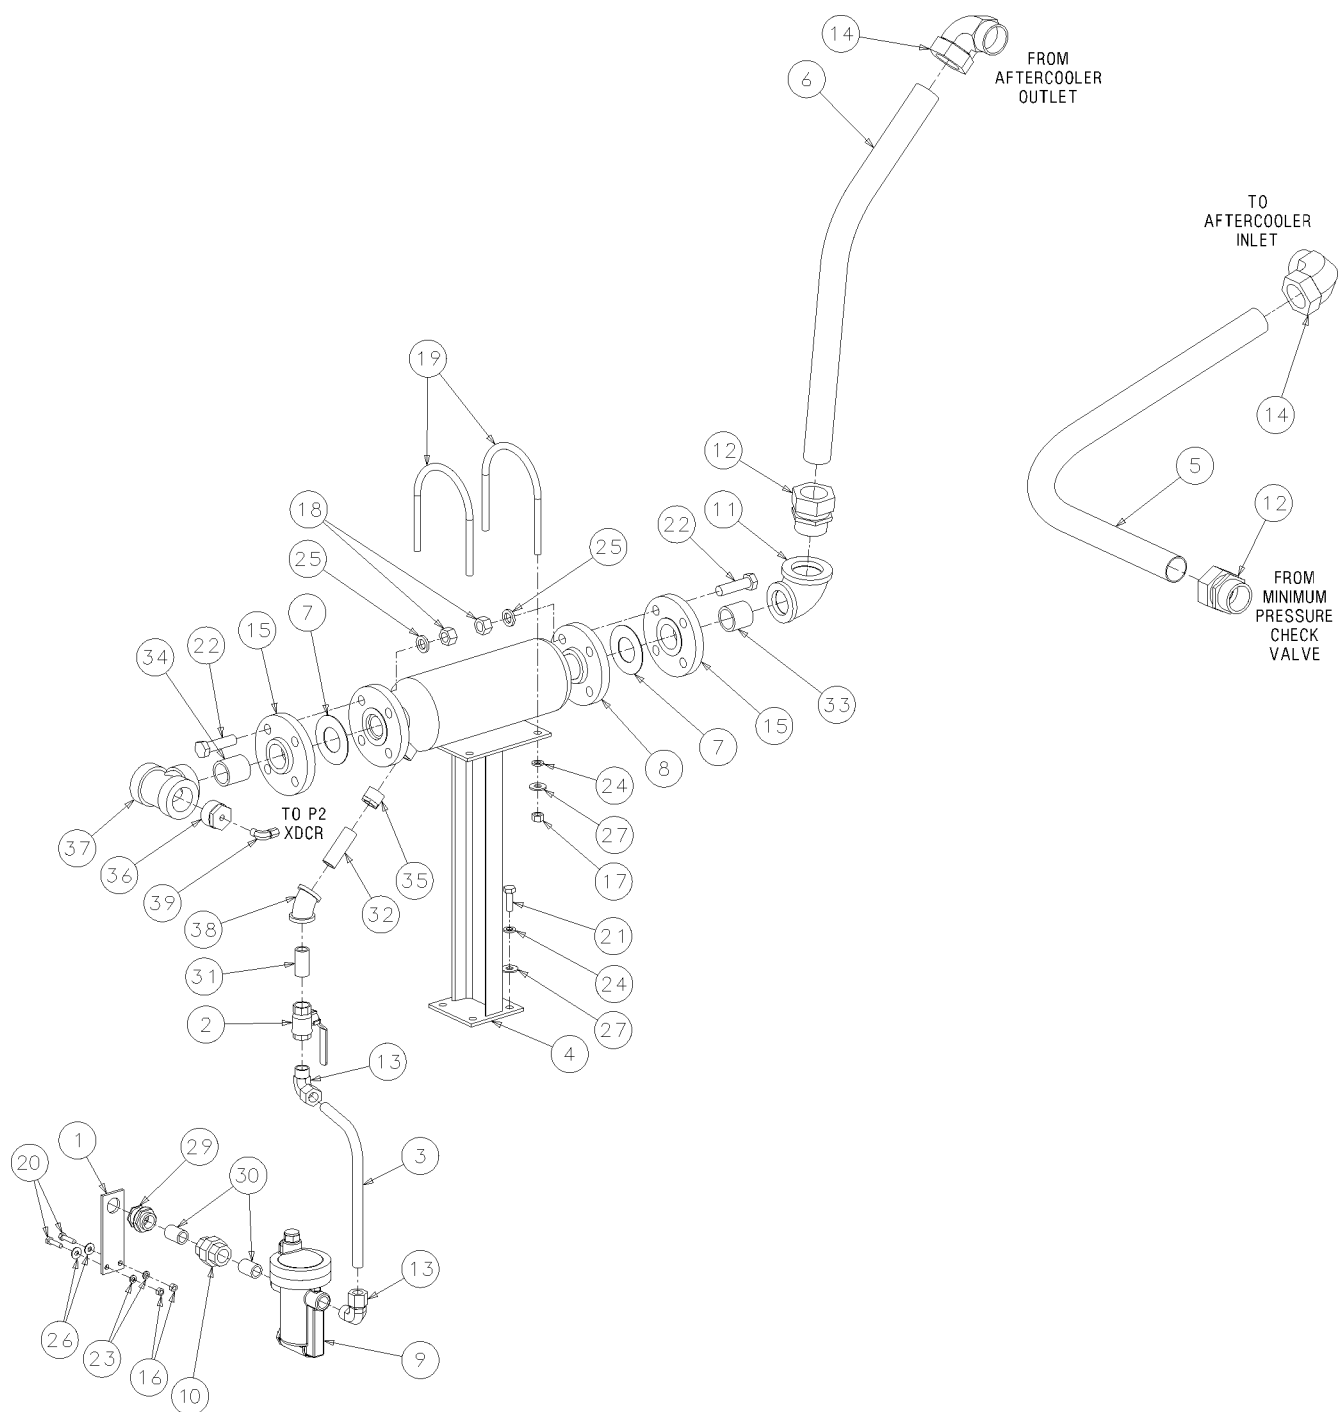

02250138-174R00

## Section 8 ILLUSTRATIONS AND PARTS LIST

### 8.8 AIR PIPING SYSTEM- 100-125HP AIR-COOLED

<i>key number</i>	<i>description</i>	<i>part number</i>	<i>quantity</i>
1	plate, supt-cust conn moist drn	02250112-255	1
2	valve, ball 3/4" npt apollo	02250117-792	1
3	tube, moist drn - LS16T 3/4"	02250134-934	1
4	support, moist sep LS16T 350psi	02250134-953	1
5	tube, separator tnk/ac LS16T 2"	02250138-935	1
6	tube, ac/msep LS16T 2"	02250138-937	1
7	gasket, asa flange 300# 1-1/2"	240620-005	2
8	separator, water 1-1/2" w-a 311	250001-873	1
9	trap, auto 3/4"npt 400# max	250006-639	1
10	union, pipe-brs seat 3/4 300#	805730-030	1
11	elbow, red 2 x 1 1/2 300#	806808-150	1
12	connector, tube-m 2 x 2	810232-200	2
13	elbow, tube 90 deg m 3/4 x 3/4	810512-075	2
14	elbow, tube 90 deg m 2 x 2	810532-200	2
15	flange, thrd 1 1/2" 300# rf	820330-024	2
16	nut, hex pltd 5/16-18	825205-273	2
17	nut, hex pltd 1/2-13	825208-448	4
18	nut, hex pltd 3/4-10	825212-665	8
19	u-bolt, 1/2" x 5" pipe	829008-500	2
20	capscr, hex gr5 5/16-18 x 1 1/4	829105-125	2
21	capscr, hex gr5 1/2-13 x 1 1/2	829108-150	4
22	capscr, hex gr5 3/4-10 x 2 3/4	829112-275	8
23	washer, spr lock reg pltd 5/16	837805-078	2
24	washer, spr lock reg pltd 1/2	837808-125	8
25	washer, spr lock reg pltd 3/4	837812-188	8
26	washer, pl-b reg pltd 5/16	838205-071	2
27	washer, pl-b reg pltd 1/2	838208-112	8
28	tubing, steel 2" 13 ga	841115-032	2 ft.
29	bulkhead, pipe 3/4" npt	841500-012	1
30	nipple, pipe-xs plt 3/4 x 1 1/2	866412-015	2
31	nipple, pipe-xs plt 3/4 x 2	866412-020	1
32	nipple, pipe-xs plt 3/4 x 3	866412-030	1
33	nipple, pipe-xs plt 1 1/2 x cl	866424-000	1
34	nipple,pipe-xs plt 1 1/2 x 2	866424-020	1


(Continued on page 65)

---

**PLEASE NOTE: WHEN ORDERING PARTS, INDICATE THE SERIAL NUMBER OF COMPRESSOR**

# Section 8 ILLUSTRATIONS AND PARTS LIST

## 8.8 AIR PIPING SYSTEM- 100-125HP AIR-COOLED

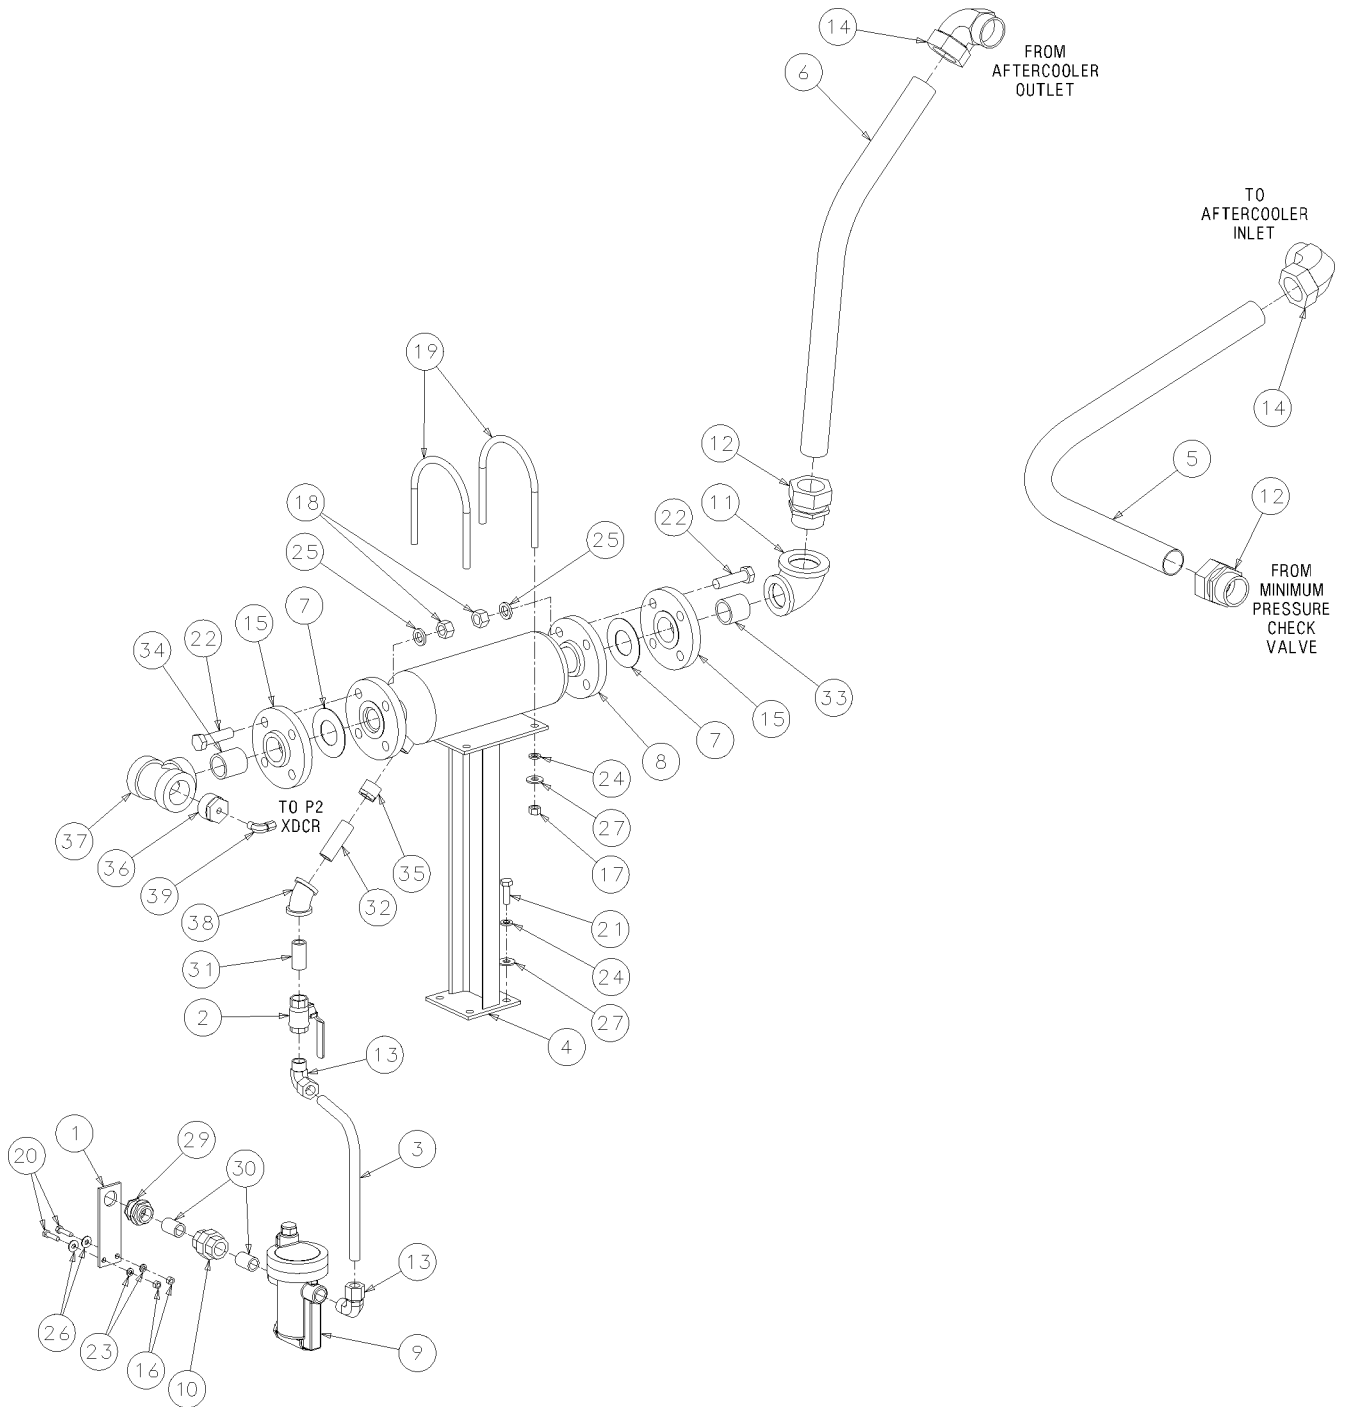

02250138-174R00

## Section 8 ILLUSTRATIONS AND PARTS LIST

### 8.8 AIR PIPING SYSTEM- 100-125HP AIR-COOLED (CONTINUED)


<i>key number</i>	<i>description</i>	<i>part number</i>	<i>quantity</i>
35	bushing, red pltd 1 x 3/4	867104-030	1
36	bushing, red pltd 1 1/2 x 1/4	867106-010	1
37	tee, pipe pltd 1 1/2	868430-060	1
38	elbow, pipe 45 deg 300# plt 3/4"	869430-030	1
39	elbow, tube 90 deg m 1/4 x 1/4 ss	877004-025	1

---

**PLEASE NOTE: WHEN ORDERING PARTS, INDICATE THE SERIAL NUMBER OF COMPRESSOR**

# Section 8 ILLUSTRATIONS AND PARTS LIST

## 8.9 AIR PIPING SYTEM- 150-200HP

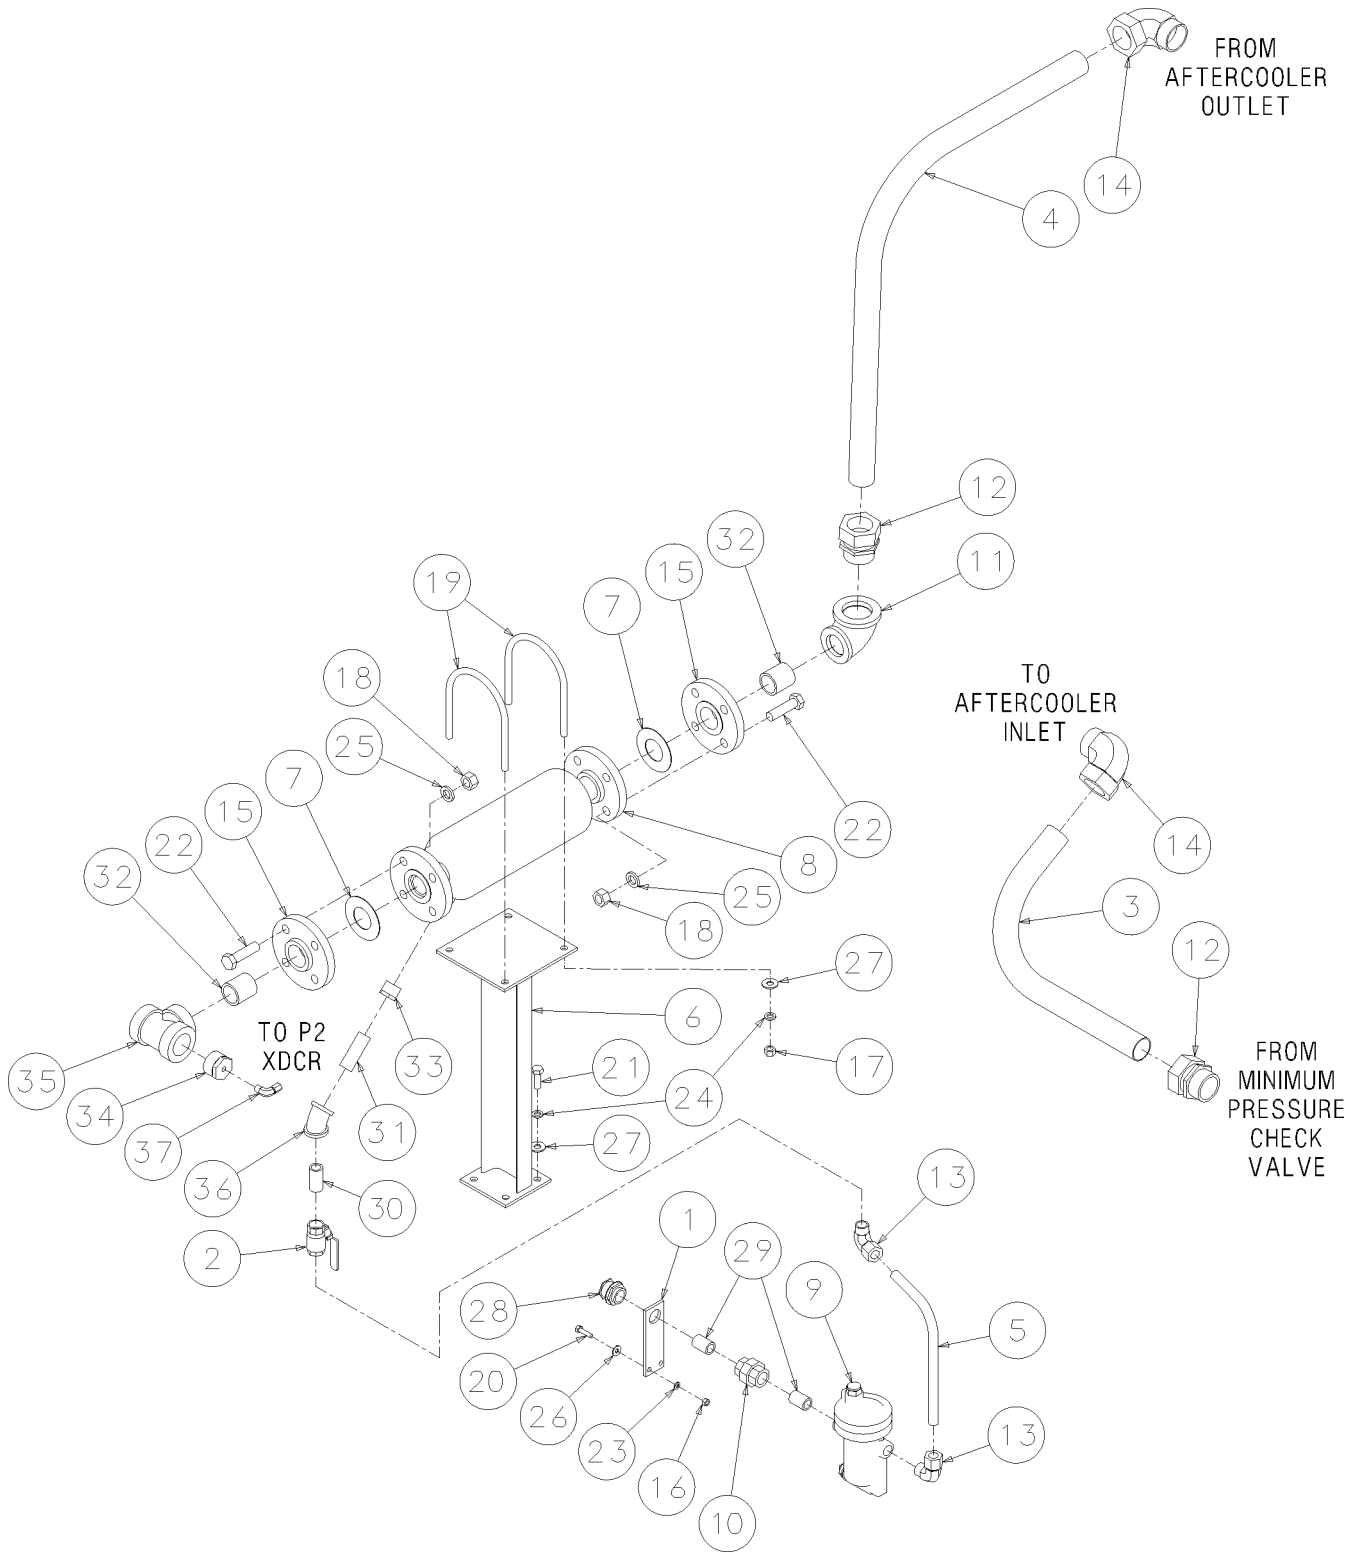

02250134-191R00

## Section 8 ILLUSTRATIONS AND PARTS LIST

### 8.9 AIR PIPING SYTEM- 150-200HP

<i>key number</i>	<i>description</i>	<i>part number</i>	<i>quantity</i>
1	plate, supt-cust conn moist drn	02250112-255	1
2	valve, ball 3/4" npt apollo	02250117-792	1
3	tube, mpv/clr LS16T	02250134-840	1
4	tube, clr/moist sep - LS16T	02250134-910	1
5	tube, moist drn - LS16T 3/4"	02250134-934	1
6	support, moist sep LS16T 350psi	02250134-953	1
7	gasket, asa flange 300# 1-1/2"	240620-005	2
8	separator, water 1-1/2" w-a 311	250001-873	1
9	trap, auto 3/4"npt 400# max	250006-639	1
10	union, pipe-brs seat 3/4 300#	805730-030	1
11	elbow, red 2 x 1 1/2 300#	806808-150	1
12	connector, tube-m 2 x 2	810232-200	2
13	elbow, tube 90 deg m 3/4 x 3/4	810512-075	2
14	elbow, tube 90 deg m 2 x 2	810532-200	2
15	flange, thrd 1 1/2" 300# rf	820330-024	2
16	nut, hex pltd 5/16-18	825205-273	2
17	nut, hex pltd 1/2-13	825208-448	4
18	nut, hex pltd 3/4-10	825212-665	8
19	u-bolt, 1/2" x 5" pipe	829008-500	2
20	capscr, hex gr5 5/16-18 x 1 1/4	829105-125	2
21	capscr, hex gr5 1/2-13 x 1 1/2	829108-150	4
22	capscr, hex gr5 3/4-10 x 2 3/4	829112-275	8
23	washer, spr lock reg pltd 5/16	837805-078	2
24	washer, spr lock reg pltd 1/2	837808-125	8
25	washer, spr lock reg pltd 3/4	837812-188	8
26	washer, pl-b reg pltd 5/16	838205-071	2
27	washer, pl-b reg pltd 1/2	838208-112	8
28	bulkhead, pipe 3/4" npt	841500-012	1
29	nipple, pipe-xs plt 3/4 x 1 1/2	866412-015	2
30	nipple, pipe-xs plt 3/4 x 2	866412-020	1
31	nipple, pipe-xs plt 3/4 x 3	866412-030	1
32	nipple, pipe-xs plt 1 1/2 x 2	866424-020	2
33	bushing, red pltd 1 x 3/4	867104-030	1


(Continued on page 69)

---

**PLEASE NOTE: WHEN ORDERING PARTS, INDICATE THE SERIAL NUMBER OF COMPRESSOR**

# Section 8 ILLUSTRATIONS AND PARTS LIST

## 8.9 AIR PIPING SYTEM- 150-200HP

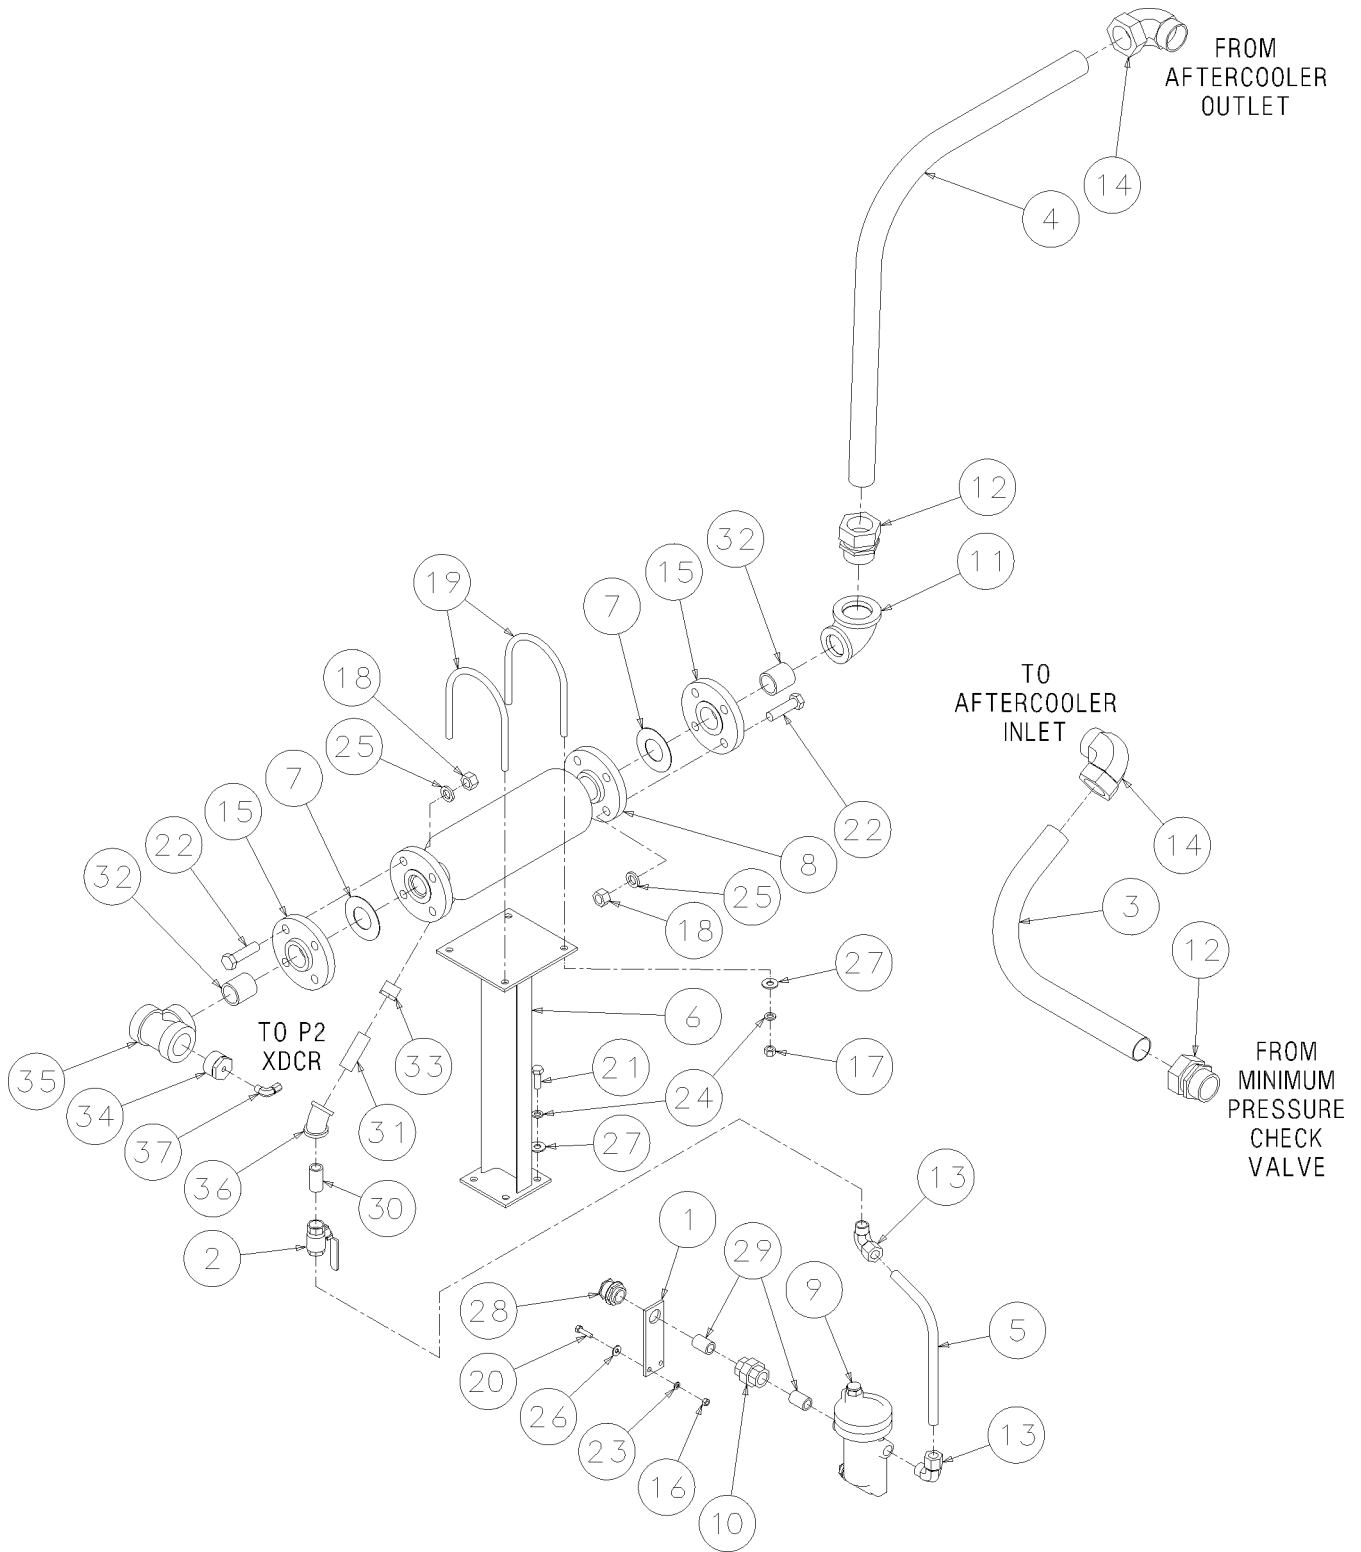

02250134-191R00

## Section 8 ILLUSTRATIONS AND PARTS LIST

### 8.9 AIR PIPING SYTEM- 150-200HP (CONTINUED)


<i>key number</i>	<i>description</i>	<i>part number</i>	<i>quantity</i>
34	bushing, red pltd 1 1/2 x 1/4	867106-010	1
35	tee, pipe pltd 1 1/2	868430-060	1
36	elbow, pipe 45 deg 300# pltd 3/4"	869430-030	1
37	elbow, tube 90 deg m 1/4 x 1/4 ss	877004-025	1

---

**PLEASE NOTE: WHEN ORDERING PARTS, INDICATE THE SERIAL NUMBER OF COMPRESSOR**

# Section 8 ILLUSTRATIONS AND PARTS LIST

## 8.10 FLUID PIPING SYSTEM- 100-125HP

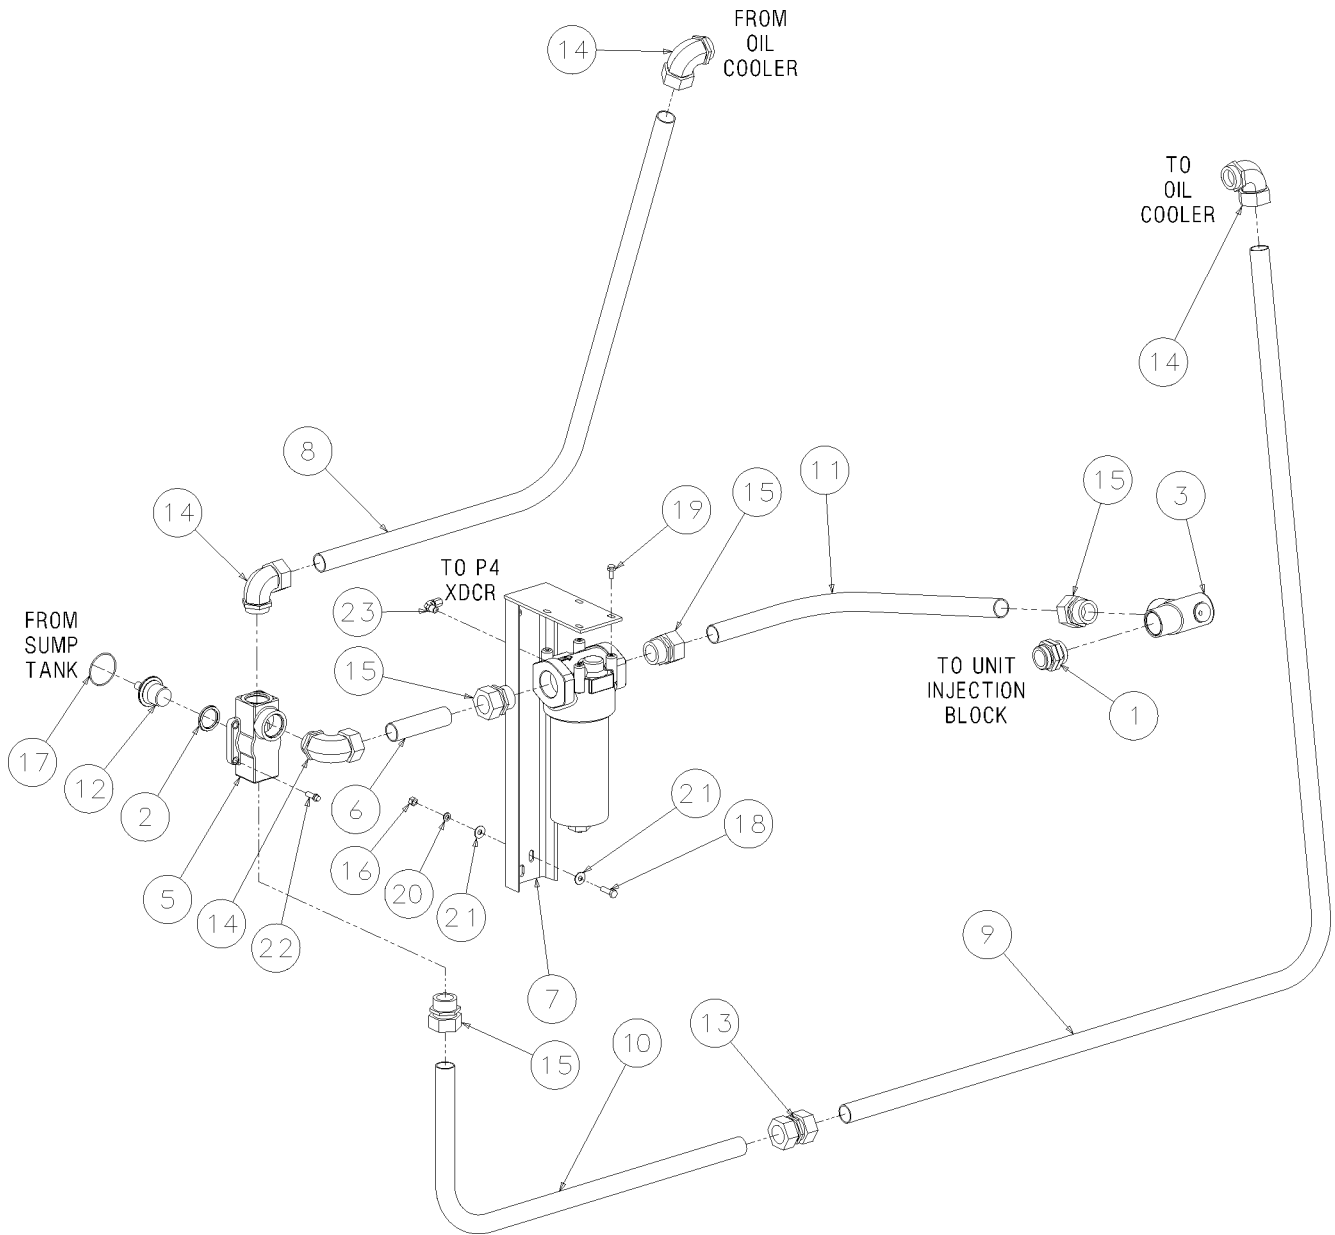

02250138-175R01

## Section 8 ILLUSTRATIONS AND PARTS LIST

### 8.10 FLUID PIPING SYSTEM- 100-125HP

<i>key number</i>	<i>description</i>	<i>part number</i>	<i>quantity</i>
1	adapter, sae 1 7/8-12 x 1 7/8-12	02250055-014	1
2	seal, u-cup therm vlv <b>(I)</b>	02250101-372	1
3	valve, oil stop <b>(II)</b>	02250113-668	1
4	filter, 1 7/8-12 sae coreless <b>(III)</b>	02250121-658	1
5	housing, therm vlv 1 7/8"-12 conn w/ ext	02250127-119	1
6	tube, thermal vlv/fltr LS16T 1.50"	02250135-185	1
7	support, oil filter - LS16T	02250135-190	1
8	tube, thermal vlv/oc LS16T 1.5"	02250138-939	1
9	tube, oc/union LS16T 1.5"	02250138-941	1
10	tube, union/thrm vlv LS16T 1.5"	02250138-943	1
11	tube, fltr/osv LS16T 1.5"	02250138-945	1
12	element, thermal vlv 220deg f <b>(I)</b>	250001-349	1
13	union, tube hex 1 1/2"	811324-150	1
14	elbow, tube str thrd 1 1/2 x 1 7/8	811624-188	4
15	connector, tube str thd 1 1/2 x 1 7/8	811824-188	4
16	nut, hex pltd 3/8-16	825206-337	2
17	o-ring, viton 2 1/2 x 3/32" <b>(I)</b>	826502-144	1
18	capscr, hex gr5 3/8-16 x 1 1/4	829106-125	2
19	screw, hex ser washer 5/16-18 x 3/4	829705-075	4
20	washer, spr lock reg pltd 3/8	837806-094	2
21	washer, pl-b reg pltd 3/8	838206-071	4
22	capscrew, ferry head hd pltd 3/8-16 x 1	867306-100	4
23	elbow, tube 90 deg m 1/4 x 1/4 ss	877004-025	1

**(I)** This part is required for maintenance on thermal valve.

**(II)** For maintenance on fluid stop valve no. 02250113-668, order repair kit no. 02250116-697.


**(III)** For maintenance on fluid filter no. 02250121-658, order repair kit no. 0250121-657.

---

**PLEASE NOTE: WHEN ORDERING PARTS, INDICATE THE SERIAL NUMBER OF COMPRESSOR**

# Section 8 ILLUSTRATIONS AND PARTS LIST

## 8.11 FLUID PIPING SYSTEM- 150-200HP WATER-COOLED

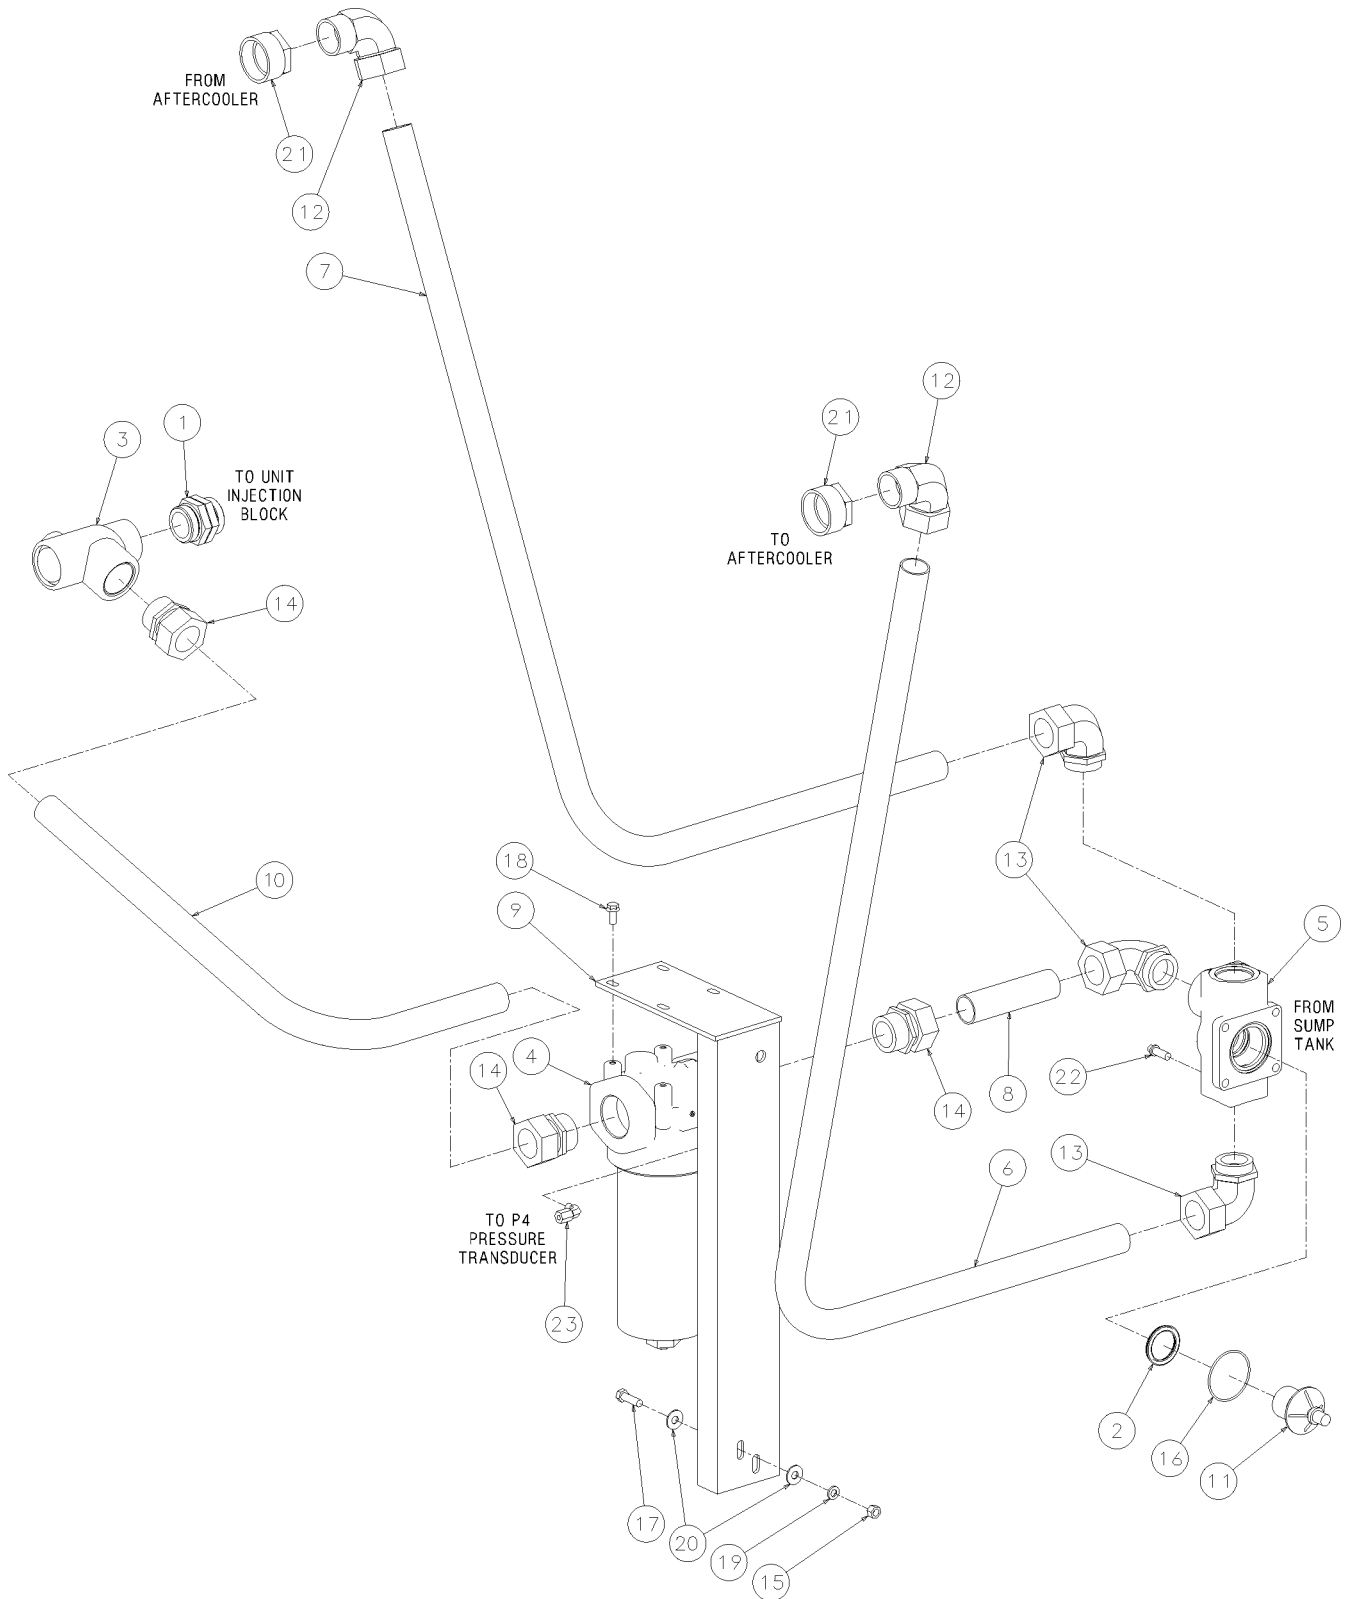

02250134-199R00

## Section 8

# ILLUSTRATIONS AND PARTS LIST

### 8.11 FLUID PIPING SYSTEM- 150-200HP WATER-COOLED

<i>key number</i>	<i>description</i>	<i>part number</i>	<i>quantity</i>
1	adapter, sae 1 7/8-12 x 1 7/8-12	02250055-014	1
2	seal, u-cup therm vlv <b>(I)</b>	02250101-372	1
3	valve, oil stop <b>(II)</b>	02250113-668	1
4	filter, 1 7/8-12 sae coreless <b>(III)</b>	02250121-658	1
5	housing, therm vlv 1 7/8"-12 conn w/ ext	02250127-119	1
6	tube, thermal vlv/clr LS16T 1.50"	02250135-181	1
7	tube, clr/thrm vlv LS16T 1.50"	02250135-183	1
8	tube, thermal vlv/fltr ls16t 1.50"	02250135-185	1
9	support, oil filter - LS16T	02250135-190	1
10	tube, fltr/osv LS16T 1.5"	02250138-945	1
11	element, thermal vlv 220deg f <b>(I)</b>	250001-349	1
12	elbow, tube 90 deg m 1 1/2 x 1 1/2	810524-150	2
13	elbow, tube str thrd 1 1/2 x 1 7/8	811624-188	3
14	connector, tube str thd 1 1/2 x 1 7/8	811824-188	3
15	nut, hex pltd 3/8-16	825206-337	2
16	o-ring, viton 2 1/2 x 3/32" <b>(I)</b>	826502-144	1
17	capscr, hex gr5 3/8-16 x 1 1/4	829106-125	2
18	screw, hex ser washer 5/16-18 x 3/4	829705-075	4
19	washer, spr lock reg pltd 3/8	837806-094	2
20	washer, pl-b reg pltd 3/8	838206-071	4
21	bushing, red pltd 2 x 1 1/2	867108-060	2
22	capscrew, ferry head hd pltd 3/8-16 x 1	867306-100	4
23	elbow, tube 90 deg m 1/4 x 1/8 ss	877004-012	1

**(I)** This part is required for maintenance on thermal valve.

**(II)** For maintenance on fluid stop valve no. 02250113-668, order repair kit no. 02250116-697.


**(III)** For maintenance on fluid filter no. 02250121-658, order repair kit no. 0250121-657.

---

**PLEASE NOTE: WHEN ORDERING PARTS, INDICATE THE SERIAL NUMBER OF COMPRESSOR**

# Section 8 ILLUSTRATIONS AND PARTS LIST

## 8.12 DISCHARGE SYSTEM

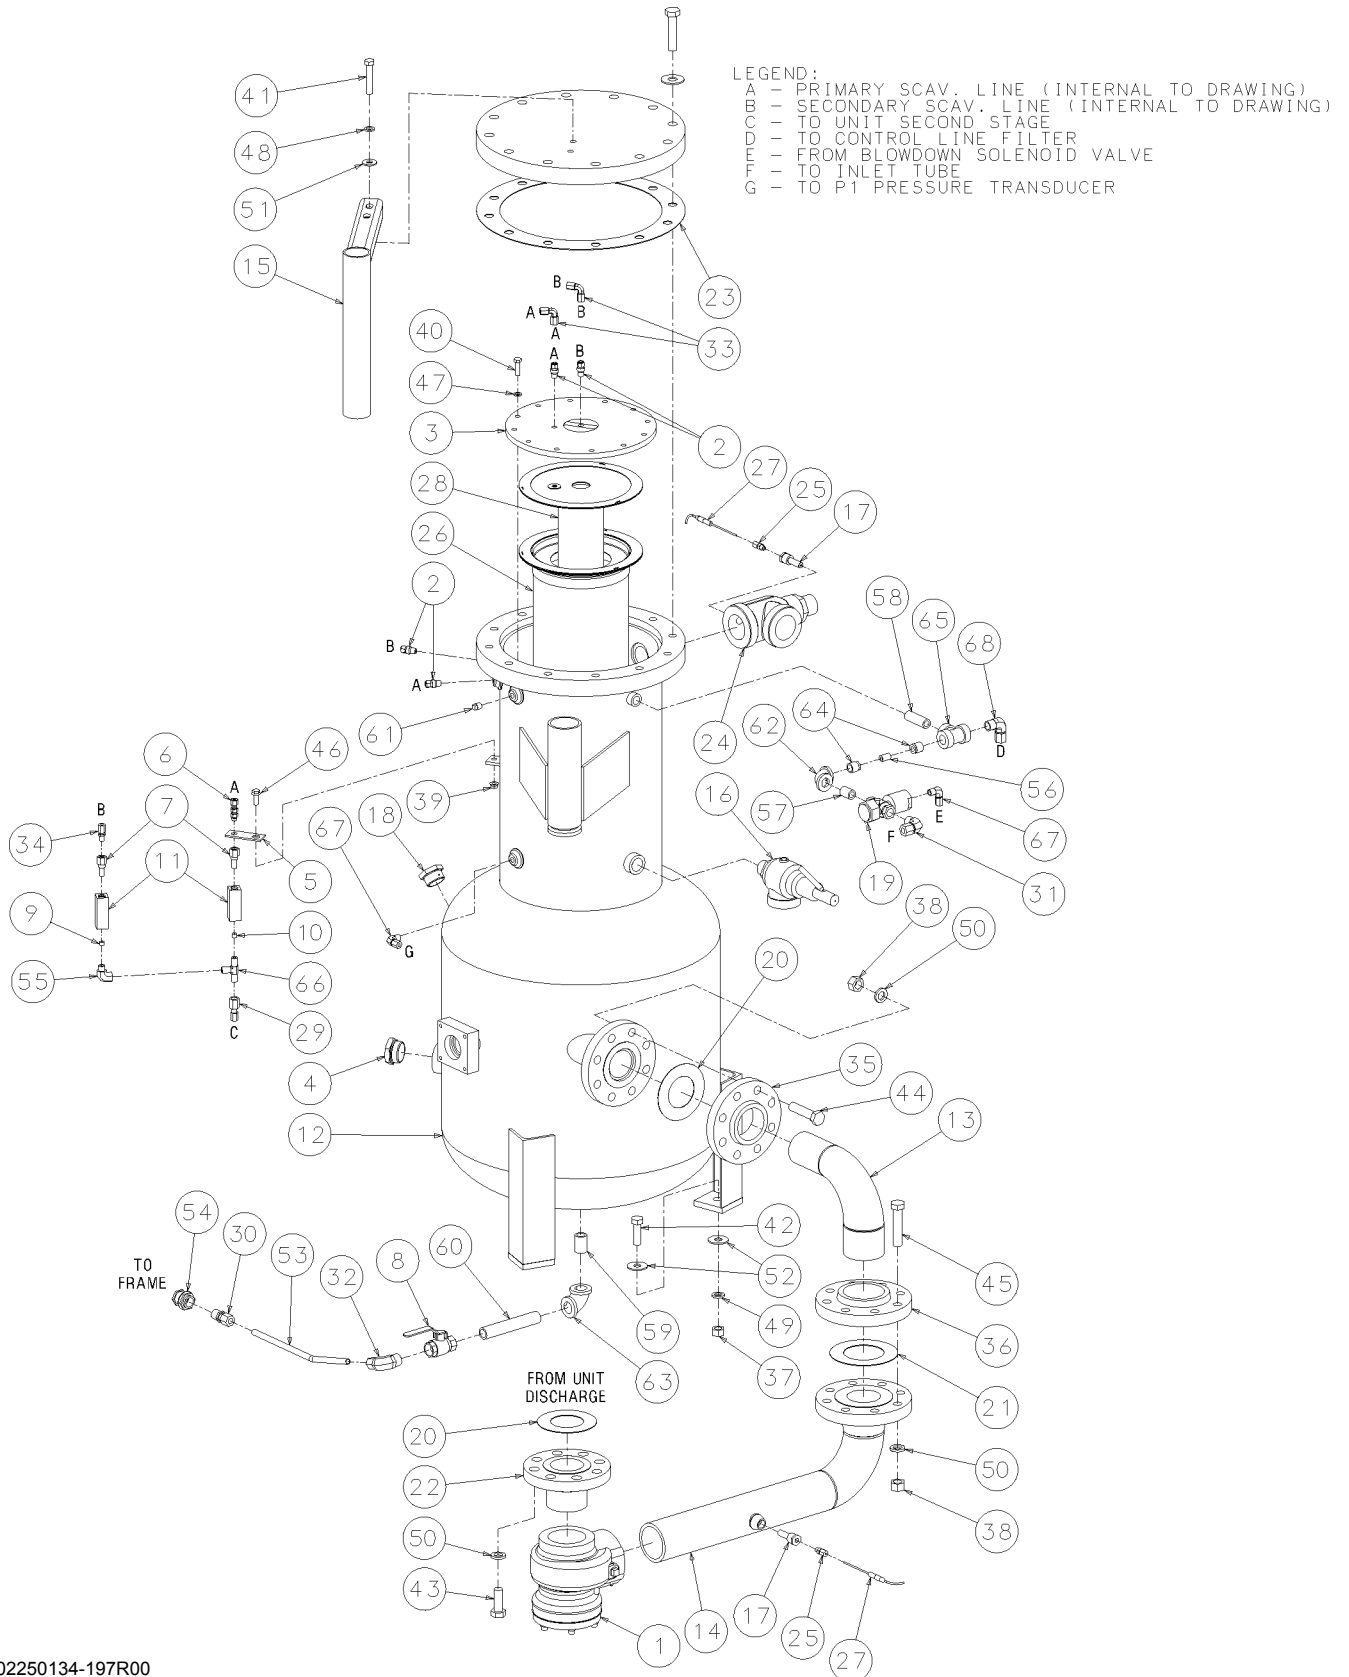

02250134-197R00

## Section 8 ILLUSTRATIONS AND PARTS LIST

### 8.12 DISCHARGE SYSTEM

<i>key number</i>	<i>description</i>	<i>part number</i>	<i>quantity</i>
1	sub assembly, vlv assy 3" npt x 3" npt disch <b>(I)(II)</b>	016732B	1
2	connector, flex 1/4t x 1/4p	020169	4
3	ring, hldwn & crsmbr assy.	02250044-376	1
4	plug, sight glass 1-7/8" sae	02250097-611	1
5	support, bracket oil return ls12/16	02250101-192	1
6	connector, tube male bhd 1/4 x sae	02250101-490	1
7	filter, asembly genesis filter	02250117-782	2
8	valve, ball 3/4" npt apollo	02250117-792	1
9	orifice, plug brass 1/8"npt x 1/32"	02250125-774	1
10	orifice, plug brass 1/8"npt x 1/16"	02250125-775	1
11	sightglass, orf block sae	02250126-129	2
12	tank, air-oil separator LS16T	02250134-216	1
13	pipe, assembly LS16T disch-tank in	02250134-842	1
14	pipe, assembly LS16Tdisch vlv out	02250134-843	1
15	boom, LS16T sump head lifting	02250135-164	1
16	valve, relief 1" npt 400psi	02250137-688	1
17	sleeve, rtd 1/2"npt ls20t disch	02250138-457	2
18	plug, o-ring boss sae 1 1/4	040029	1
19	valve, pneu (nc) 500# rn bdv <b>(III)</b>	045116	1
20	gasket, asa flange 300# 2-1/2" <b>(II)</b>	240620-007	2
21	gasket, asa flange 300# 3" <b>(II)</b>	240620-008	1
22	adapter, di vlv-assy ddh20	250002-048	1
23	gasket, sep cover hi pressure <b>(IV)</b>	250006-536	1
24	valve, mp/chk 2"350#wp(157#mp) <b>(V)</b>	250022-735	1

(Continued on page 77)

**(I)** For maintenance on inlet assembly valve no. 01673B, order repair kit no. 606208-001.

**(II)** When performing maintenance on inlet assembly valve, if required, order 2 1/2" gasket no. 240620-007, and 3" gasket no. 240620-008.

**(III)** For maintenance on pneumatic valve no. 045116, order repair kit no. 047524.

**(IV)** When performing maintenance on separator elements, if required, order (lid cover) gasket no. 250006-536.


**(V)** For maintenance on minimum pressure check valve no. 250022-735, order repair kit no. 250022-736.

---

**PLEASE NOTE: WHEN ORDERING PARTS, INDICATE THE SERIAL NUMBER OF COMPRESSOR**

# Section 8 ILLUSTRATIONS AND PARTS LIST

## 8.12 DISCHARGE SYSTEM

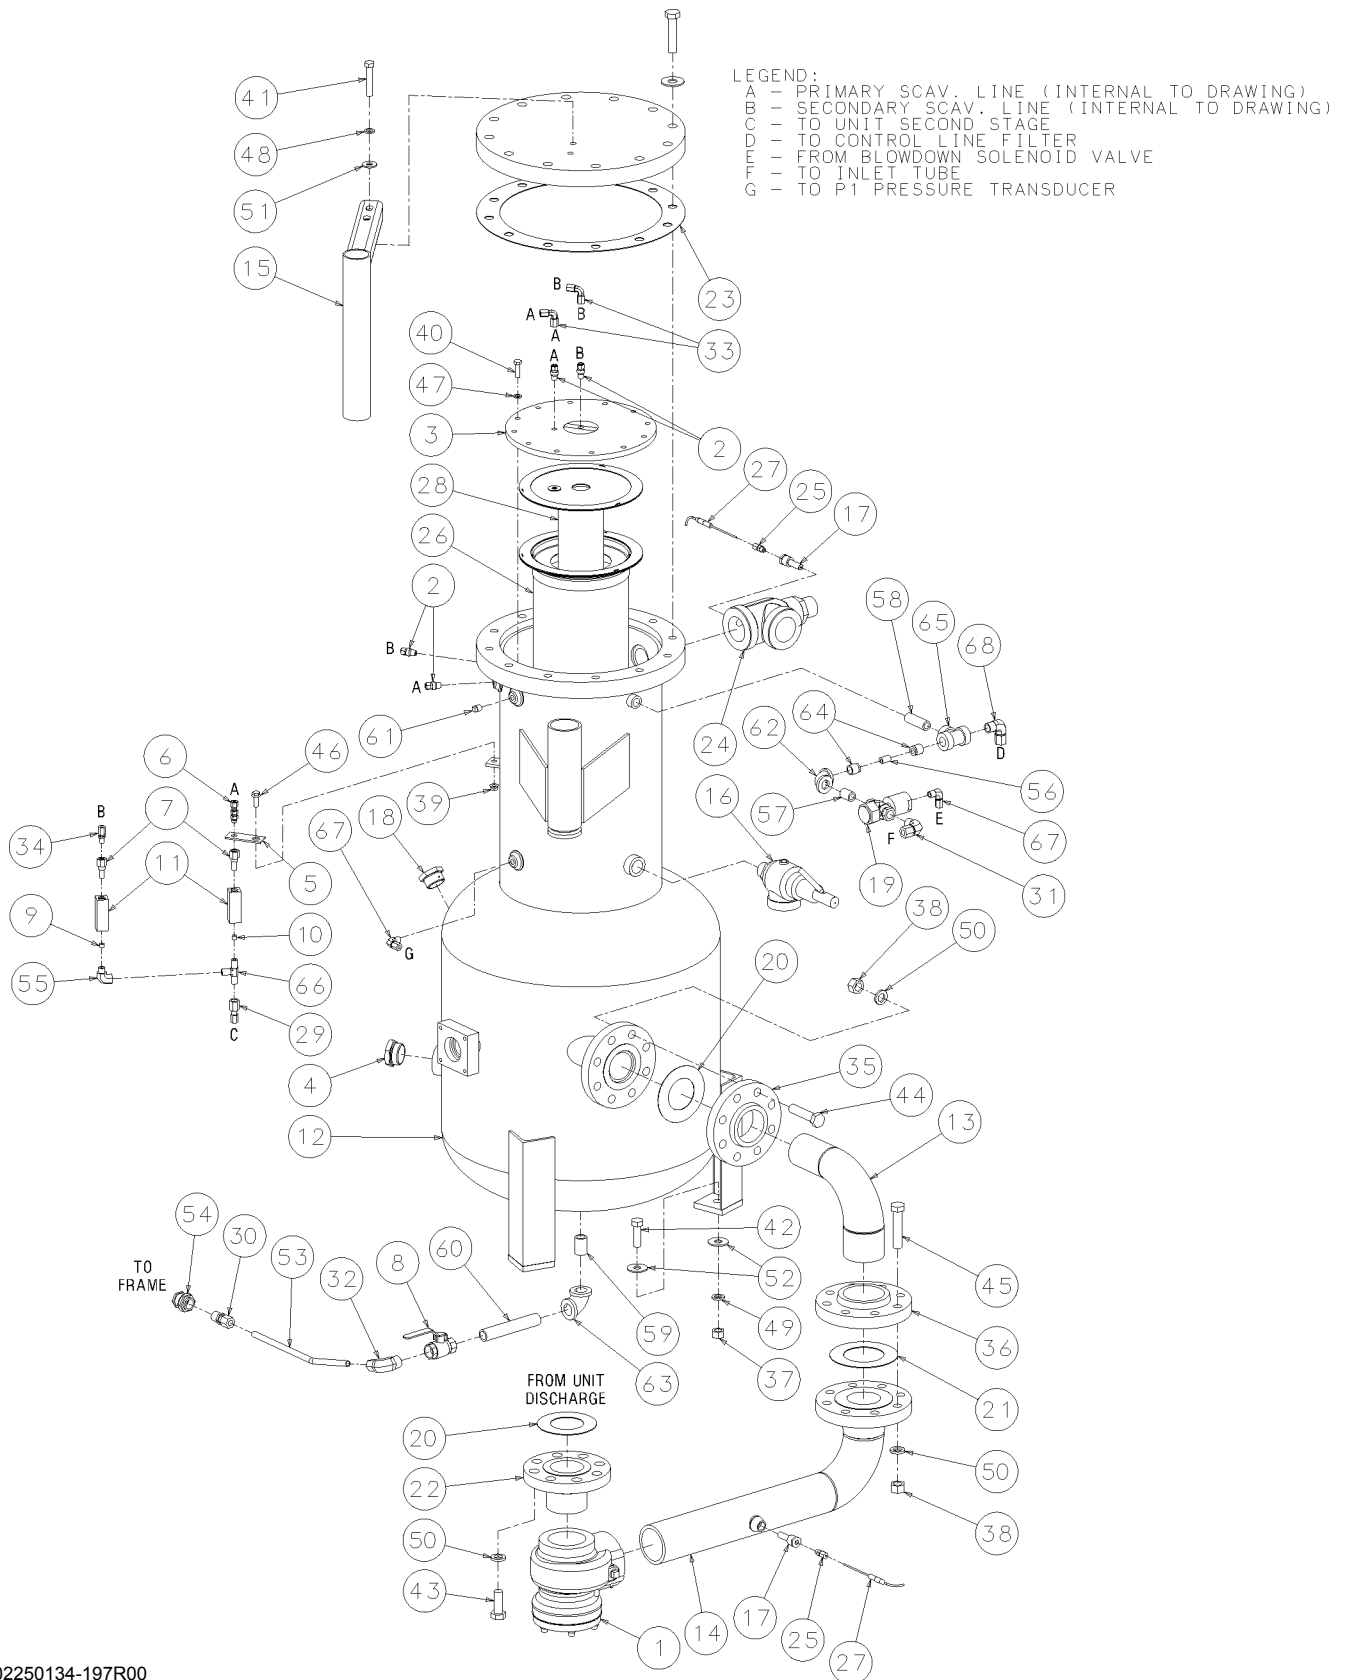

02250134-197R00

## Section 8 ILLUSTRATIONS AND PARTS LIST

### 8.12 DISCHARGE SYSTEM (CONTINUED)

<i>key number</i>	<i>description</i>	<i>part number</i>	<i>quantity</i>
25	fitting, compress adj	250028-635	2
26	element, sep/pri <b>(VI)</b>	250034-115	1
27	probe, rtd 100 ohm plat 3.5"x 12ft	250039-909	2
28	element, sep/sec 12/16 series <b>(VII)</b>	250042-861	1
29	connector, tube-f 1/4 x 1/4	810104-025	1
30	connector, tube-m 1/2 x 1/2	810208-050	1
31	elbow, tube 90 deg m 1/2 x 1/2	810508-050	1
32	elbow, tube 90 deg m 1/2 x 3/4	810508-075	1
33	elbow, tube union 1/4	811204-025	2
34	connector, tube str thd 1/4 x 7/16	811804-044	1
35	flange, slp-on 2 1/2" 300#	820230-040	1
36	flange, slp-on 3" 300#	820230-048	1
37	nut, hex pltd 5/8-11	825210-559	3
38	nut, hex pltd 3/4-10	825212-665	16
39	nut, hex f pltd 3/8-16	825306-347	1
40	capscr, hex gr5 3/8-16 x 1 1/4	829106-125	12
41	capscr, hex gr5 1/2-13 x 2 3/4	829108-275	2
42	capscr, hex gr5 5/8-11 x 2	829110-200	3
43	capscr, hex gr5 3/4-10 x 2	829112-200	8
44	capscr, hex gr5 3/4-10 x 3 1/4	829112-325	8
45	capscr, hex gr5 3/4-10 x 3 1/2	829112-350	8
46	screw, hex ser washer 3/8-16 x 1	829706-100	1
47	washer, spr lock reg pltd 3/8	837806-094	12
48	washer, spr lock reg pltd 1/2	837808-125	2
49	washer, spr lock reg pltd 5/8	837810-156	3
50	washer, spr lock reg pltd 3/4	837812-188	24
51	washer, pl-b reg pltd 1/2	838208-112	2
52	washer, pl-b reg pltd 5/8	838210-112	6
53	tubing, steel 1/2" 18ga	841115-008	1ft.

(Continued on page 79)

**(VI)** For maintenance on primary separator element no. 250034-115, order replacement element no. 250042-862.


**(VII)** For maintenance on secondary separator element no. 250042-861, order replacement element no. 250034-118.

---

**PLEASE NOTE: WHEN ORDERING PARTS, INDICATE THE SERIAL NUMBER OF COMPRESSOR**

# Section 8 ILLUSTRATIONS AND PARTS LIST

## 8.12 DISCHARGE SYSTEM

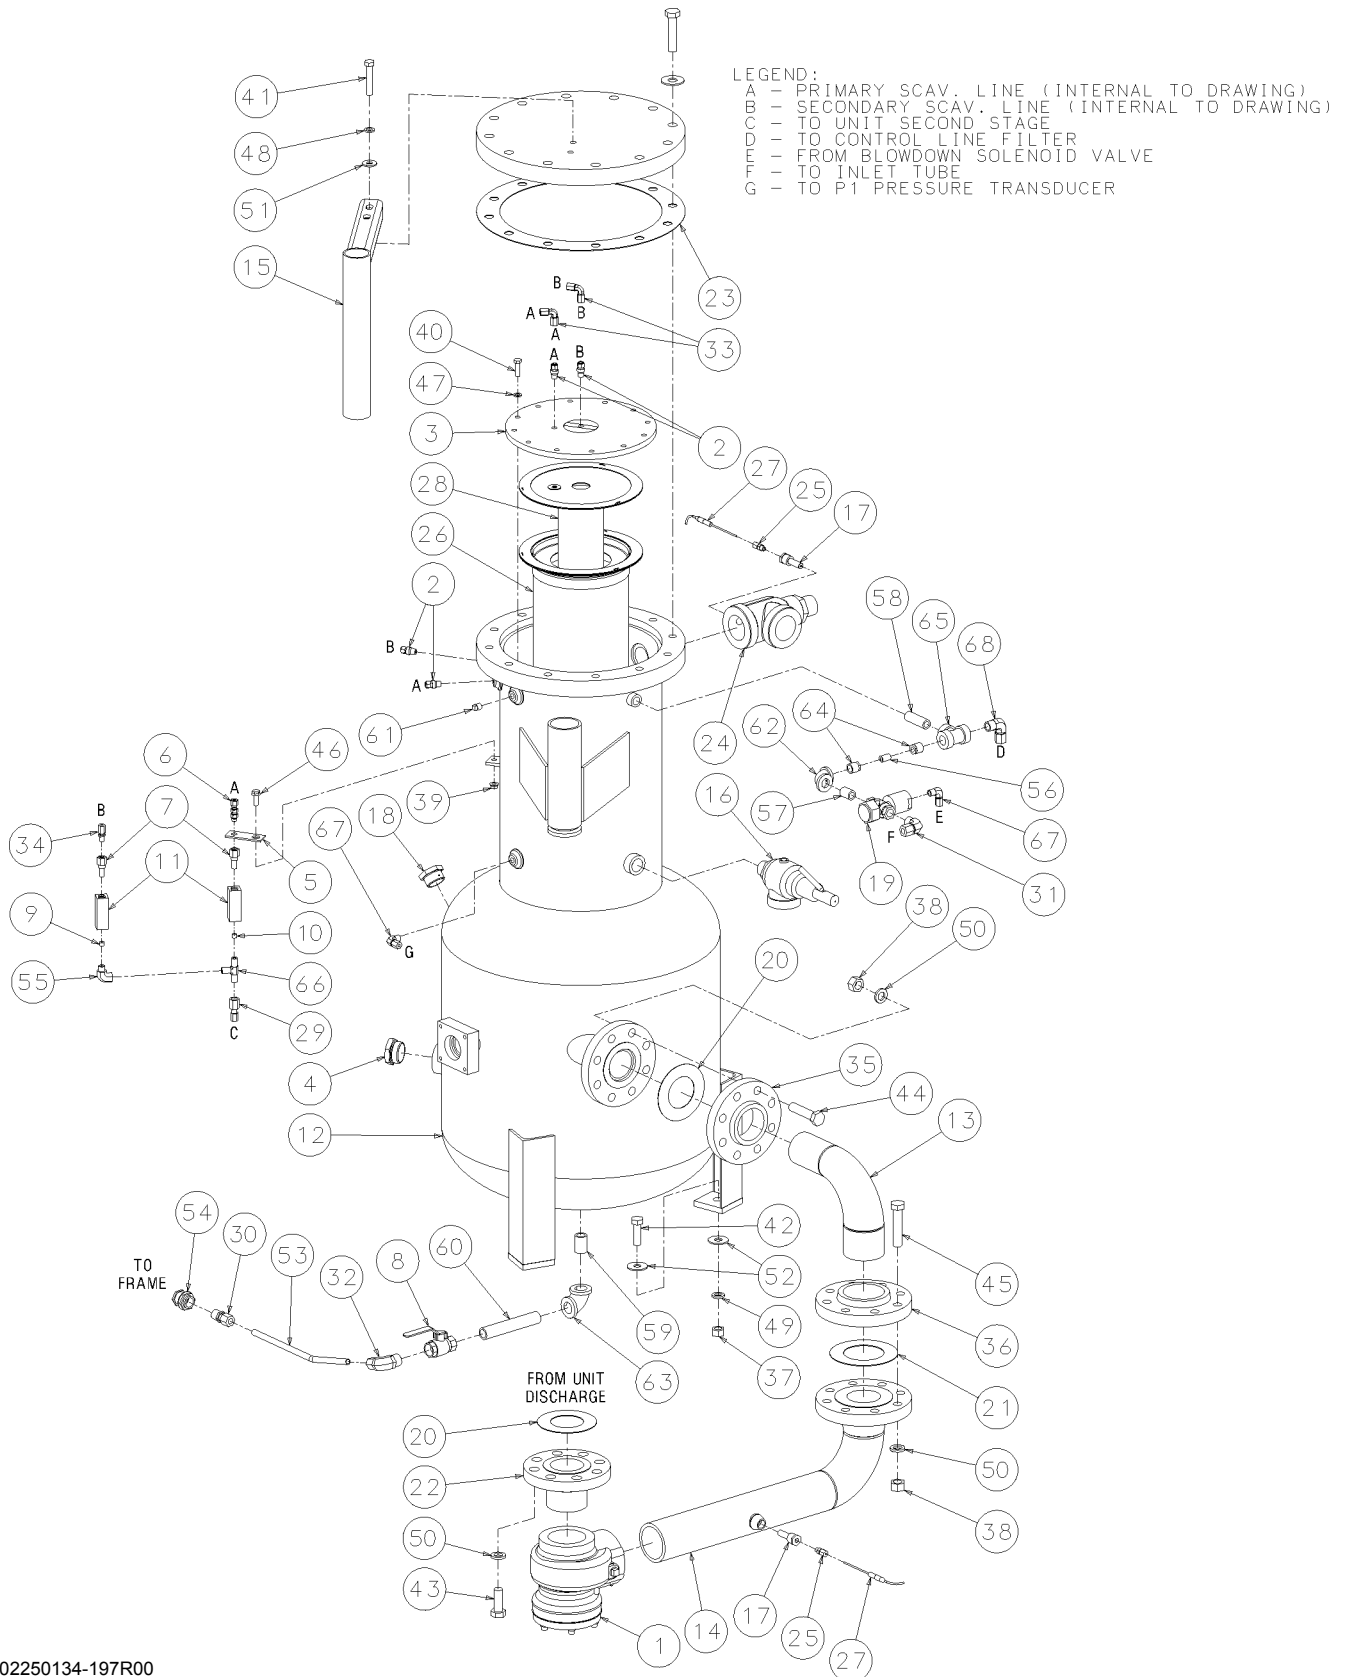

02250134-197R00

## Section 8 ILLUSTRATIONS AND PARTS LIST

### 8.12 DISCHARGE SYSTEM (CONTINUED)


<i>key number</i>	<i>description</i>	<i>part number</i>	<i>quantity</i>
54	bulkhead, pipe 1/2" npt	841500-008	1
55	elbow, pipe 90m/f 1/4 x 1/4	860704-025	1
56	nipple, pipe-xs plt 1/4 x cl	866404-000	1
57	nipple, pipe-xs plt 1/2 x cl	866408-000	1
58	nipple, pipe-xs plt 1/2 x 2 1/2	866408-025	1
59	nipple, pipe-xs plt 3/4 x 1 1/2	866412-015	1
60	nipple, pipe-xs plt 3/4 x 6	866412-060	1
61	plug, pipe 1/4" 3000# stl plt	866900-010	1
62	elbow, pipe 90 deg 300# plt 1/2"	867030-020	1
63	elbow, pipe 90 deg 300# plt 3/4"	867030-030	1
64	bushing, red pltd 1/2 x 1/4	867102-010	2
65	tee, pipe pltd 1/2	868430-020	1
66	tee, male pipe brass 1/4	869825-025	1
67	elbow, tube 90 deg m 1/4 x 1/4 ss	877004-025	2
68	elbow, tube 90 deg m 1/2 x 1/2 ss	877008-050	1

---

**PLEASE NOTE: WHEN ORDERING PARTS, INDICATE THE SERIAL NUMBER OF COMPRESSOR**

# Section 8 ILLUSTRATIONS AND PARTS LIST

## 8.13 CONTROL/START SYSTEM

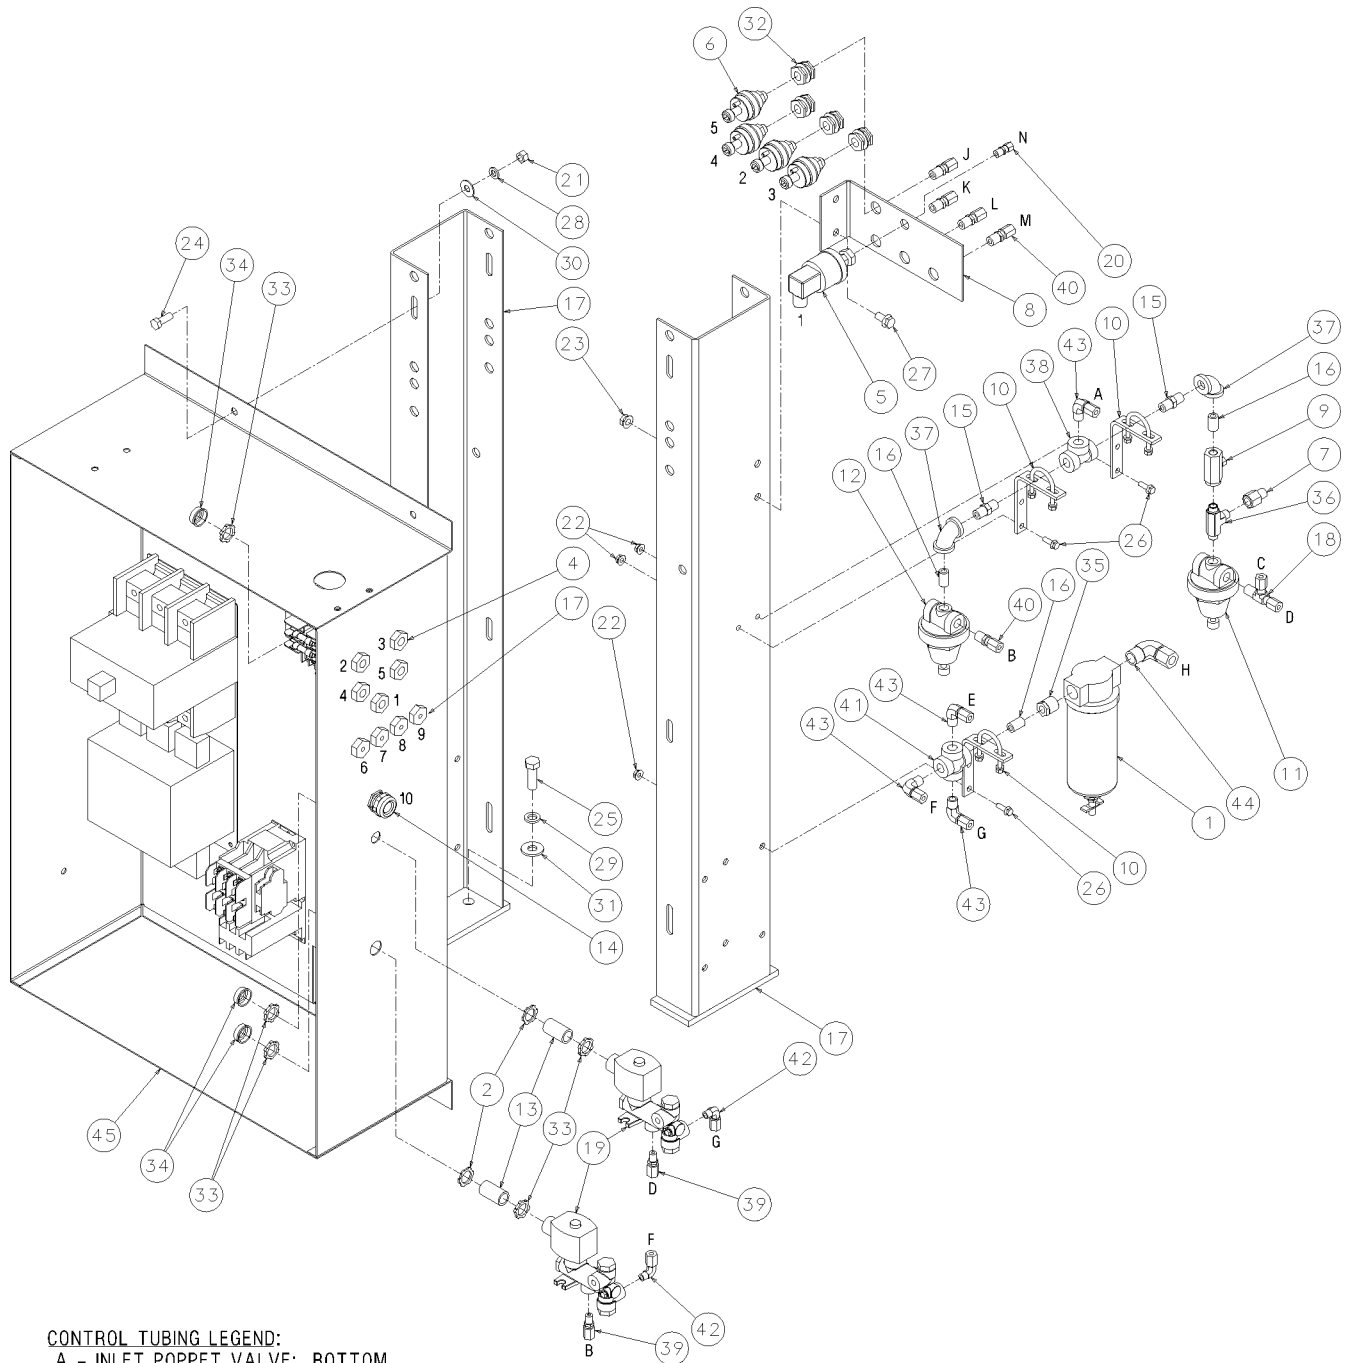

**CONTROL TUBING LEGEND:**

- A - INLET POPPET VALVE: BOTTOM
- B - INTERNAL TO CONTROLS
- C - BLOWDOWN VALVE: PILOT
- D - INTERNAL TO CONTROLS
- E - INLET POPPET VALVE REGULATOR
- F - INTERNAL TO CONTROLS
- G - INTERNAL TO CONTROLS
- H - DRY SIDE: AIR/OIL SEPARATOR TANK
- J - HIGH OIL PRESSURE: OIL FILTER INLET
- K - LOW OIL PRESSURE: UNIT INJECTION BLOCK
- L - HIGH SUMP/WET SIDE: AIR/OIL SEPARATOR TANK
- M - MOISTURE SEPARATOR OUTLET
- N - INLET AIR FILTER

**ELECTRICAL LEGEND:**

- 1 - INLET FILTER VACUUM SWITCH
- 2 - P1: SUMP PRESSURE TRANSDUCER
- 3 - P2: LINE PRESSURE TRANSDUCER
- 4 - P3: UNIT INJECTION PRESSURE TRANSDUCER
- 5 - P4: FILTER INJECTION PRESSURE TRANSDUCER
- 6 - T1 RTD: UNIT DISCHARGE TEMPERATURE
- 7 - T2 RTD: DRY SIDE SUMP TEMPERATURE
- 8 - T3 RTD: UNIT INJECTION OIL TEMPERATURE
- 9 - T4 RTD: UNIT INTERSTAGE TEMPERATURE
- 10 - AIR COOLED PACKAGE: FAN MOTOR  
(WATER COOLED PACKAGE: WATER PRESSURE SWITCH)

02250134-196R00

## Section 8 ILLUSTRATIONS AND PARTS LIST

### 8.13 CONTROL/START SYSTEM

<i>key number</i>	<i>description</i>	<i>part number</i>	<i>quantity</i>
1	filter, coalescing 425 psi @ 265deg <b>(I)</b>	02250058-442	1
2	locknut, n4 conduit sealing	02250071-362	2
3	grip, cord n4 .125-.187 x 1/2"	02250071-379	4
4	grip, cord n4 .250-.375 x 1/2"	02250071-381	5
5	switch, vacuum 22"wc n4 6ft cable 5a	02250078-249	1
6	transducer, pressure 0-500psi 1-5vdc n4	02250085-652	4
7	orifice, .040 1/4fnpt x 1/4mnpt	02250091-395	1
8	support, pressure transducer n4	02250102-631	1
9	valve, check 1/4"nptf viton seat	02250110-557	1
10	bracket, pipe"1"1/8"-1"pipe-dc	044831	3
11	valve, regulator <b>(II)</b>	045099	1
12	valve, regulator 400 psi <b>(III)</b>	048059	1
13	nipple, conduit 1/2 x 1.5"	250007-169	2
14	grip, cord so 12/4 st 1/2"	250018-495	1
15	nipple, hx tbe 316s 1/4"	250018-760	2
16	nipple, pipe-xs 316s 1/4 x cl	250019-142	3
17	support, starter&clr 200hp	250022-657	2
18	tee, 1/4"t x m-rn 316ss	250041-911	1
19	valve, sol 3wno 1/8 8300 <b>(IV)</b>	407390	2
20	connector, tube-m 1/4 x 1/8	813604-125	1
21	nut,hex pltd 3/8-16	825206-337	4
22	nut, hex f pltd 1/4-20	825304-236	6
23	nut, hex f pltd 3/8-16	825306-347	2
24	capscr, hex gr5 3/8-16 x 1	829106-100	4
25	capscr, hex gr5 1/2-13 x 1 1/2	829108-150	4
26	screw, hex ser washer 1/4-20 x 3/4	829704-075	6
27	screw, hex ser washer 3/8-16 x 3/4	829706-075	2

(Continued on page 83)

**(I)** For maintenance on filter no. 02250058-442, order replacement element no. 02250058-441.

**(II)** For maintenance on pressure regulator valve no. 045099, order repair kit no. 048409.

**(III)** For maintenance on 400# pressure regulator valve no. 048059, order repair kit no. 048409.


**(IV)** For maintenance on solenoid valve no. 407390, order repair kit no. 02250053-830, and replacement coil no. 250031-431.

---

**PLEASE NOTE: WHEN ORDERING PARTS, INDICATE THE SERIAL NUMBER OF COMPRESSOR**

# Section 8 ILLUSTRATIONS AND PARTS LIST

## 8.13 CONTROL/START SYSTEM

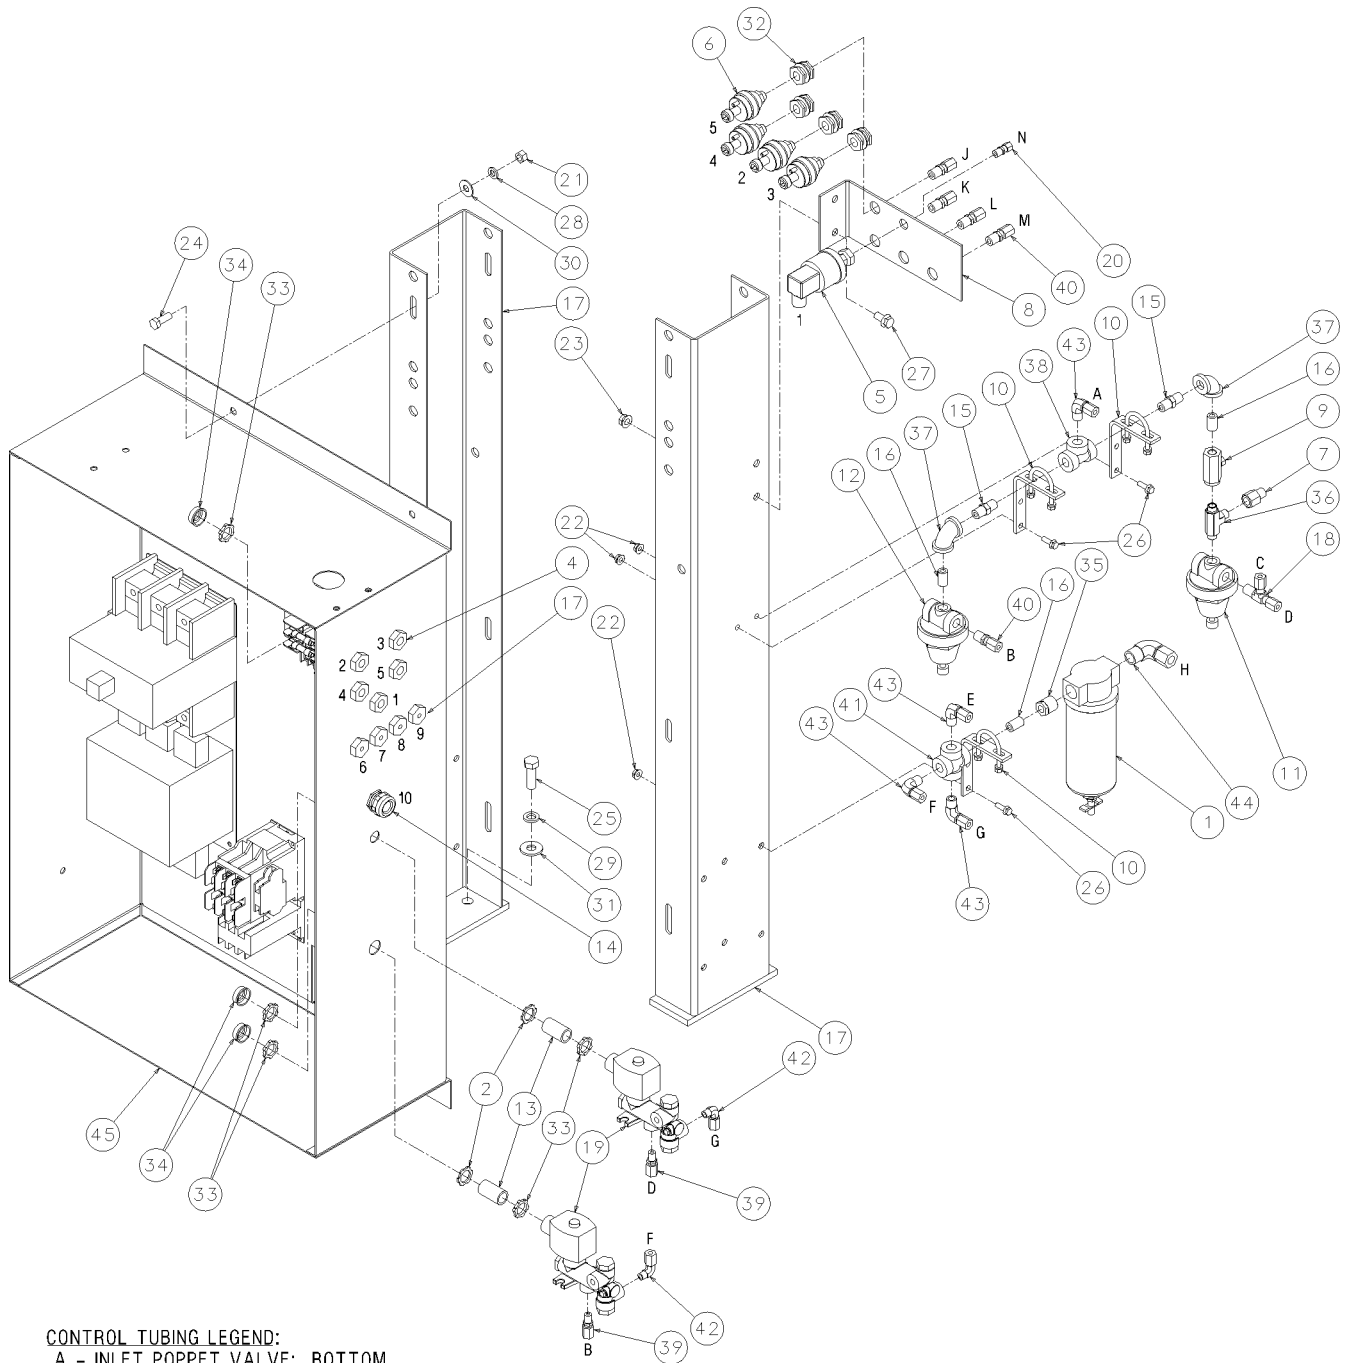

**CONTROL TUBING LEGEND:**

- A - INLET POPPET VALVE: BOTTOM
- B - INTERNAL TO CONTROLS
- C - BLOWDOWN VALVE: PILOT
- D - INTERNAL TO CONTROLS
- E - INLET POPPET VALVE REGULATOR
- F - INTERNAL TO CONTROLS
- G - INTERNAL TO CONTROLS
- H - DRY SIDE: AIR/OIL SEPARATOR TANK
- J - HIGH OIL PRESSURE: OIL FILTER INLET
- K - LOW OIL PRESSURE: UNIT INJECTION BLOCK
- L - HIGH SUMP/WET SIDE: AIR/OIL SEPARATOR TANK
- M - MOISTURE SEPARATOR OUTLET
- N - INLET AIR FILTER

**ELECTRICAL LEGEND:**

- 1 - INLET FILTER VACUUM SWITCH
- 2 - P1: SUMP PRESSURE TRANSDUCER
- 3 - P2: LINE PRESSURE TRANSDUCER
- 4 - P3: UNIT INJECTION PRESSURE TRANSDUCER
- 5 - P4: FILTER INJECTION PRESSURE TRANSDUCER
- 6 - T1 RTD: UNIT DISCHARGE TEMPERATURE
- 7 - T2 RTD: DRY SIDE SUMP TEMPERATURE
- 8 - T3 RTD: UNIT INJECTION OIL TEMPERATURE
- 9 - T4 RTD: UNIT INTERSTAGE TEMPERATURE
- 10 - AIR COOLED PACKAGE: FAN MOTOR  
(WATER COOLED PACKAGE: WATER PRESSURE SWITCH)

02250134-196R00

## Section 8 ILLUSTRATIONS AND PARTS LIST

### 8.13 CONTROL/START SYSTEM (CONTINUED)

<i>key number</i>	<i>description</i>	<i>part number</i>	<i>quantity</i>
28	washer, spr lock reg pltd 3/8	837806-094	4
29	washer, spr lock reg pltd 1/2	837808-125	4
30	washer, pl-b reg pltd 3/8	838206-071	4
31	washer, pl-b reg pltd 1/2	838208-112	4
32	bulkhead, pipe 1/4" npt	841500-004	4
33	locknut, conduit 1/2	847200-050	5
34	bushing, conduit plastic 1/2	848815-050	3
35	bushing, red pltd 1/2 x 1/4	867102-010	1
36	tee, male pipe stainless 1/4	869925-025	1
37	elbow, pipe 90 deg 1/4" 300# ss	876630-010	2
38	tee, pipe 300# 1/4 ss	876730-010	1
39	connector, tube-m 1/4 x 1/8 ss	876804-012	2
40	connector, tube-m 1/4 x 1/4 ss	876804-025	5
41	cross, pipe 1/4" 300# ss	876930-010	1
42	elbow, tube 90 deg m 1/4 x 1/8 ss	877004-012	2
43	elbow, tube 90 deg m 1/4 x 1/4 ss	877004-025	4
44	elbow, tube 90 deg m 1/2 x 1/2 ss	877008-050	1
45	starter, nc n12 <b>(V)</b>	-	1


**(V)** Starters may vary with machine specifications. Consult factory with serial number to determine correct starter number.

---

**PLEASE NOTE: WHEN ORDERING PARTS, INDICATE THE SERIAL NUMBER OF COMPRESSOR**

# Section 8 ILLUSTRATIONS AND PARTS LIST

## 8.14 CONTROL PANEL

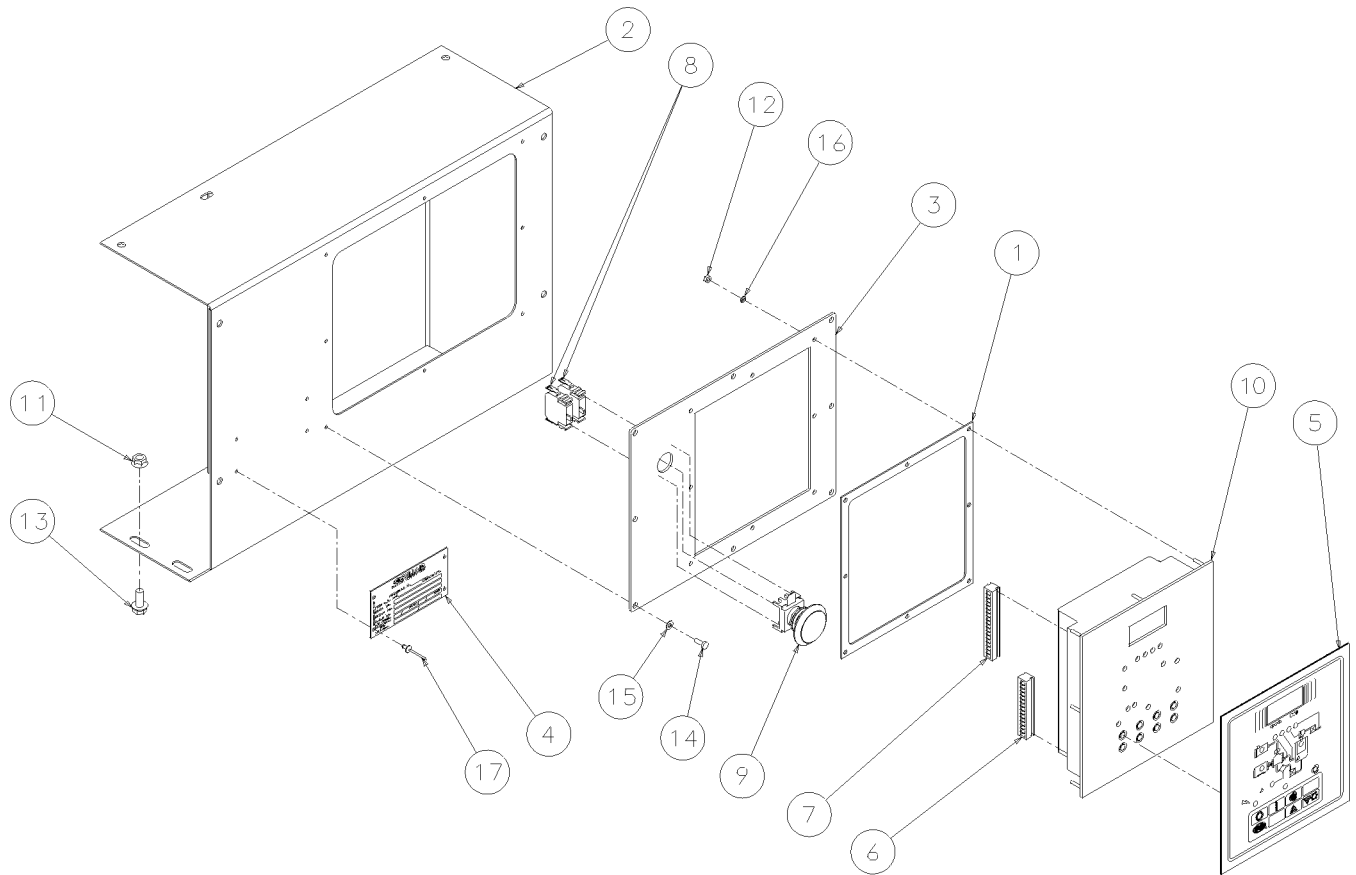

## Section 8

# ILLUSTRATIONS AND PARTS LIST

### 8.14 CONTROL PANEL

<i>key number</i>	<i>description</i>	<i>part number</i>	<i>quantity</i>
1	gasket, panel Supervisor II	02250048-822	1
2	panel, instrument Supervisor II	02250054-853	1
3	panel, cover Supervisor II	02250054-854	1
4	nameplate, Sullair serial number	02250059-318	1
5	decal, LS Super 2 front <b>(I) (II)</b>	02250116-245	1
6	harness, wire sii dlx std pwr	02250105-438	1
7	harness, wire s2 dlx ctl	02250105-439	1
8	block, contact 1nc	250027-125	2
9	switch, per red push/pull e22	250028-588	1
10	control, Supervisor II deluxe <b>(II)</b>	250042-023	1
11	nut, hex f pltd 5/16-18	825305-283	4
12	nut, hex metric m4 x .7	825904-070	8
13	screw, hex ser washer 5/16-18 x 3/4	829705-075	4
14	screw, tc-f pan #8-32 x 1/2	835601-050	8
15	washer, lock ext tooth #8	838401-023	8
16	washer, spr lock-metric pltd m4	838804-090	8
17	rivet, pop 1/8 x 3/8	843102-038	4

**(I)** For detail of Supervisor II panel decal, see *Figure 2-6, Supervisor II Panel* in **Section 2, Description**.


**(II)** Use replacement kit no. 02250143-166 for items 5 and 10 assembled with programming.

---

**PLEASE NOTE: WHEN ORDERING PARTS, INDICATE THE SERIAL NUMBER OF COMPRESSOR**

# Section 8 ILLUSTRATIONS AND PARTS LIST

## 8.15 ENCLOSURE- 100-125HP

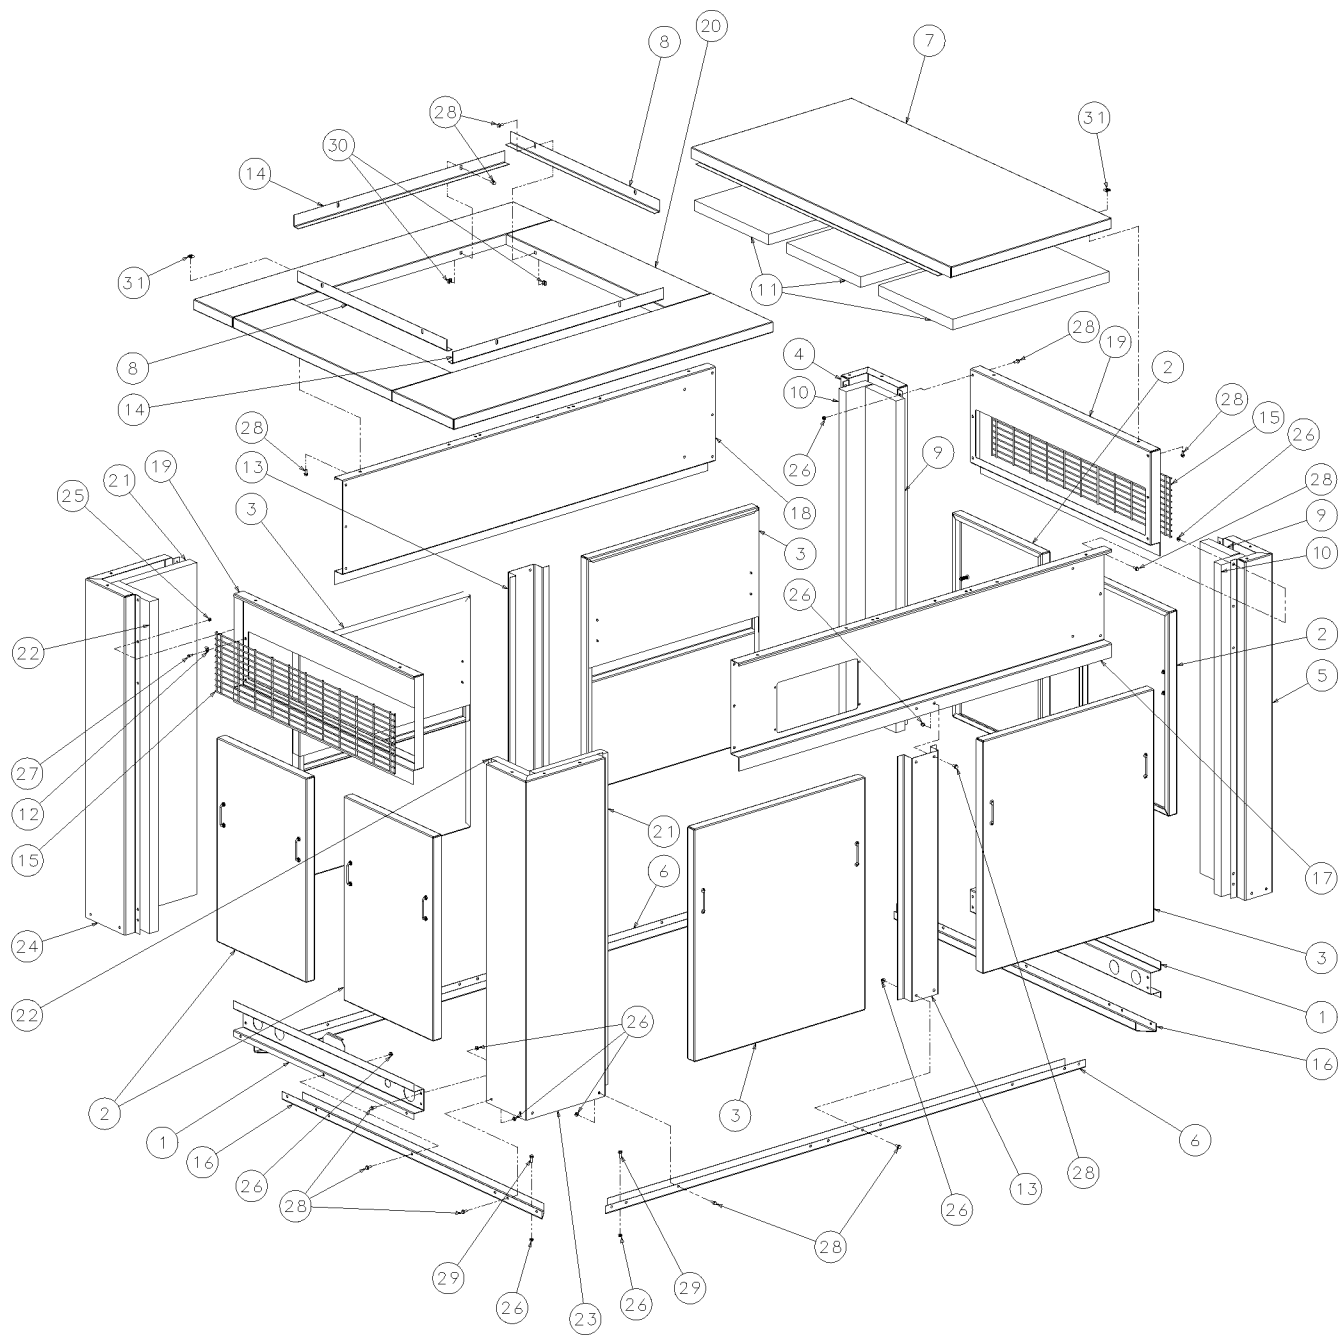

02250138-176R00

## Section 8 ILLUSTRATIONS AND PARTS LIST

### 8.15 ENCLOSURE- 100-125HP


<i>key number</i>	<i>description</i>	<i>part number</i>	<i>quantity</i>
1	channel, assy air/wtr conn.	019603	2
2	panel, assembly end 20/25 enclosure	02250103-205	4
3	panel, assembly side 20/25 enclosure	02250116-349	4
4	panel, cor-encl LS16T	02250135-022	1
5	panel, cor-encl LS16T	02250135-023	1
6	channel, btm sill - LS16T	02250135-026	2
7	panel, roof - LS16T ac	02250135-043	1
8	ang, formed 1.25 x 2.25 x 41.25	02250139-099	2
9	panel, fiberglass 8.5 x 62.5 x 2	02250140-052	2
10	panel, fiberglass 6.0 x 62.5 x 2	02250140-053	2
11	panel, fiberglass 20.5 x 35.25 x 2	02250140-054	3
12	clamp, wire	043194	8
13	support member, 20-25 encl	231516	2
14	angle, formed 1-1/4 x 2-1/4 x 47.5	232876	2
15	grille, enclosure end	249651	2
16	channel, btm sill TS20 & LS25S encl	250022-772	2
17	panel, upper encl front	250041-072	1
18	panel, upper encl rear	250041-073	1
19	panel, upper encl end	250041-074	2
20	roof, aie clr encl assy-20/12	250041-129	1
21	panel, fiberglass 16 x 62.5 x 2	250041-256	2
22	panel, fiberglass 11 x 62.5 x 2	250041-257	2
23	panel, corner encl upper lh	250042-879	1
24	panel, corner encl upper rh	250042-880	1
25	nut, hex f pltd 1/4-20	825304-236	8
26	nut, hex f pltd 5/16-18	825305-283	62
27	screw, hex ser washer 1/4-20 x 3/4	829704-075	8
28	screw, hex ser washer 5/16-18 x 3/4	829705-075	78
29	screw, hex ser washer 5/16-18 x 1	829705-100	10
30	nut, retainer 5/16-18 .092	861405-092	8
31	nut, retainer u 5/16-18 .140	861505-140	16

---

**PLEASE NOTE: WHEN ORDERING PARTS, INDICATE THE SERIAL NUMBER OF COMPRESSOR**

# Section 8 ILLUSTRATIONS AND PARTS LIST

## 8.16 ENCLOSURE- 150-200HP

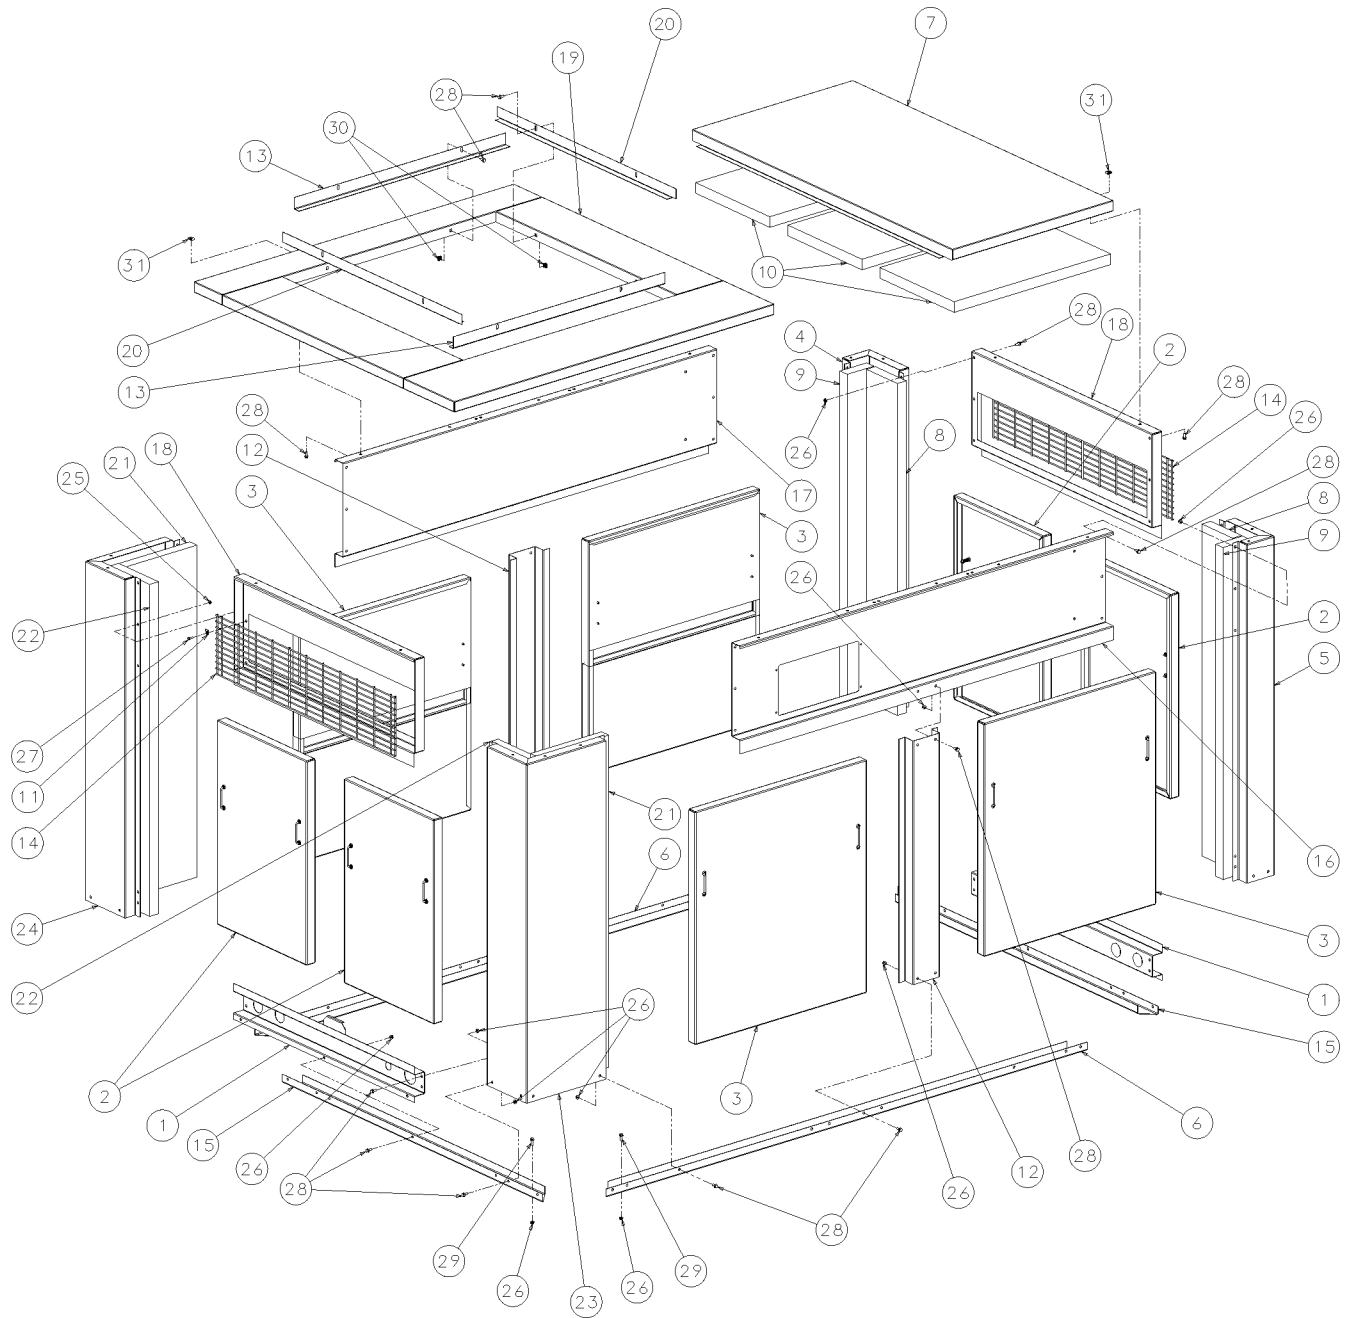

02250134-193R00

## Section 8

# ILLUSTRATIONS AND PARTS LIST

### 8.16 ENCLOSURE- 150-200HP

<i>key number</i>	<i>description</i>	<i>part number</i>	<i>quantity</i>
1	channel, assy air/wtr conn.	019603	2
2	panel, assembly end 20/25 enclosure	02250103-205	4
3	panel, assembly side 20/25 enclosure	02250116-349	4
4	panel, cor-encl LS16T	02250135-022	1
5	panel, cor-encl LS16T	02250135-023	1
6	channel, btm sill - LS16T	02250135-026	2
7	panel, roof - LS16T ac	02250135-043	1
8	panel, fiberglass 8.5 x 62.5 x 2	02250140-052	2
9	panel, fiberglass 6.0 x 62.5 x 2	02250140-053	2
10	panel, fiberglass 20.5 x 35.25 x 2	02250140-054	3
11	clamp, wire	043194	8
12	support member, 20-25 encl	231516	2
13	angle, formed 1-1/4 x 2-1/4 x 47.5	232876	2
14	grille, enclosure end	249651	2
15	channel, btm sill TS20 & LS25S encl	250022-772	2
16	panel, upper encl front	250041-072	1
17	panel, upper encl rear	250041-073	1
18	panel, upper encl end	250041-074	2
19	roof, aie clr encl assy-20/12	250041-129	1
20	angle, encl roof seal-20/12	250041-134	2
21	panel, fiberglass 16 x 62.5 x 2	250041-256	2
22	panel, fiberglass 11 x 62.5 x 2	250041-257	2
23	panel, corner encl upper lh	250042-879	1
24	panel, corner encl upper rh	250042-880	1
25	nut, hex f pltd 1/4-20	825304-236	8
26	nut, hex f pltd 5/16-18	825305-283	62
27	screw, hex ser washer 1/4-20 x 3/4	829704-075	8
28	screw, hex ser washer 5/16-18 x 3/4	829705-075	78
29	screw, hex ser washer 5/16-18 x 1	829705-100	10
30	nut, retainer 5/16-18 .092	861405-092	8
31	nut, retainer u 5/16-18 .140	861505-140	16

---

**PLEASE NOTE: WHEN ORDERING PARTS, INDICATE THE SERIAL NUMBER OF COMPRESSOR**

# Section 8 ILLUSTRATIONS AND PARTS LIST

## 8.17 DECAL GROUP

**⚠ DANGER**




Death or serious injury can occur from inhaling compressed air without using proper safety equipment.  
See OSHA standards on safety equipment.

250027-935

1

**⚠ WARNING**



Do not permit air from this equipment to contact food stuff except in full compliance with FDA Standard 21CFR178.3570, and all other applicable federal, state and local, codes, standards and regulations.

250003-144

2

**⚠ WARNING**




Use equipment grounding connector in accordance with the National Electrical Code, and all Federal State, and Local Codes, to help avoid possible ground fault shock hazard.

49852

3

**⚠ WARNING**



This Unit Is Equipped With An Auto Start Sequence That Will Start The Unit In The Event Of A Power Failure Automatically After The Sump Pressure Drops To 10 PSIG And The Power Is Restored.

When Performing Maintenance Follow Your Company's Prescribed Safety Practices for Electrical Equipment.

250017-903

4

**⚠ DANGER**



Lethal shock hazard inside.  
Disconnect all power at source, before opening or servicing.

49850

5

**⚠ WARNING**



Hot surfaces.  
To avoid burns, keep hands and all parts of the body away.

407408

6

**⚠ WARNING**



Disconnect all power at source, before attempting maintenance or adjustments.

49855

7

**⚠ WARNING**



Do not operate without fan guard in place.

49965

8

## Section 8 ILLUSTRATIONS AND PARTS LIST

### 8.17 DECAL GROUP

<i>key number</i>	<i>description</i>	<i>part number</i>	<i>quantity</i>
1	sign, air breathing (danger)	250027-935	1
2	sign, warning "food grade" lube	250003-144	1
3	sign, warning ground fault	049852	1
4	decal, warning auto start	250017-903	1
5	sign, danger electrocution	049850	1
6	sign, warning hot surfaces	407408	3
7	sign, warning sever - fan	049855	2
8	sign, warning sever-fan port	049965	2







(Continued on page 93)

---

**PLEASE NOTE: WHEN ORDERING PARTS, INDICATE THE SERIAL NUMBER OF COMPRESSOR**

# Section 8 ILLUSTRATIONS AND PARTS LIST

## 8.17 DECAL GROUP

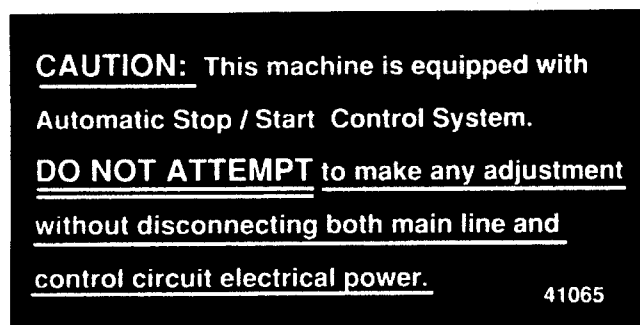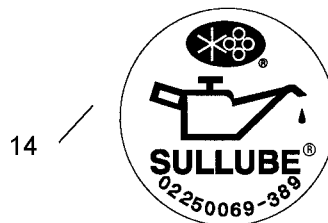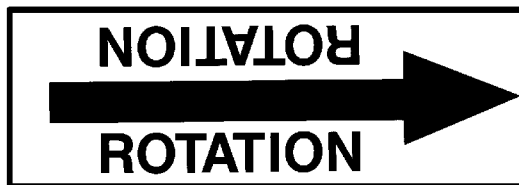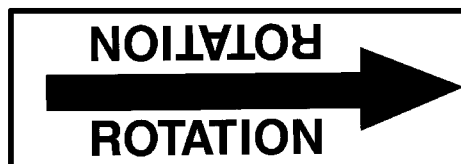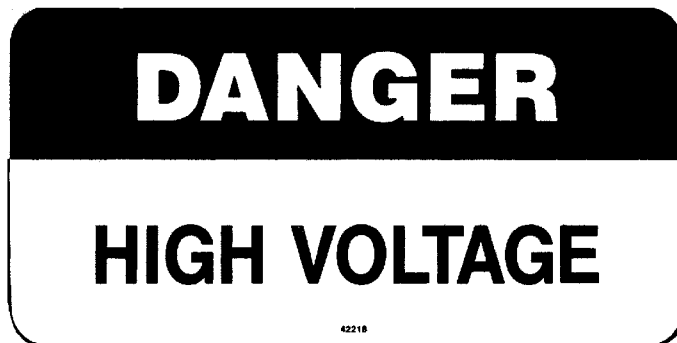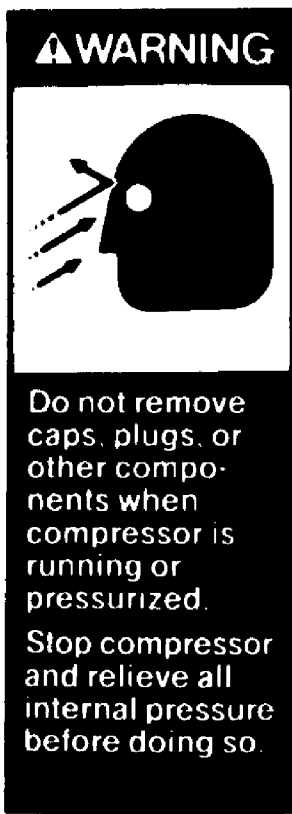

## Section 8 ILLUSTRATIONS AND PARTS LIST

### 8.17 DECAL GROUP (CONTINUED)

<i>key number</i>	<i>description</i>	<i>part number</i>	<i>quantity</i>
9	sign, warning "compressor fluid fill cap"	049685	1
10	decal, danger high voltage	042218	1
11	decal, warning mixing fluids	02250110-891	1
12	decal, rotation	250021-286	1
13	decal, rotation	250021-564	1
14	decal, fluid Sullube	02250069-389	1
15	decal, water inlet-outlet	049873	1
16	decal, water in	250019-107	1
17	decal, water out	250019-108	1
18	decal, water drain	250022-810	1
19	decal, autostart	041065	1
20	decal, fork lifting	241814	4



(Continued on page 95)

---

**PLEASE NOTE: WHEN ORDERING PARTS, INDICATE THE SERIAL NUMBER OF COMPRESSOR**

# Section 8 ILLUSTRATIONS AND PARTS LIST

## 8.17 DECAL GROUP

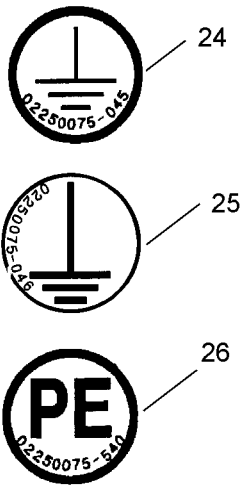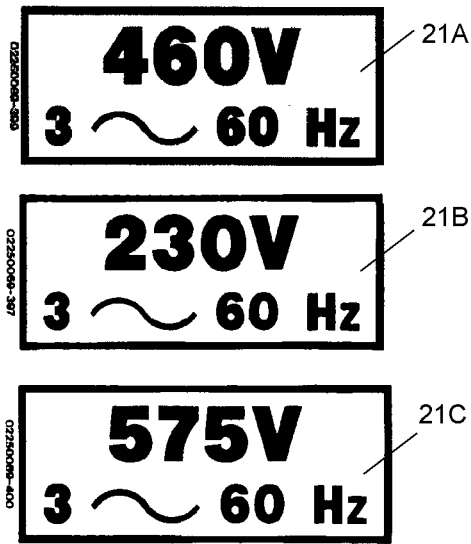

23

250038-457	1 CR	1 TR	LINE PRESS	INLET
	2 CR	2 TR	DISCH PRESS	T1
	3 CR	3 TR	WATER PRESS	T2
	4 CR	4 TR	SEPARATOR	T3
	5 CR	1 M	SPIRAL VALVE	T4
	6 CR	2 M	INLET VALVE	T5
	1 FU	3 M	CIS VALVE	T6
	2 FU	4 M	OIL PRESS	T3
	3 FU	HCR	OIL FILTER	T4

27

# LS-16T



## Section 8 ILLUSTRATIONS AND PARTS LIST

### 8.17 DECAL GROUP (CONTINUED)


<i>key number</i>	<i>description</i>	<i>part number</i>	<i>quantity</i>
21A	decal, V 460/3/60 international	02250069-399	1
21B	decal, V 230/3/60 international	02250069-397	1
21C	decal, V 575/3/60 international	02250069-400	1
22	decal, ISO 9001	02250057-624	1
23	decal, electrical component ID	250038-457	1
24	decal, protective earth ground	02250075-045	1
25	decal, earth ground	02250075-046	1
26	decal, PE designation	02250075-540	1
27	decal, LS-16T black 4" ht.	02250071-282	1
28	decal, Sullair logo 4 x 32" black	02250059-060	1

---

**PLEASE NOTE: WHEN ORDERING PARTS, INDICATE THE SERIAL NUMBER OF COMPRESSOR**

# Section 8 ILLUSTRATIONS AND PARTS LIST

## 8.18 DECAL LOCATIONS- OPEN AIR-COOLED

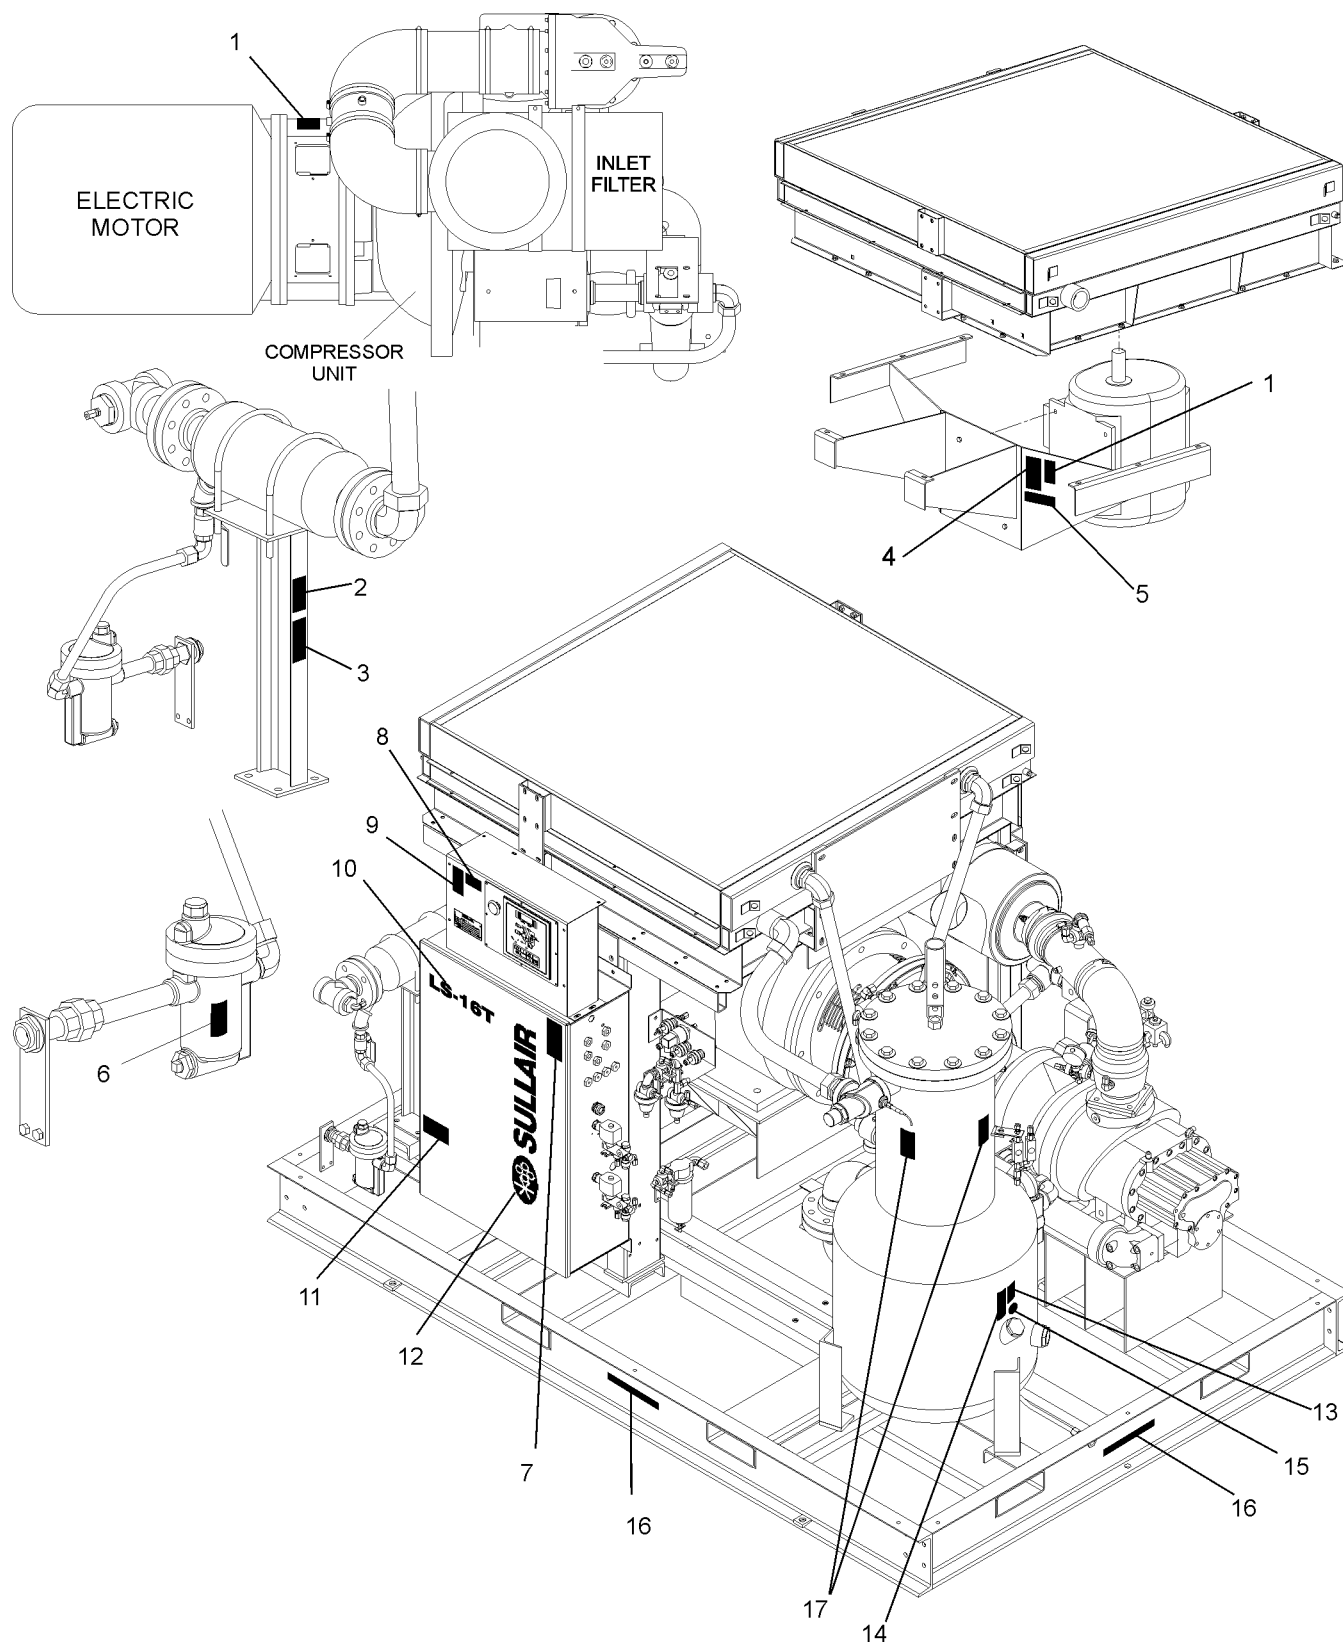

## Section 8 ILLUSTRATIONS AND PARTS LIST

### 8.18 DECAL LOCATIONS- OPEN AIR-COOLED

<i>key number</i>	<i>description</i>	<i>part number</i>	<i>quantity</i>
1	sign, warning sever-fan port	049965	2
2	sign, air breathing (danger)	250027-935	1
3	sign, warning "food grade" lube	250003-144	1
4	sign, warning sever - fan	049855	2
5	decal, rotation	250021-564	1
6	decal, water drain	250022-810	1
7	sign, danger electrocution	049850	1
8	decal, autostart	041065	1
9	decal, warning auto start	250017-903	1
10	decal, LS20T black 4" ht.	02250071-287	1
11	decal, ISO 9001	02250057-624	1
12	decal, Sullair logo 4 x 32" black	02250059-060	1
13	decal, warning mixing fluids	02250110-891	1
14	sign, warning "compressor fluid fill cap"	049685	1
15	decal, fluid Sullube	02250069-389	1
16	decal, fork lifting	241814	4
17	sign, warning hot surfaces	407408	3



---

**PLEASE NOTE: WHEN ORDERING PARTS, INDICATE THE SERIAL NUMBER OF COMPRESSOR**

# Section 8 ILLUSTRATIONS AND PARTS LIST

## 8.19 ENCLOSURE DECALS

### AIR-COOLED MODELS

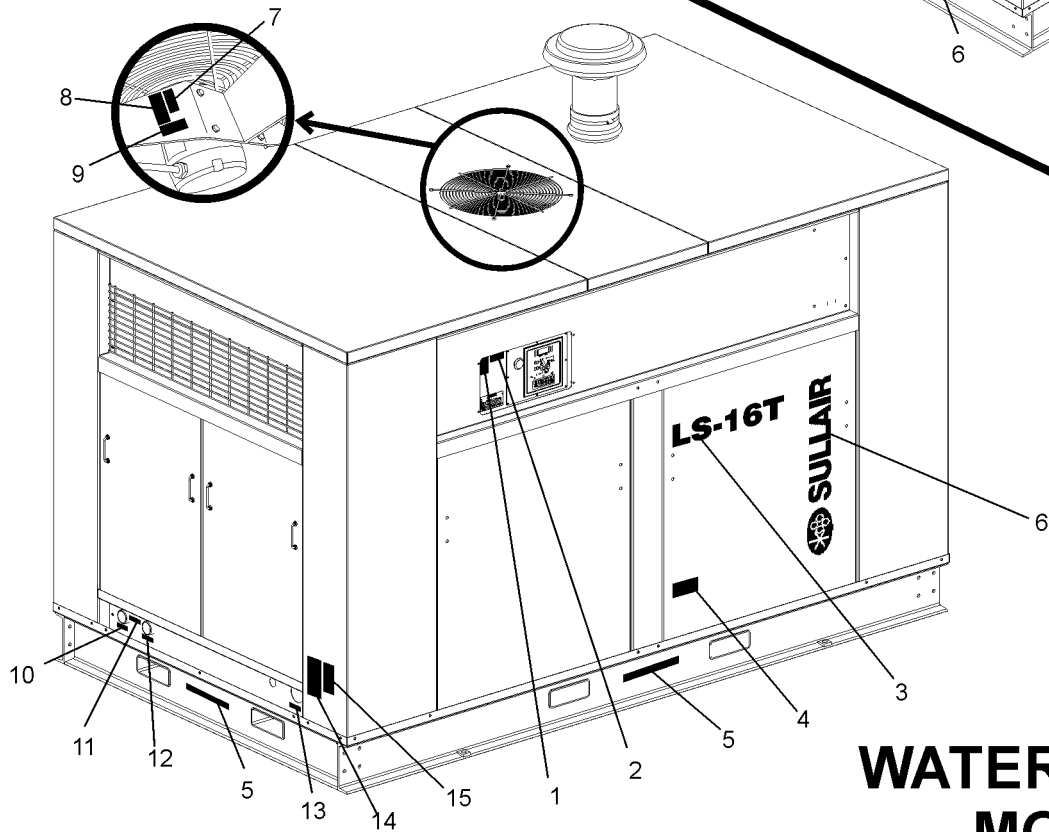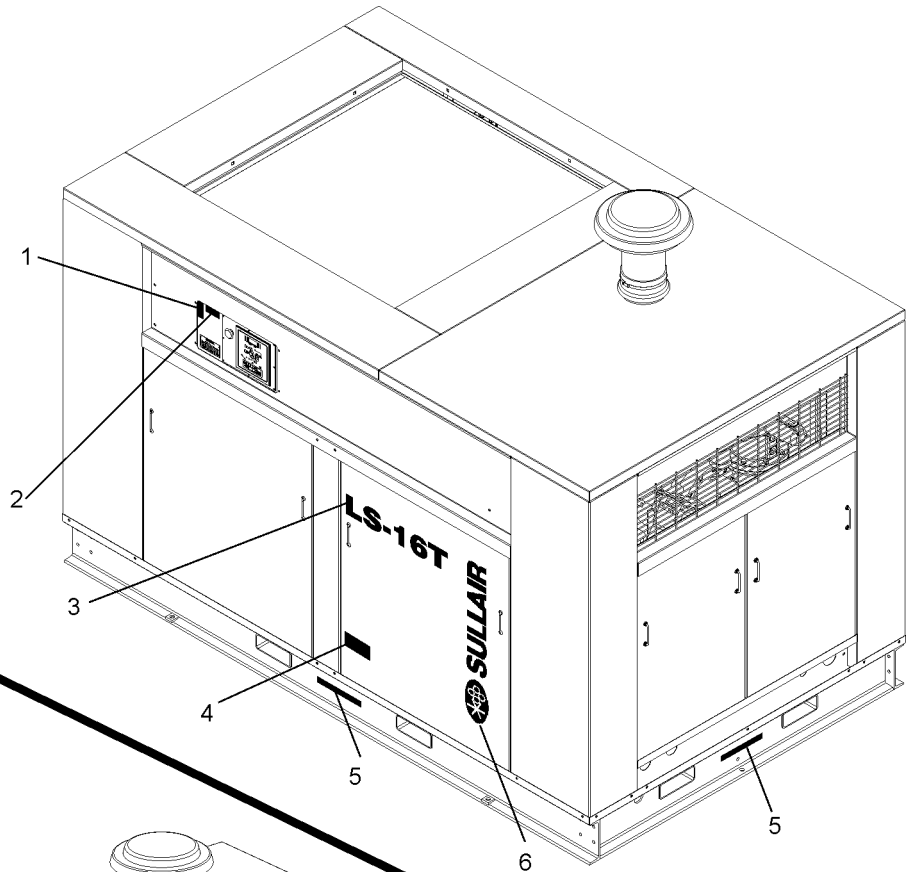

### WATER-COOLED MODELS

## Section 8 ILLUSTRATIONS AND PARTS LIST

### 8.19 ENCLOSURE DECALS


<i>key number</i>	<i>description</i>	<i>part number</i>	<i>quantity</i>
1	decal, warning auto start	250017-903	1
2	decal, autostart	041065	1
3	decal, LS-16T black 4" ht.	02250071-282	1
4	decal, ISO 9001	02250057-624	1
5	decal, fork lifting	241814	4
6	decal, Sullair logo 4 x 32" black	02250059-060	1
7	sign, warning sever-fan port	049965	2
8	sign, warning "compressor fluid fill cap"	049685	1
9	decal, rotation	250021-564	1
10	decal, water in	250019-107	1
11	decal, water inlet-outlet	049873	1
12	decal, water out	250019-108	1
13	decal, water drain	250022-810	1
14	sign, warning "food grade" lube	250003-144	1
15	sign, air breathing (danger)	250027-935	1

---

**PLEASE NOTE: WHEN ORDERING PARTS, INDICATE THE SERIAL NUMBER OF COMPRESSOR**

# Section 8 ILLUSTRATIONS AND PARTS LIST

## 8.20 DECAL LOCATIONS- CONTROL BOX

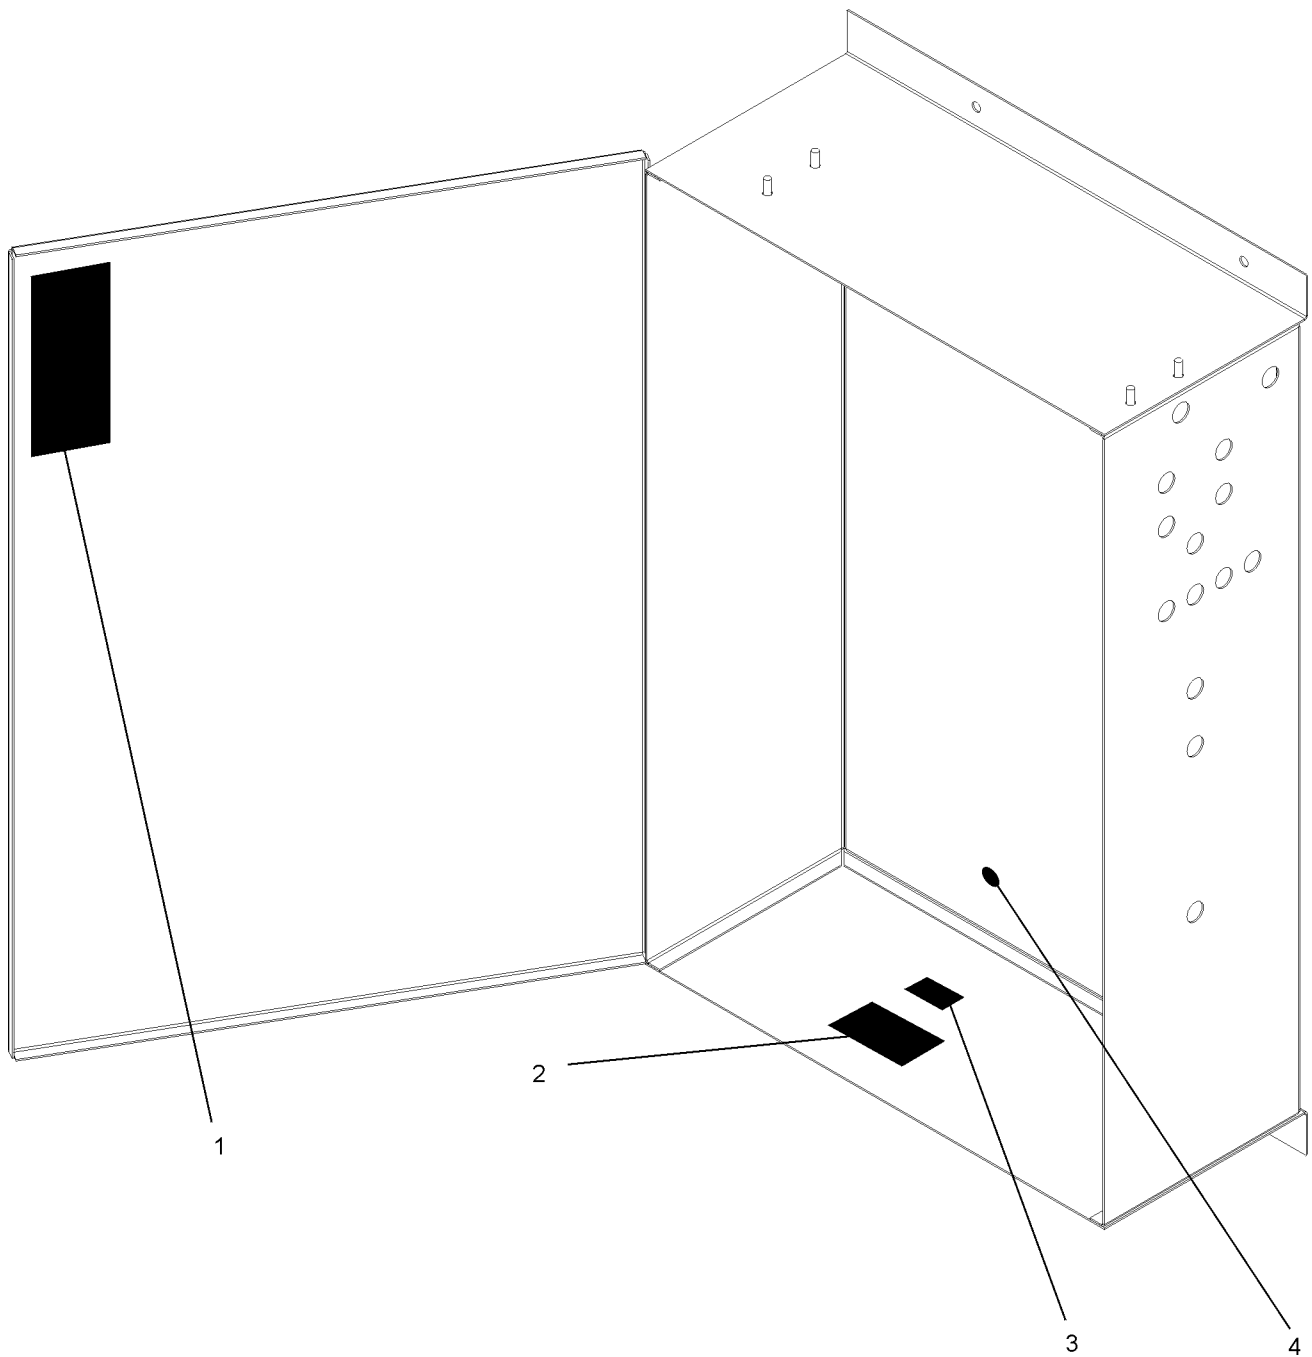

## Section 8 ILLUSTRATIONS AND PARTS LIST

### 8.20 DECAL LOCATIONS- CONTROL BOX

<i>key number</i>	<i>description</i>	<i>part number</i>	<i>quantity</i>
1	sign, warning ground fault	049852	1
2	decal, danger high voltage	042218	1
3	decal, V 460/3/60 international (I)	02250069-399	1
4	decal, earth ground	02250075-046	1

(I) Due to custom voltage requests, voltage decal may vary. For positive identification of machine voltage decal, consult Sullair Factory with serial number of compressor.


---

**PLEASE NOTE: WHEN ORDERING PARTS, INDICATE THE SERIAL NUMBER OF COMPRESSOR**



# Section 8 ILLUSTRATIONS AND PARTS LIST

## 8.22 WIRING DIAGRAM- LS16T AIR-COOLED SSRV/ VFD COOLING FAN

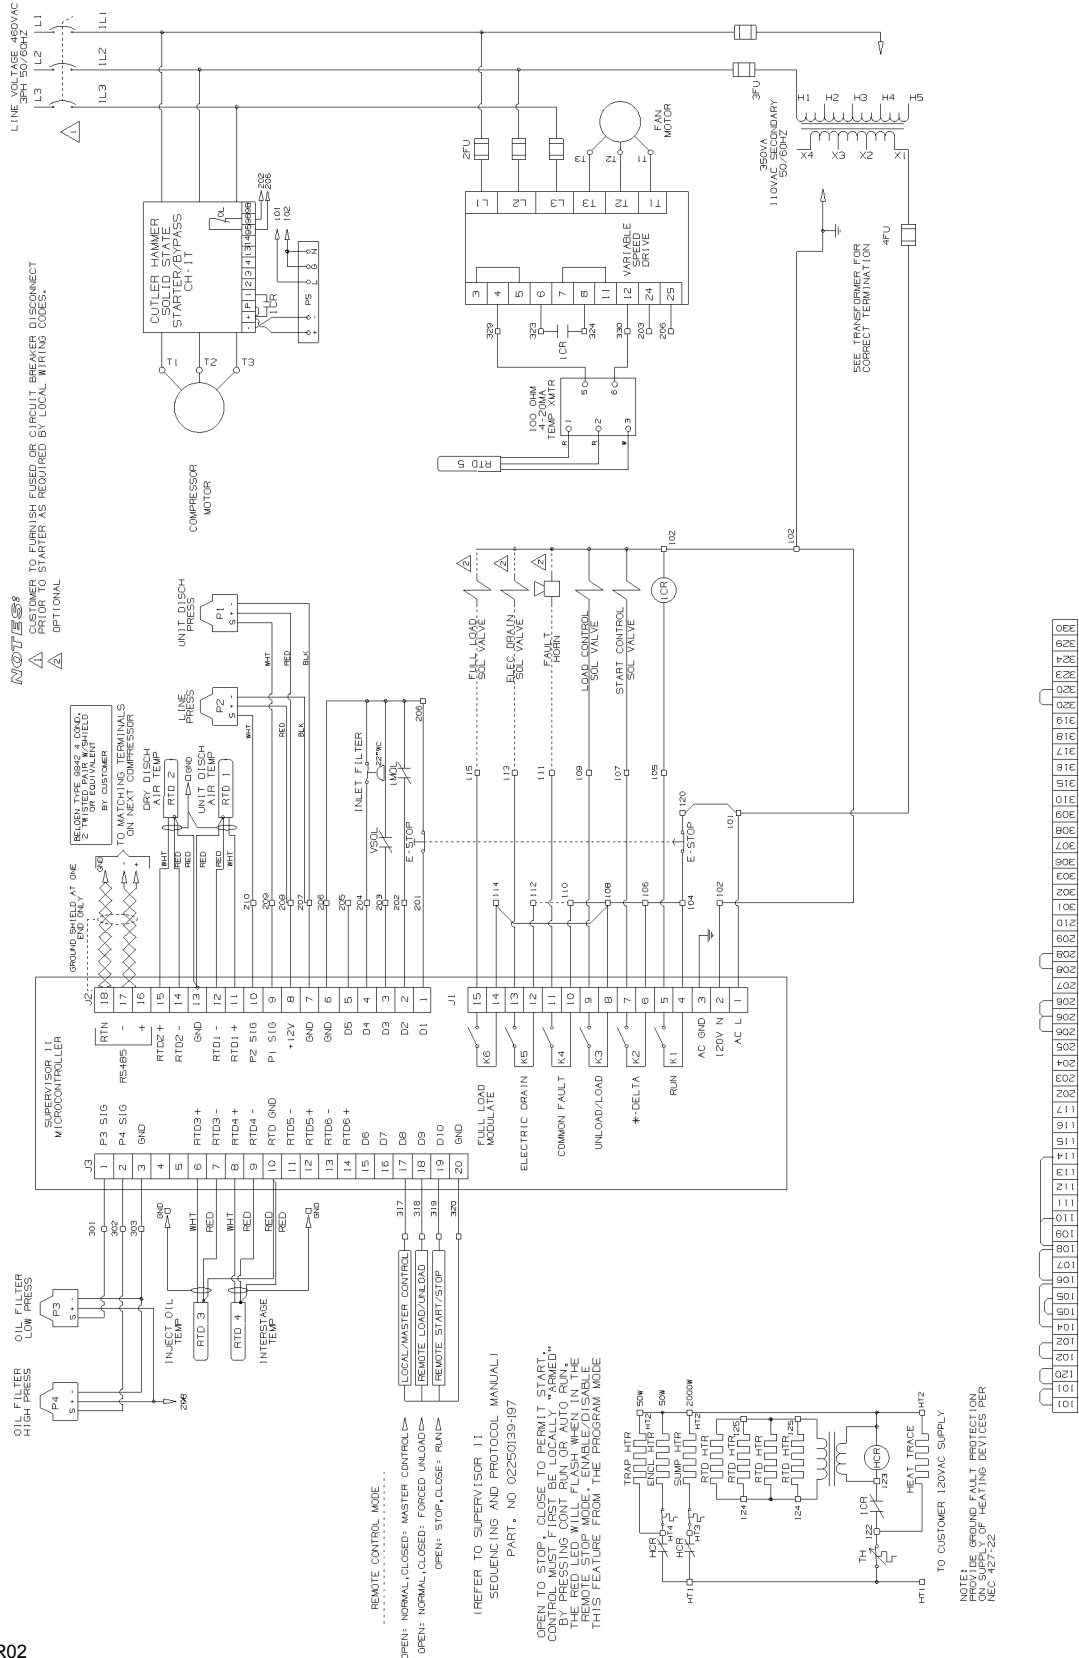


02250135-132R02

# NOTES



# WORLDWIDE SALES AND SERVICE

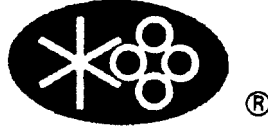

## **SULLAIR ASIA, LTD.**

Sullair Road, No. 1  
Chiwan, Shekou  
Shenzhen, Guangdong PRV.  
PRC POST CODE 518068  
Telephone: 755-6851686  
Fax: 755-6853473  
[www.sullair-asia.com](http://www.sullair-asia.com)

## **SULLAIR EUROPE, S.A.**

Zone Des Granges BP 82  
42602 Montbrison Cedex, France  
Telephone: 33-477968470  
Fax: 33-477968499  
[www.sullaireurope.com](http://www.sullaireurope.com)

## **SULLAIR CORPORATION**

3700 East Michigan Boulevard  
Michigan City, Indiana 46360 U.S.A.

[www.sullair.com](http://www.sullair.com)

Telephone: 1-800-SULLAIR (U.S.A. Only)  
or 1-219-879-5451

Fax: (219) 874-1273

### **PARTS DEPARTMENT**

Fax: (219) 874-1835

[www.sullair.com/parts.shtm](http://www.sullair.com/parts.shtm)

### **SERVICE DEPARTMENT**

Fax: (219) 874-1205

[www.sullaircompressors.com](http://www.sullaircompressors.com)



Printed in the U.S.A.

Specifications Subject To  
Change Without Prior Notice  
E03EP